



**Read and save these instructions.
This manual to be left with the equipment.**

INSTALLATION MANUAL

Steam humidifier
Condair **RS II**

Thank you for choosing Condair

Installation date (MM/DD/YYYY):

Commissioning date (MM/DD/YYYY):

Site:

Model:

Serial number:

Contact

Condair Ltd.
2740 Fenton Road, Ottawa, Ontario K1T3T7
TEL: 1.866.667.8321, FAX: 613.822.7964
EMAIL: na.info@condair.com, WEBSITE: www.condair.com

Proprietary Notice

This document and the information disclosed herein are proprietary data of Condair Ltd. Neither this document, nor the information contained herein shall be reproduced, used, or disclosed to others without the written authorization of Condair Ltd., except to the extent required for installation or maintenance of recipient's equipment.

Liability Notice

Condair Ltd. does not accept any liability due to incorrect installation or operation of the equipment or due to the use of parts/components/equipment that are not authorized by Condair Ltd.

Copyright Notice

© Condair Ltd. All rights reserved.

Technical modifications reserved

Contents

| | | |
|----------|--|-----------|
| 1 | Introduction | 5 |
| 1.1 | Before You Begin | 5 |
| 1.2 | Notes on the Installation Manual | 5 |
| 2 | For Your Safety | 7 |
| 3 | Product Overview | 9 |
| 3.1 | Models Overview | 9 |
| 3.1.1 | Units Small ("S") and Medium ("M") | 9 |
| 3.1.2 | Units Large ("L") | 10 |
| 3.2 | Identification of the Unit | 11 |
| 3.3 | Product Designation | 12 |
| 3.4 | Options | 13 |
| 3.5 | Accessories | 14 |
| 4 | Receiving and Storage | 15 |
| 4.1 | Inspection | 15 |
| 4.2 | Storage and Transportation | 15 |
| 5 | Mounting and Installation Work | 16 |
| 5.1 | Safety Notes on Mounting and Installation Work | 16 |
| 5.2 | Installation Overviews | 17 |
| 5.3 | Mounting the Unit | 19 |
| 5.3.1 | Notes on Locating the Unit | 19 |
| 5.3.2 | Mounting the Humidifier | 21 |
| 5.3.2.1 | Standard Mounting | 21 |
| 5.3.2.2 | Wall Support Mounting (option) | 24 |
| 5.3.3 | Inspecting the Installed Unit | 26 |
| 5.4 | Steam Installation | 27 |
| 5.4.1 | Overview Steam Installation for Duct Humidification | 27 |
| 5.4.2 | Installing the Steam Distributors | 27 |
| 5.4.3 | Overview Steam Installation for Direct Room Humidification | 28 |
| 5.4.4 | Positioning and Mounting the Blower Packs | 29 |
| 5.4.5 | Installing the Steam and Condensate lines | 30 |
| 5.4.6 | Common Steam and Condensate Line Errors | 35 |
| 5.5 | Inspecting the Steam Installation | 36 |
| 5.6 | Water Installation | 37 |
| 5.6.1 | Overviews Water Installation | 37 |
| 5.6.2 | Overviews Water Installation (with RS-RO option installed) | 38 |
| 5.6.3 | Notes on Water Installation | 40 |
| 5.6.3.1 | Water Supply (Potable, RO or DI water) | 40 |
| 5.6.3.2 | Additional Requirements for RS-RO Option Water Supply | 41 |
| 5.6.3.3 | Water Drain | 42 |
| 5.6.4 | Inspecting the Water Installation | 42 |
| 5.7 | Notes on Humidity Control Systems/Humidity Control | 44 |
| 5.7.1 | Control Device Locations | 44 |
| 5.7.2 | Admissible Control Signals | 44 |

| | | |
|----------|--|-----------|
| 5.8 | Electrical Installation | 45 |
| 5.8.1 | Notes on Electrical Installation | 45 |
| 5.8.2 | Wiring Diagram Condair RS - Small and Medium Units | 46 |
| 5.8.3 | Wiring Diagram Condair RS - Large Units | 47 |
| 5.8.4 | Principle Wiring Diagram Device Interconnected Systems | 48 |
| 5.8.5 | Installation Work External Connections | 50 |
| 5.8.6 | Connecting multiple units (device interconnected system) | 54 |
| 5.8.7 | Checking screws on high-voltage components | 56 |
| 5.8.8 | Performance data / Fuses "F3" Voltage Supply | 57 |
| 5.8.9 | Inspecting the Electrical Installation | 58 |
| 6 | Appendix | 59 |
| 6.1 | Unit Dimensions | 59 |

1 Introduction

1.1 Before You Begin

Thank you for purchasing the **Condair RS steam humidifier**.

The Condair RS steam humidifier incorporates the latest technical advances and meets all recognized safety standards. Nevertheless, improper use of the Condair RS steam humidifier may result in danger to the user or third parties and/or damage to property.

To ensure a safe, proper, and economical operation of the Condair RS steam humidifier, please observe and comply with all information and safety instructions contained in the present documentation as well as in the separate documentations of the components installed in the humidification system.

If you have questions after reading this documentation, please contact your Condair representative. They will be glad to assist you.

1.2 Notes on the Installation Manual

Limitation

The subject of this installation manual is the Condair RS steam humidifier in its different versions. The various options and accessories are only described insofar as is necessary for proper operation of the equipment. Further information on options and accessories can be obtained in their respective instructions.

This installation manual is restricted to the **installation** of the Condair RS steam humidifier and is meant for **well trained personnel being sufficiently qualified for their respective work**.

This installation manual is supplemented by various separate items of documentation (operation manual, spare parts list, etc.), which are included in the delivery as well. Where necessary, appropriate cross-references are made to these publications in the installation manual.

Symbols used in this manual



CAUTION!

The catchword "CAUTION" used in conjunction with the general caution symbol designates notes in this installation manual that, if neglected, may cause **damage and/or malfunction of the unit or damage to property**.



WARNING!

The catchword "WARNING" used in conjunction with the general caution symbol designates safety and danger notes in this installation manual that, if neglected, may cause **injury to persons**.



DANGER!

The catchword "DANGER" used in conjunction with the general caution symbol designates safety and danger notes in this installation manual that, if neglected, may lead to **severe injury or even death of persons**.

Safekeeping

Please safeguard this installation manual in a safe place, where it can be immediately accessed. If the equipment changes hands, the documentation must be passed on to the new operator.

If the documentation gets misplaced, please contact your Condair representative for replacement.

2 For Your Safety

General

Every person, who is in charge of the installation work on the Condair RS must have read and understood this installation manual and the Condair RS operation manual before carrying out any work.

Knowing and understanding the contents of the installation manual and the operation manual is a basic requirement for protecting personnel against any kind of danger, to prevent faulty operation, and to operate the unit safely and correctly.

All icons, signs and markings applied to the Condair RS must be observed and kept in readable state.

Qualification of personnel

All installation work described in this installation manual **may only be carried out by specialists who are well trained and adequately qualified and are authorized by the customer.**

For safety and warranty reasons any action beyond the scope of this manual must be carried out only by qualified personnel authorized by Condair.

It is assumed that all persons working with the Condair RS are familiar and comply with the appropriate regulations on work safety and the prevention of accidents.

Intended use

The Condair RS steam humidifier is intended exclusively for air humidification via a steam distributor or a blower pack approved by Condair within specified operating conditions (see Condair RS operation manual). Any other type of application, without the written consent of Condair, is considered as not conforming with the intended purpose and may lead to hazardous operation of the Condair RS and will void any warranty.

Operation of the equipment in the intended manner requires **that all the information contained in this installation manual are observed (in particular the safety instructions).**

Danger that may arise from the Condair RS:



DANGER!
Danger of electric shock!

The Condair RS is mains powered. Live parts may be exposed when the unit is open. Touching live parts may cause severe injury or danger to life.

Prevention: The Condair RS must be connected to the mains only after all mounting and installation work has been completed, all installations have been checked for correct workmanship and the unit is closed and properly locked.

Preventing unsafe operation

All persons working with the Condair RS are obliged to report any alterations to the unit, modifications, or unsafe issues that may affect safety to the owner without delay and to **secure the Condair RS against accidental power-up**.

Prohibited modifications to the unit

No modifications must be undertaken on the Condair RS without the express written consent of Condair.

For the replacement of defective components use exclusively **original accessories and spare parts** available from your Condair representative.

3 Product Overview

3.1 Models Overview

Condair RS steam humidifiers are available in **different housing sizes (S, M and L)** with **different heating voltages** and **steam capacities ranging from 10 lbs/hr up to a maximum of 180 lbs/hr (5 ... 80 kg/h)**.

3.1.1 Units Small ("S") and Medium ("M")

| Housing size | Condair RS | 208 V/1~ | 240 V/1~ | 480 V/1~ | 600 V/1~ | 208 V/3~ | 240 V/3~ | 480 V/3~ | 600 V/3~ |
|--------------|------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|
| | | lbs/hr (kg/h) | lbs/hr (kg/h) | lbs/hr (kg/h) | lbs/hr (kg/h) | lbs/hr (kg/h) | lbs/hr (kg/h) | lbs/hr (kg/h) | lbs/hr (kg/h) |
| S | 10 | 10.9 (4.9) | 10.9 (4.9) | 9.7 (4.4) | 11.4 (5.2) | 10.9 (4.9) | 10.9 (4.9) | 11.3 (5.1) | 11.1 (5.0) |
| | 15 | 15.9 (7.2) | 14.5 (6.6) | 14.1 (6.4) | 14.7 (6.7) | 15.9 (7.2) | 14.5 (6.6) | 14.6 (6.6) | 17.6 (8.0) |
| | 20 | 21.2 (9.6) | 21.2 (9.6) | 18.8 (8.5) | 19.6 (8.9) | 21.2 (9.6) | 21.2 (9.6) | 19.4 (8.8) | 22.8 (10.3) |
| M | 30 | 31.8 (14.4) | 31.8 (14.4) | 31.5 (14.3) | 31.4 (14.2) | 28.8 (13.1) | 31.8 (14.4) | 31.5 (14.3) | 31.4 (14.2) |
| | 45 | — | — | — | — | 47.7 (21.6) | 47.9 (21.7) | 45.2 (20.5) | 47.1 (21.4) |
| | 65 | — | — | — | — | 71.6 (32.5) | 71.9 (32.6) | 63.0 (28.6) | 70.6 (32.0) |
| | 90 | — | — | — | — | — | — | 94.6 (42.9) | 94.3 (42.8) |

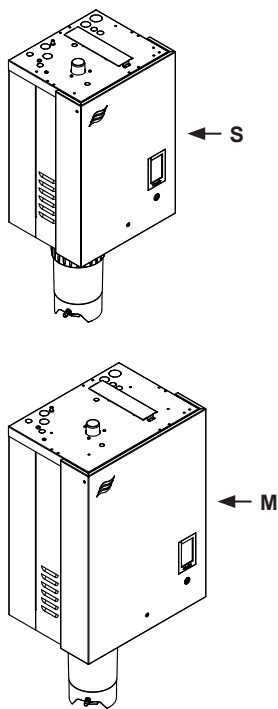


Fig. 1: Overview units small ("S") and medium ("M")

3.1.2 Units Large ("L")

| Housing size | Condair RS | 208 V/1~ | 240 V/1~ | 480 V/1~ | 600 V/1~ | 208 V/3~ | 240 V/3~ | 480 V/3~ | 600 V/3~ |
|--------------|------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|---------------|
| | | lbs/hr (kg/h) | lbs/hr (kg/h) | lbs/hr (kg/h) | lbs/hr (kg/h) | lbs/hr (kg/h) | lbs/hr (kg/h) | lbs/hr (kg/h) | lbs/hr (kg/h) |
| L | ...90... | — | — | — | — | 95.4 (43.3) | 94.6 (42.9) | — | — |
| | ...130... | — | — | — | — | 143.2 (65.0) | 141.8 (64.3) | 126.0 (57.2) | 141.2 (64.1) |
| | ...180... | — | — | — | — | — | — | 189.2 (85.8) | 188.6 (85.5) |

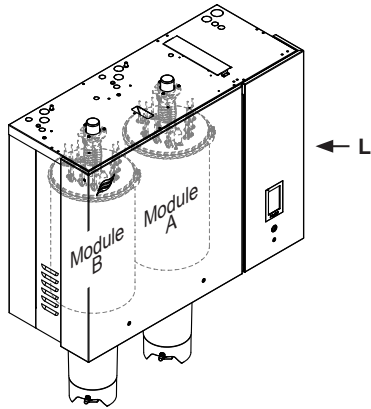


Fig. 2: Overview units large ("L")

3.2 Identification of the Unit

The identification of the unit is found on the specification label.

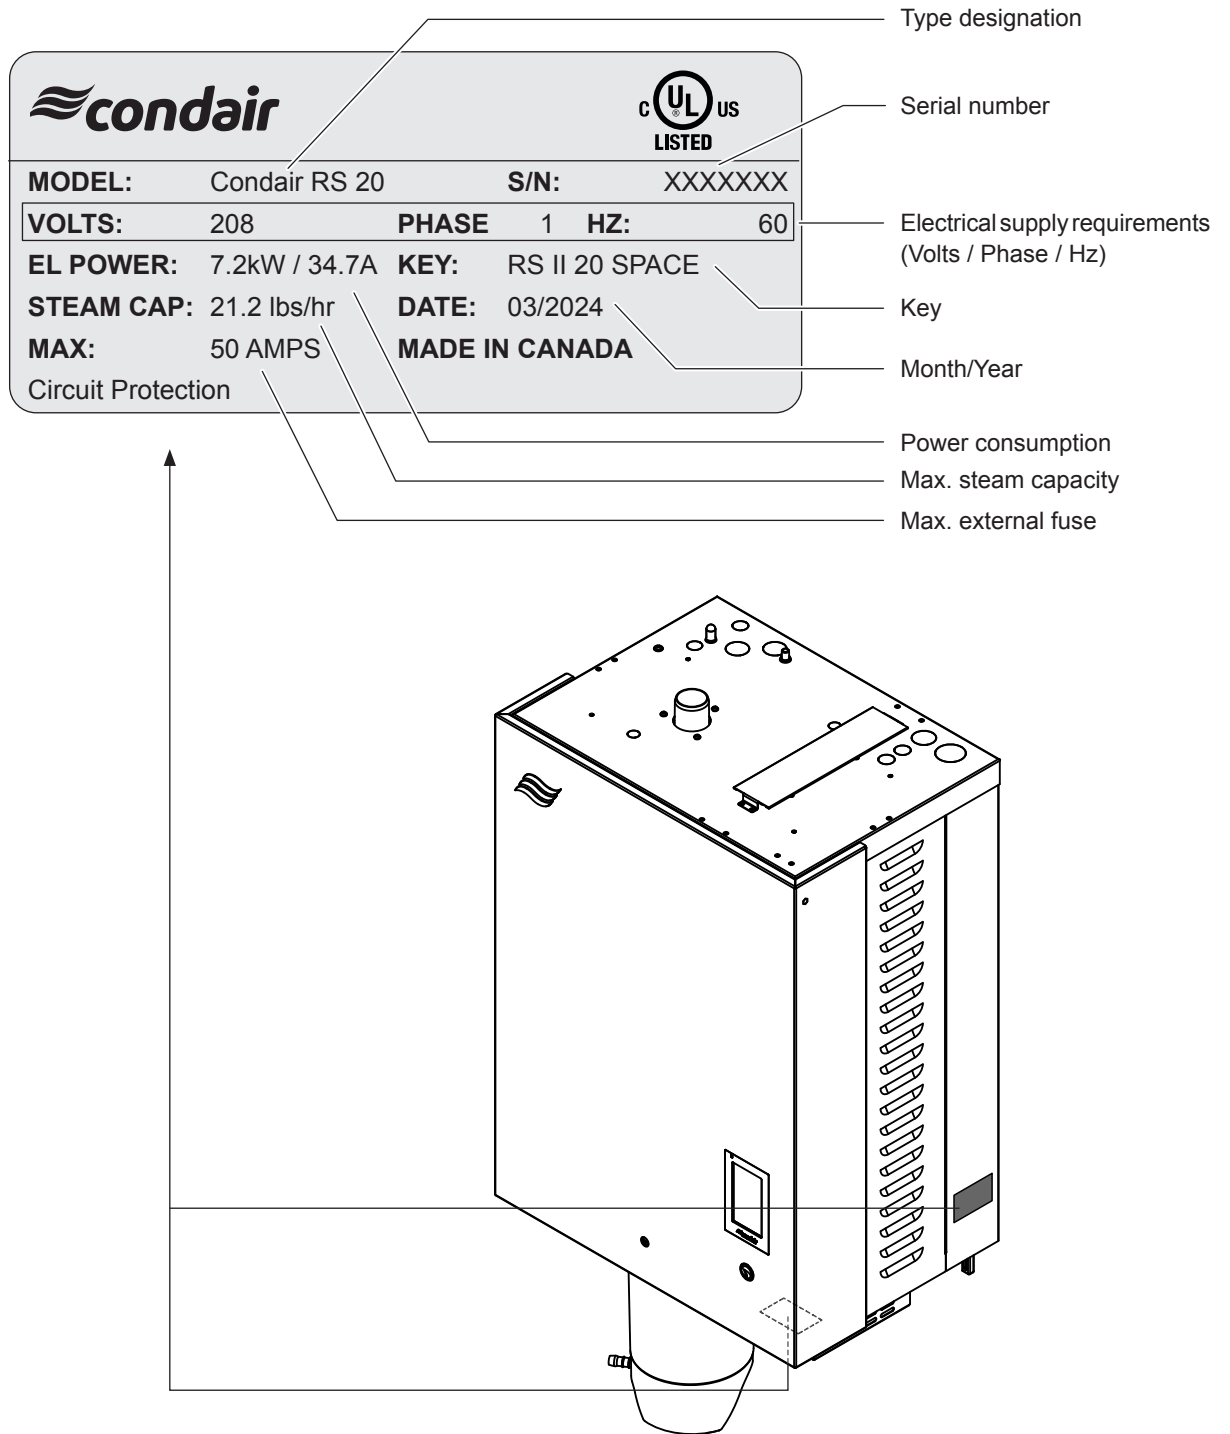



Fig. 3: Specification label location and details (right side and underside of unit)

3.3 Product Designation

The product designation and the most important unit data are found on the specification label fixed on the right side of the Condair RS.

Notes regarding the specification label can be found in the Condair RS operation manual.

Key model designation

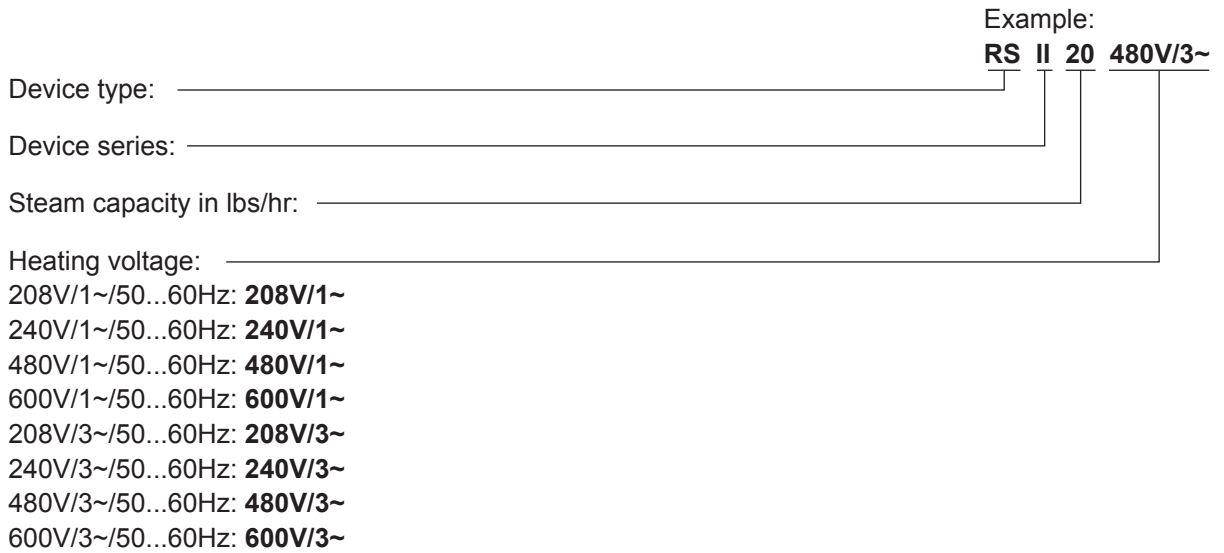

3.4 Options

| | Condair RS | | | | | | | | | |
|--|------------------|----|----|------------------|----|----|--------|-----------------|-----|-----|
| | Single units "S" | | | Single units "M" | | | | Large units "L" | | |
| | 10 | 15 | 20 | 30 | 45 | 65 | 90 | 90 | 130 | 180 |
| Scale tank Provides a separate reservoir underneath the steam cylinder for scale collection. The addition of this option reduces maintenance time significantly. Minerals removed from the water during steam production will collect in the scale reservoir rather than in the tank. For the double tank humidifiers (RS 90, 130 and 180), order two for each humidifier. | 1x SC | | | | | | 2x SC | | | |
| Built-on Blower Pack For direct dispersion into a conditioned environment. | 1x BOBP | | | | | | N/A | | | |
| Remote operating and fault indication PCB with relay contacts for the connection of remote displays for "Error", "Service", "Running", "Unit On" and "Furnace". | 1xRFI | | | | | | | | | |
| LonWorks board Supplementary board to connect the Condair RS to a building management system via LonWorks. | 1x LON | | | | | | | | | |
| IoT board Supplementary board to connect the Condair RS to a IoT system. | 1xIoT | | | | | | | | | |
| Mounting bars Provides two mounting bars which fit into each other for wall mounting. One bar is fastened to the humidifier, the other bar is fastened to the wall. The unit can then be "hung" onto the wall by engaging the two mounting bars. Note: without this option, the unit may still be wall mounted using the keyhole cutouts on the back of humidifier housing. | 1x MP-S | | | 1x MP-M | | | | 1x MP-L | | |
| Pressure compensation kit Provides extension for the fill cup to overcome back pressure (including duct static pressure) in excess of 5-1/2" water column. Longer hoses included. Two required for double tank humidifiers. | 1x OPS | | | | | | 2x OPS | | | |
| RS-RO Secondary inlet valve for dedicated drain water cooling using potable water. This option is used when treated RO/DI water is being supplied to the steam tank. | 1xRS-RO | | | | | | | | | |

3.5 Accessories

| | Condair RS | | | | | | | | | | |
|--|---|----|----|------------------|----|----|----|-----------------|-----|-----|--|
| | Single units "S" | | | Single units "M" | | | | Large units "L" | | | |
| | 10 | 15 | 20 | 30 | 45 | 65 | 90 | 90 | 130 | 180 | |
| Pure water system Condair RO-E Pure water system for operating the Condair RS with RO water. | For the correct size of the Condair RO-E pure water system, please contact the Condair representative | | | | | | | | | | |

4 Receiving and Storage

4.1 Inspection

Upon receiving:

- Inspect shipping boxes for damage.
Any damages of the shipping boxes must be reported to the shipping company without delay.
- Check packing slip to ensure all parts have been delivered.
All material shortages are to be reported to your Condair supplier within 48 hours after receipt of the goods. Condair Ltd. assumes no responsibility for any material shortages beyond this period.
The standard delivery includes the Condair RS steam humidifier with the options ordered (see [Section 3.4](#)) packed in cardboard boxes along with the installation manual (this document), operation manual and spare parts list.
- Unpack the parts/components and check for any damage.
If parts/components are damaged, notify the shipping company immediately.
- Check whether the components are suitable for installation on your site according to model key shown on the specification label.

4.2 Storage and Transportation

Storing

Until installation store the Condair RS in its original packaging in a protected area meeting the following requirements:

- Room temperature: 41 ... 104 °F (5 ... 40 °C)
- Room humidity: 10 ... 75 %rh

Transportation

For optimum protection always transport the unit and components in their original packaging and use appropriate lifting/transporting devices.



WARNING!

It is the customer's responsibility to ensure that operators are trained in handling heavy goods and that the operators comply with the appropriate regulations on work safety and the prevention of accidents.

Packaging

Keep the original packaging of the components for later use.

In case you wish to dispose of the packaging, observe the local regulations on waste disposal. Please recycle packaging where possible.

5 Mounting and Installation Work

5.1 Safety Notes on Mounting and Installation Work

Qualification of personnel

All mounting and installation work must be carried out only by **well qualified personnel authorized by the owner**. It is the owner's responsibility to verify proper qualification of the personnel.

General notes

Strictly observe and comply with all information given in the present installation manual regarding the mounting of the unit and the installation of water, steam and electricity.

Observe and comply with all local regulations dealing with water, steam and electrical installations.

Safety

Some installation work requires removal of the unit covers. Please note the following:



DANGER!
Danger of electric shock!

The Condair RS is mains powered. Live parts may be exposed when the unit is open. Touching live parts may cause severe injury or danger to life.

Prevention: The Condair RS must be connected to the mains only after all mounting and installation work has been completed, all installations have been checked for correct workmanship and the unit is closed and properly locked.



CAUTION!

The electronic components inside the humidifier are very sensitive to electrostatic discharge.

Prevention: To protect these components against damage caused by electrostatic discharge (ESD protection) appropriate measures must be taken when the unit is open for installation work. A wrist strap should be worn to connect the maintenance specialist with a common ground point. For more information, refer to ANSI/ESD-S20.20.

Typical installation for direct room humidification

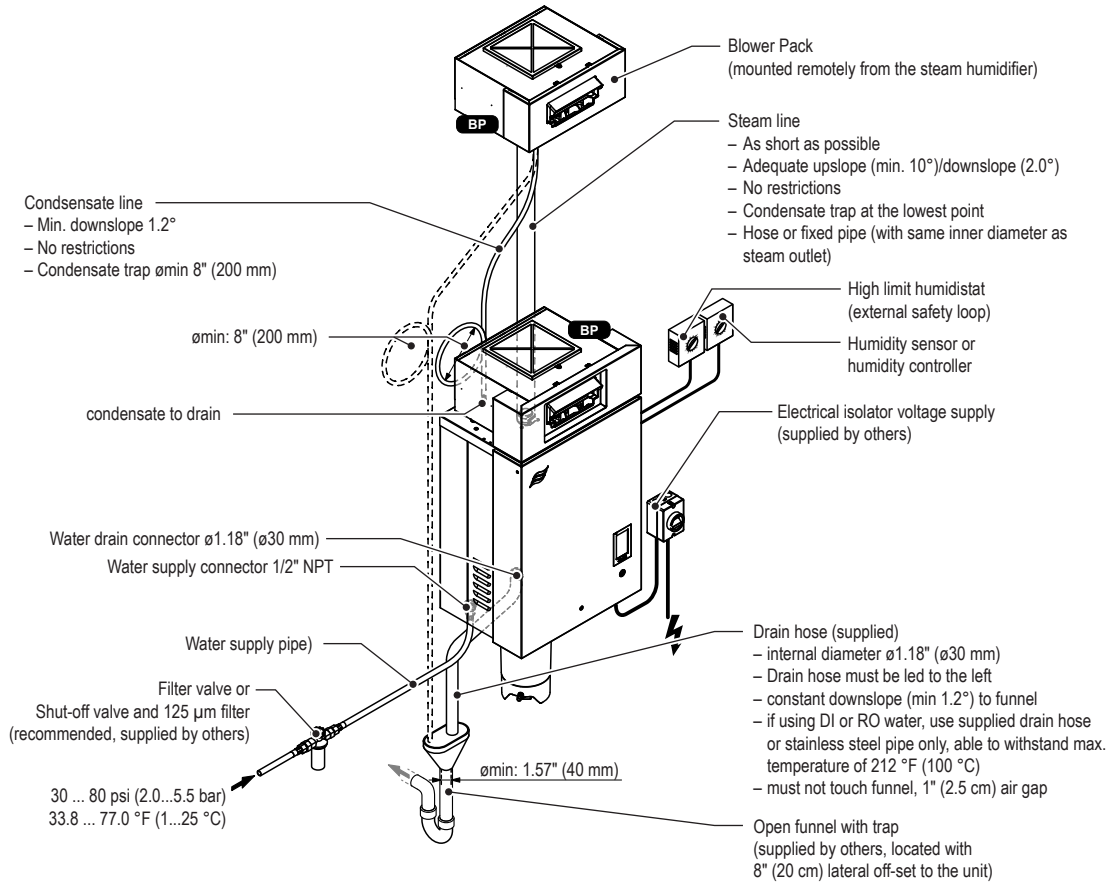


Fig. 5: Typical installation for direct room humidification

Note: For water supply connection of units equipped with RS-RO option, refer to [Fig. 6](#).

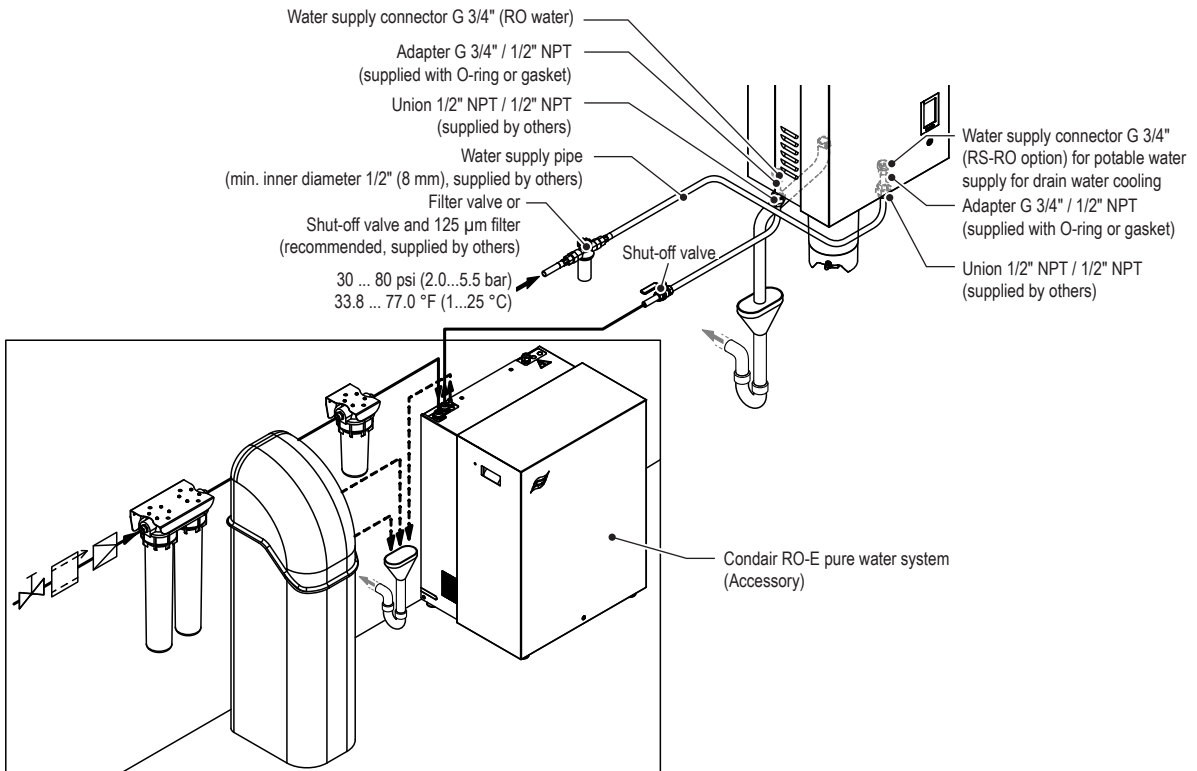


Fig. 6: Water supply connections for units installed with RS-RO option

5.3 Mounting the Unit

5.3.1 Notes on Locating the Unit

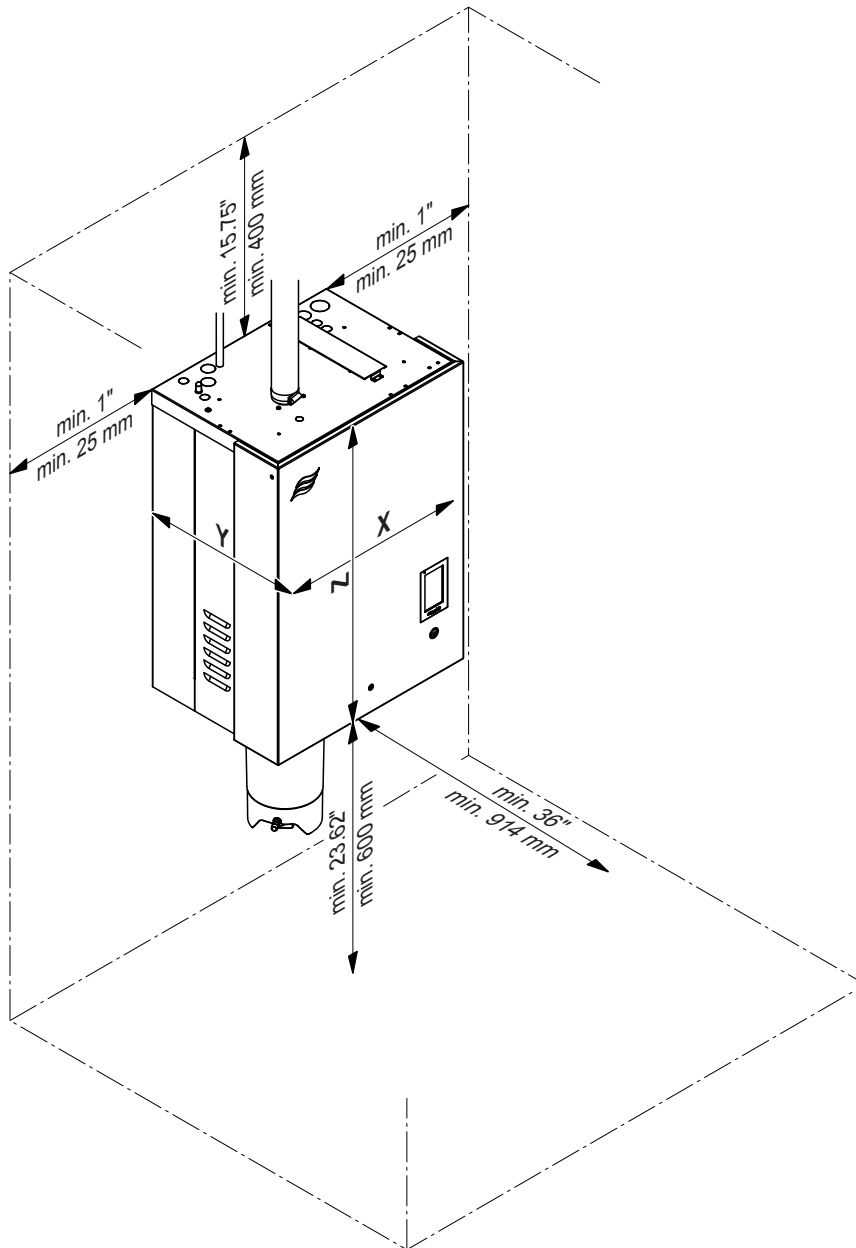


Fig. 7: Minimal distances to be observed

| Housing | | Small ("S") RS 10...20 | Medium ("M") RS 30...90 | Large ("L") RS 90...180 |
|------------------------------------|---|---------------------------|----------------------------|----------------------------|
| Housing dimensions in inch (mm) | X | 17.8" (453) | 22.2" (563) | 40.7" (1033) |
| | Y | 14.6" (370) | 16.0" (406) | 16.0" (406) |
| | Z | 26.4" (670) | 30.7" (780) | 30.7" (780) |
| Net weight in lbs (kg) | | 63 (28.5) | 92 (41.5) | 185 (83.5) |
| Operating weight in lbs (kg) | | 92 (41.5) | 148 (67.0) | 297 (134.5) |

The installation site of the Condair RS depends largely on the location of the steam distributor/blower pack (see [Section 5.4.3](#) and [Section 5.4.4](#)). To **ensure proper functioning** of the steam humidifier and to **obtain an optimal efficiency**, the following points must be considered and observed when choosing the location for the steam humidifier:

- Install the steam humidifier so that:
 - the **length of the steam** line is kept as short as possible,
 - the **minimum bend radius for steam hoses (R= 12" / 300 mm)** and for **solid steam pipes (5 x internal diameter)**
 - the minimum **upslope 10°** and **downslope 2°** of the steam hose is maintained.
- For details of mounting the Condair RS, refer to [Section 5.3.2](#).



CAUTION!

Do **not** mount the steam humidifier directly to the ventilation duct.

- The back panel of the Condair RS retains heat during operation (max. surface temperature of the metal housing approx. 140 - 158 °F / 60 - 70 °C). Make sure, therefore, that the construction (wall, pillar, etc.) to which the unit is to be mounted, does not consist of heat-sensitive material.
- Install the Condair RS in such a manner that it is **freely accessible** with sufficient space available for maintenance purposes. The **minimum distances** shown in the adjacent illustration **must be maintained**.
- The Condair RS is protected according to **IP21**. As a safeguard, the humidifier should be installed in a drip-proof location. Admissible ambient conditions must be complied with.
- Do **not** mount the Condair RS to hot or very cold walls or near vibrating components.
- The steam humidifier Condair RS must only be installed in rooms with a floor drain.



CAUTION!

If for some reason the Condair RS must be installed in a location without floor drain, it is mandatory to provide a leakage monitoring device to safely interrupt the water supply in case of leakage.

- When mounting the Condair RS use **only the mounting materials supplied with the unit**. If mounting with the materials supplied is not possible in your particular case, select a method of mounting that is of similar stability.
- The Condair RS is designed for installation and operation within buildings (admissible temperature range 41... 104 °F / 5...40 °C). For outdoor operation the Condair RS must be placed in a weather protective housing. If ambient temperatures near or below the freezing point have to be expected, the protective housing must be equipped with a thermostat controlled heating of sufficient capacity. The water supply pipe must be equipped with heat-tracing and must be insulated up to the protective housing. For outdoor operation, the Keep Warm function must be enabled. The installation of a normally open valve inside the building envelope that will drain water in case of power failure is highly recommended.

5.3.2 Mounting the Humidifier

5.3.2.1 Standard Mounting

Mark the mounting hole locations "A" and "B" on 2×4 wooden studs (or equivalent) in the mounting surface, as shown, and mount the Condair RS unit using 1/4 × 2 inch lag bolts and washers.

Overview standard mounting single units Small and Medium

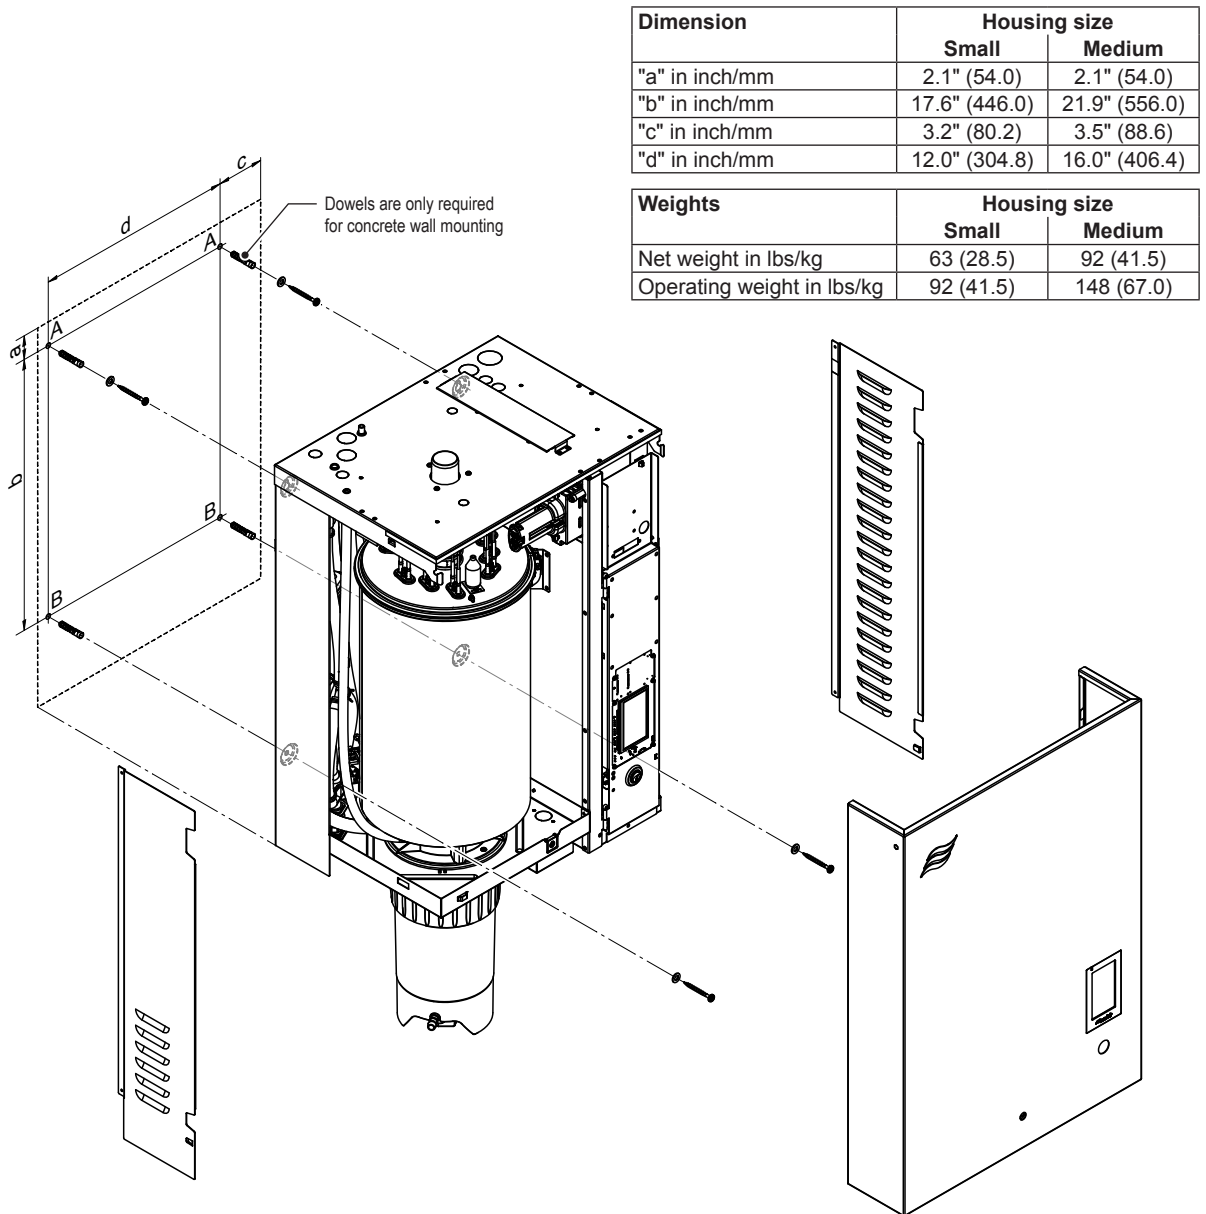


Fig. 8: Overview standard mounting single units Small and Medium

Overview standard mounting single units Large

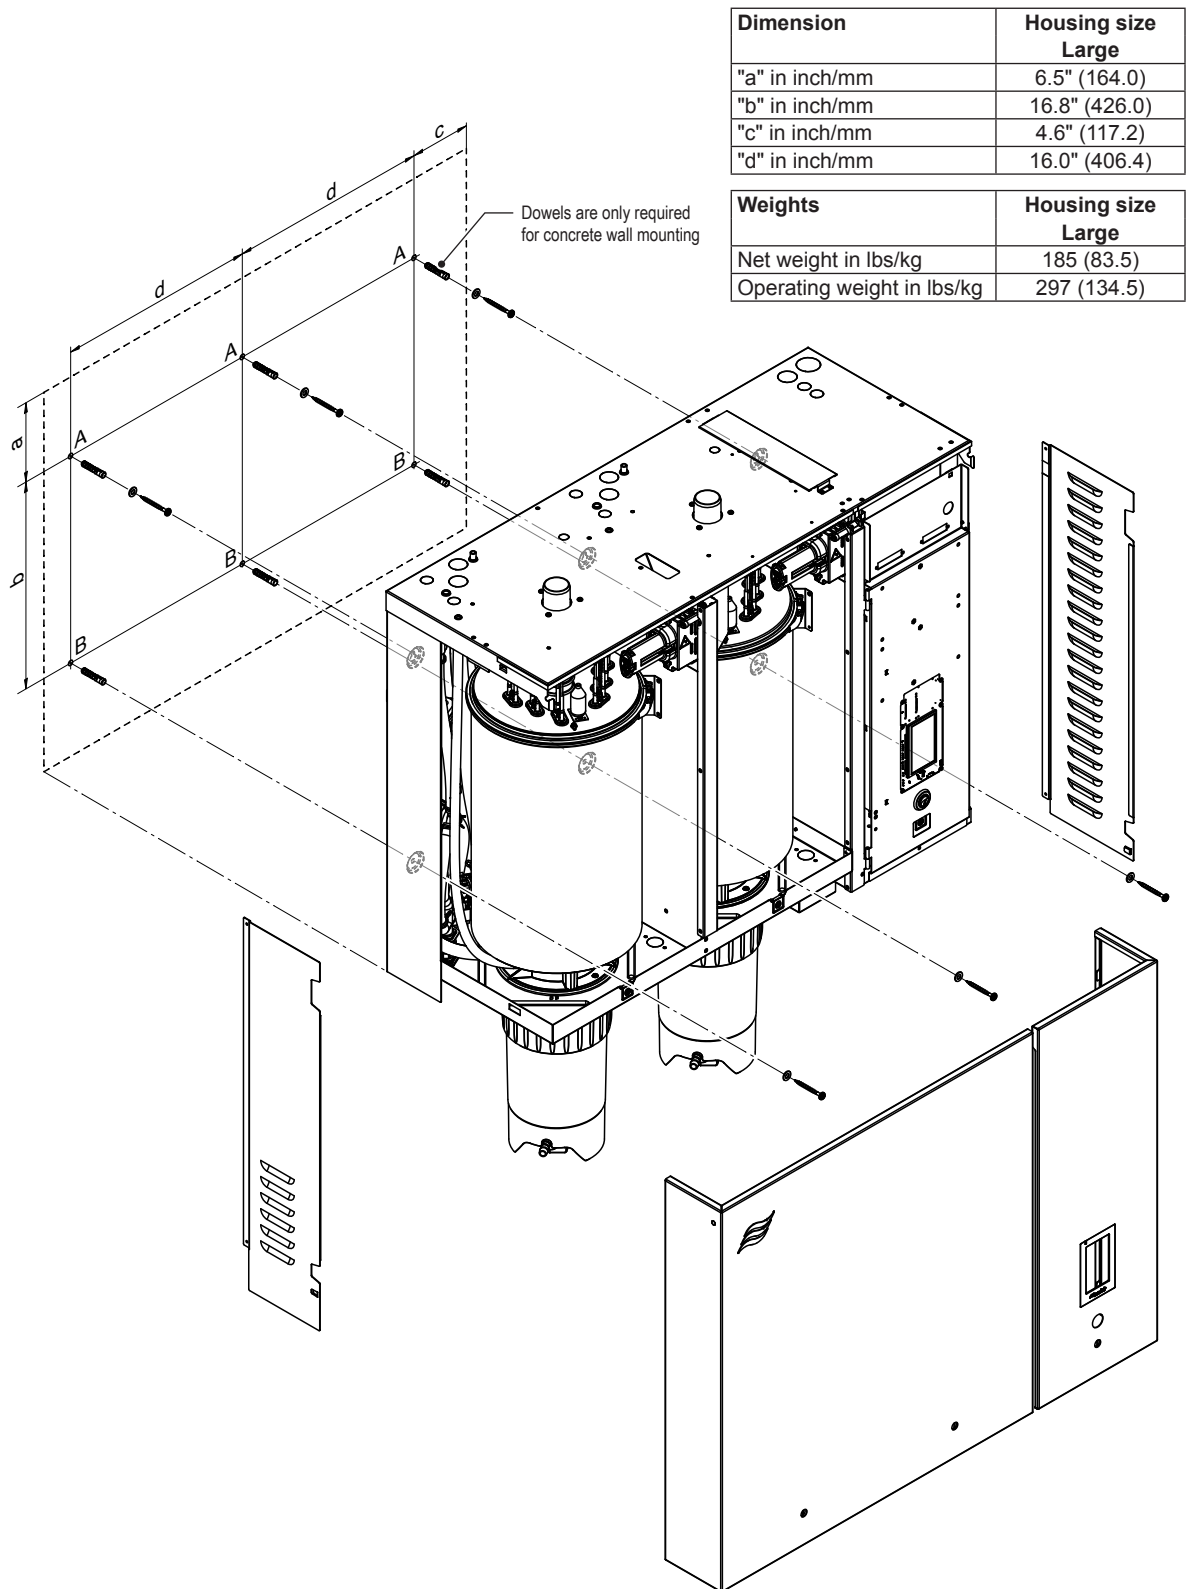


Fig. 9: Overview standard mounting single units Large

Mounting procedure standard mounting

1. Mark the attachment points "A" and "B" at the desired position in the mounting surface with the help of a level.
2. **Mounting on 2×4 wooden studs (or equivalent):** Screw 1/4 × 2 in lag bolts and washers at attachment points "A" into the wooden studs. Allow the heads of the bolts to extend 1/4 in (5 mm) from the mounting surface so that the humidifier can be hung on the bolts.

Mounting on concrete wall: Drill holes with appropriate diameter and depth into the concrete wall at attachment points "A" and "B". Insert appropriate dowels. Then screw 1/4 × 2 in lag bolts and washers into the dowels at attachment points "A". Allow the heads of the bolts to extend 1/4 in (5 mm) from the mounting surface so that the humidifier can be hung on the bolts.

3. Unlock the screw(s) of the front panel(s) of the unit, then remove the front panel(s).
4. Remove side panels on both sides of the unit: Pull side panels to the front then downwards.
5. Carefully raise the unit and hang it on the installed lag bolts.
6. Install additional 1/4 × 2 in lag bolts and washers through the rear panel of the humidifier into the mounting surface (2×4 wooden stud or concrete wall with dowel) at attachment points "B".
7. Align the unit with the help of a level, then tighten the lag bolts.
8. Reattach side panels on both sides of the unit: Push side panels upwards into the clip then push it to back of the unit until it comes to a stop.
9. Reattach the front panel(s) and secure with the screw(s).

5.3.2.2 Wall Support Mounting (option)

Overview wall support mounting single units Small and Medium

| Dimension | Housing size | |
|----------------|---------------|---------------|
| | Small | Medium |
| "a" in inch/mm | 7.6" (193.5) | 7.6" (193.5) |
| "b" in inch/mm | 12.0" (304.8) | 16.0" (406.4) |
| "c" in inch/mm | 2.3" (57.6) | 2.4" (61.8) |

| Weights | Housing size | |
|----------------------------|--------------|------------|
| | Small | Medium |
| Net weight in lbs/kg | 63 (28.5) | 92 (41.5) |
| Operating weight in lbs/kg | 92 (41.5) | 148 (67.0) |

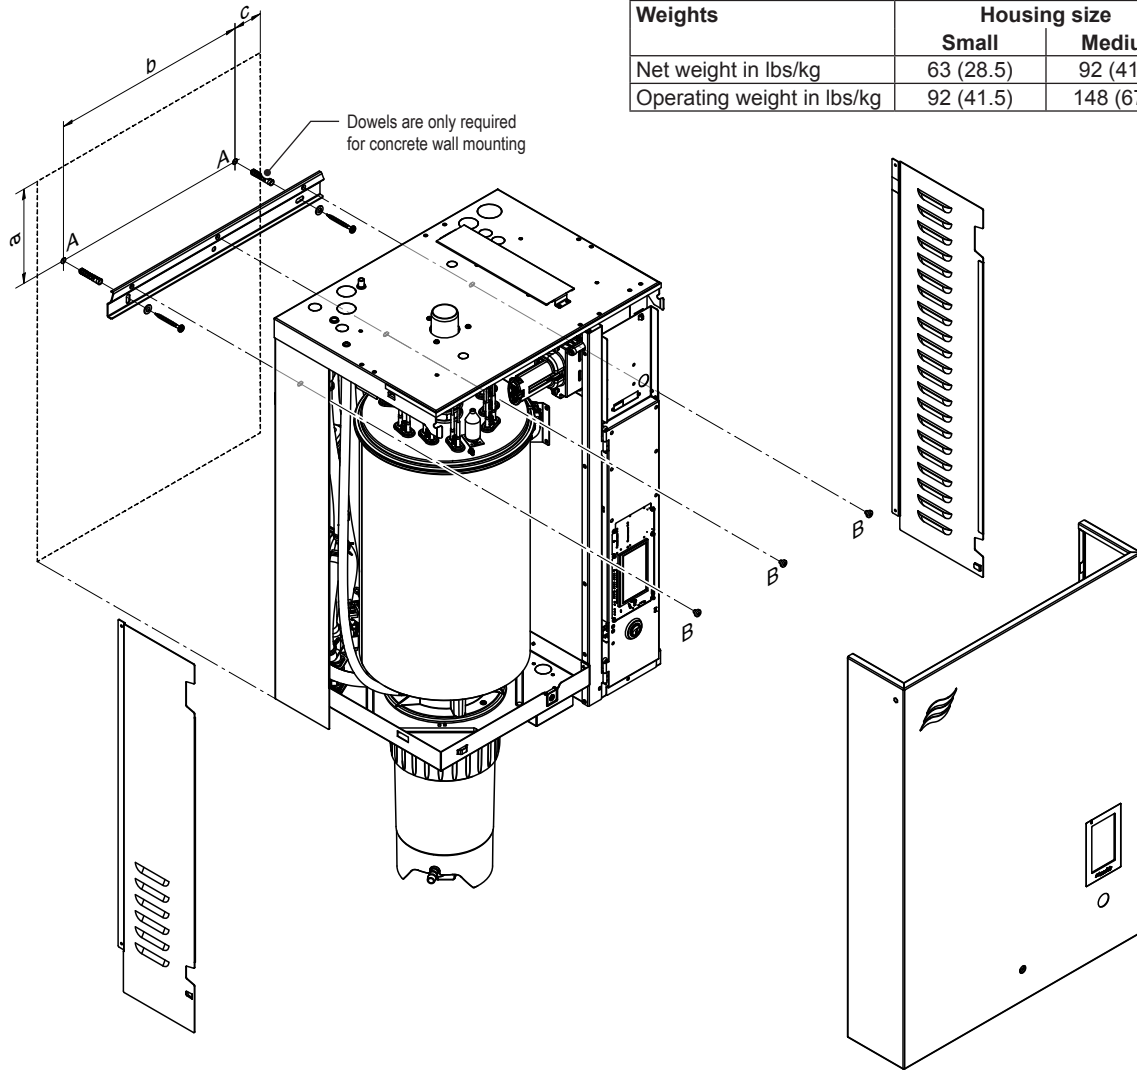


Fig. 10: Overview wall support mounting single units Small and Medium

Overview wall support mounting single units Large

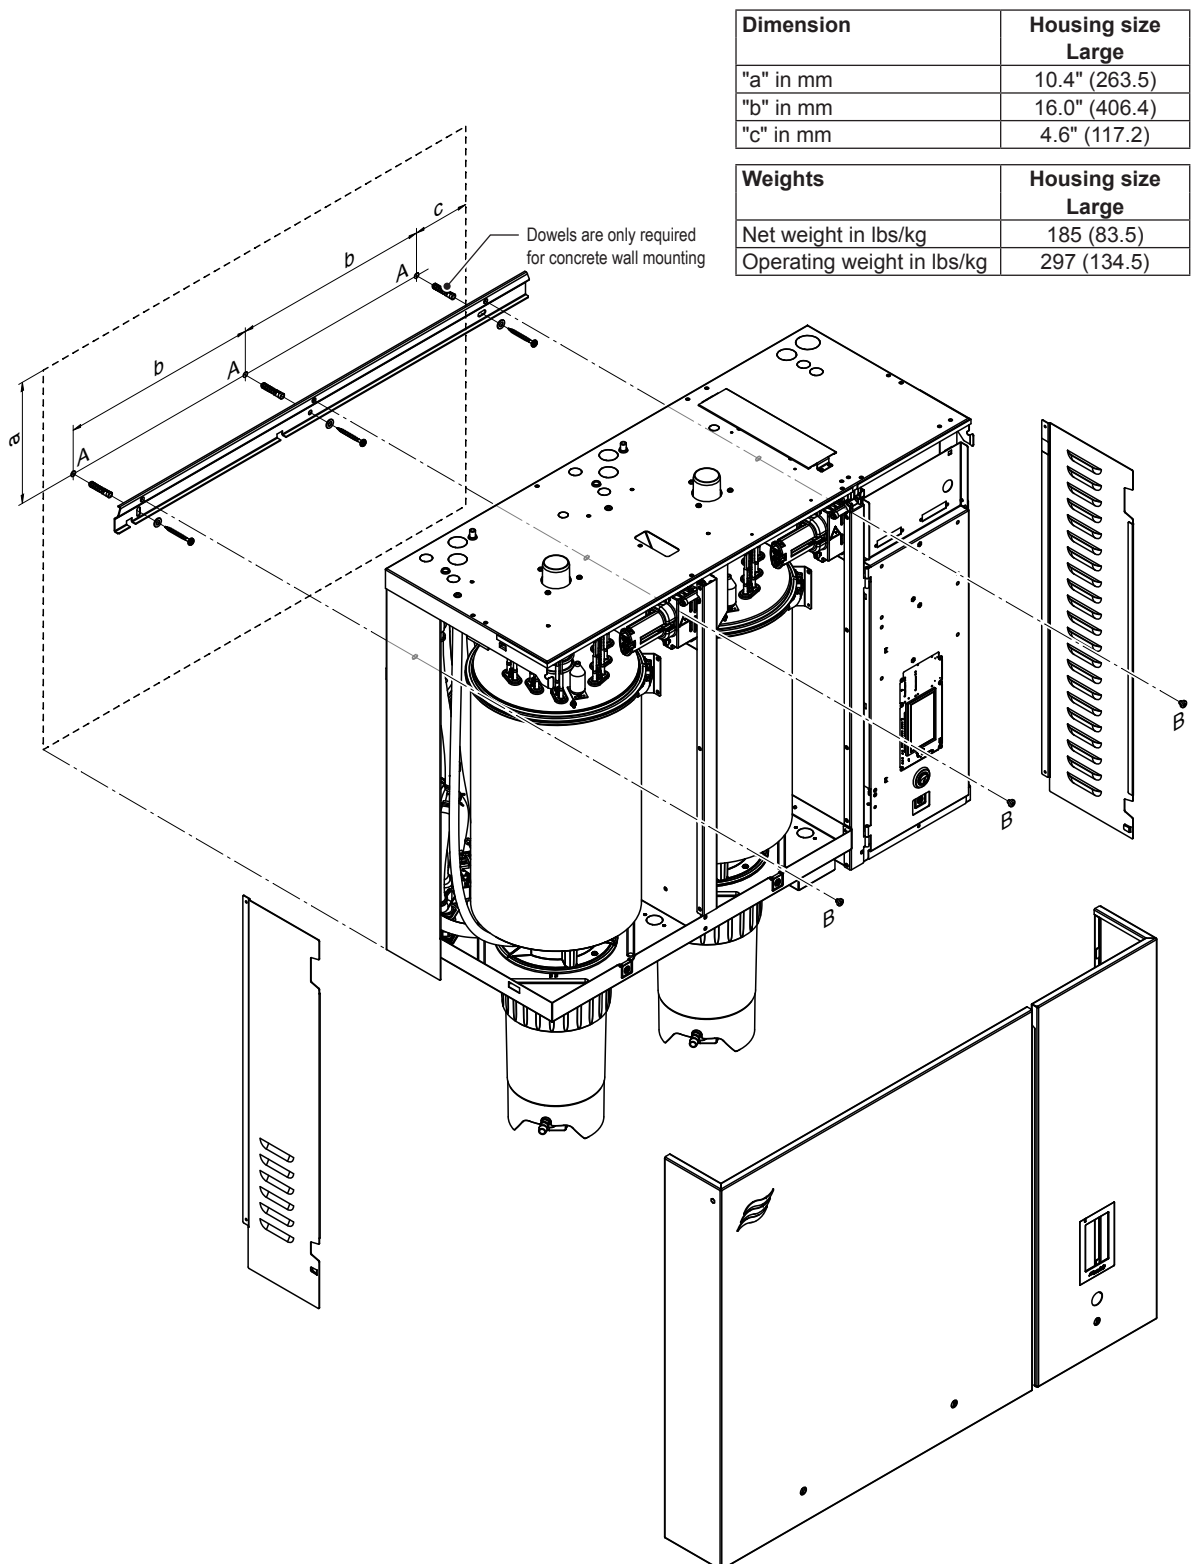


Fig. 11: Overview wall support mounting single units Large

Procedure

1. Mark the attachment points "A" for the wall support at the desired position with the help of a level.
2. **Mounting on 2×4 wooden studs (or equivalent):** Attach the wall support to 2×4 wooden stud (or equivalent) in the mounting surface with 1/4 × 2 in lag bolts and washers. Adjust the wall support horizontally using a level, and tighten the bolts.

Mounting on concrete wall: Drill holes with appropriate diameter and depth into the concrete wall at attachment points "A". Insert appropriate dowels. Then attach the wall support to concrete wall with 1/4 × 2 in lag bolts and washers. Adjust the wall support horizontally using a level, and tighten the bolts.

3. Unlock the screw(s) of the front panel(s), then remove the front panel(s).
4. Remove side panels on both sides of the unit: Pull side panels to the front then downwards.
5. Carefully raise the unit and hang it on the wall support.
6. Secure the unit to the wall support with the supplied screws at points "B".
7. Reattach side panels on both sides of the unit: Push side panels upwards into the clip then push it to back of the unit until it comes to a stop.
8. Reattach the front panels and secure it with the screws.

5.3.3 Inspecting the Installed Unit

Check the following points:

- Is the unit installed in the correct place (see [Section 5.3.1](#))?
- Is the supporting surface stable enough?
- Is the unit correctly aligned, vertically and horizontally?
- Is the unit properly secured (see [Section 5.3.2](#))?

5.4 Steam Installation

5.4.1 Overview Steam Installation for Duct Humidification

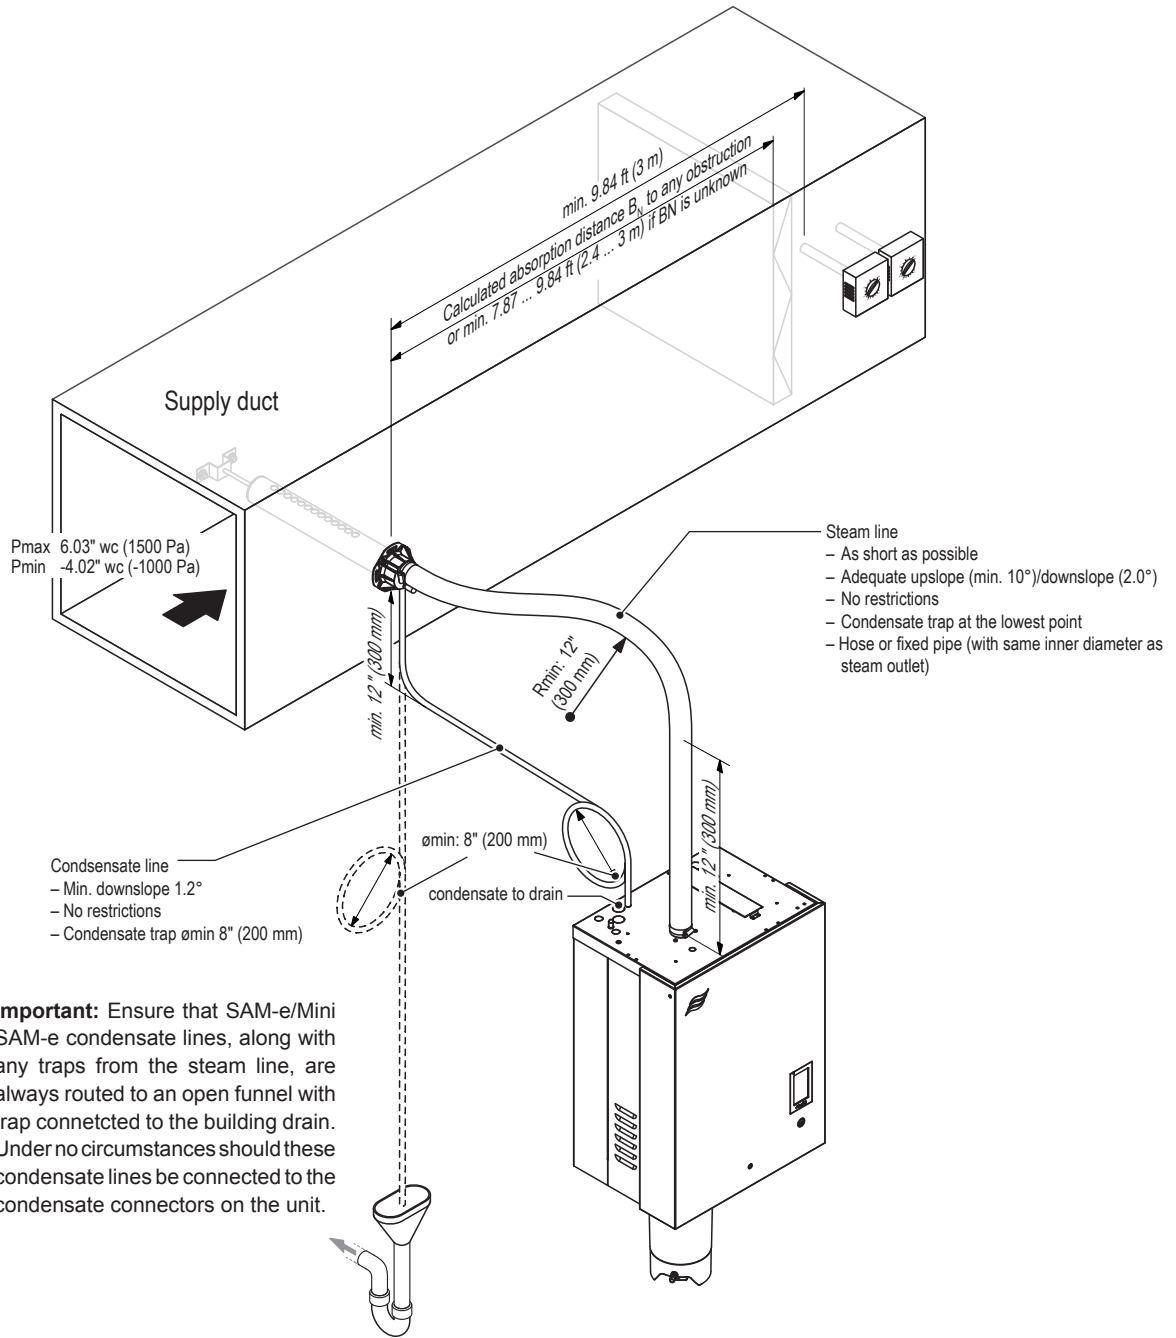


Fig. 12: Overview steam installation for duct humidification

5.4.2 Installing the Steam Distributors

Detailed information on the installation of steam distribution pipes and SAM-e steam distribution system can be found in the separate mounting instructions for these products.

5.4.3 Overview Steam Installation for Direct Room Humidification


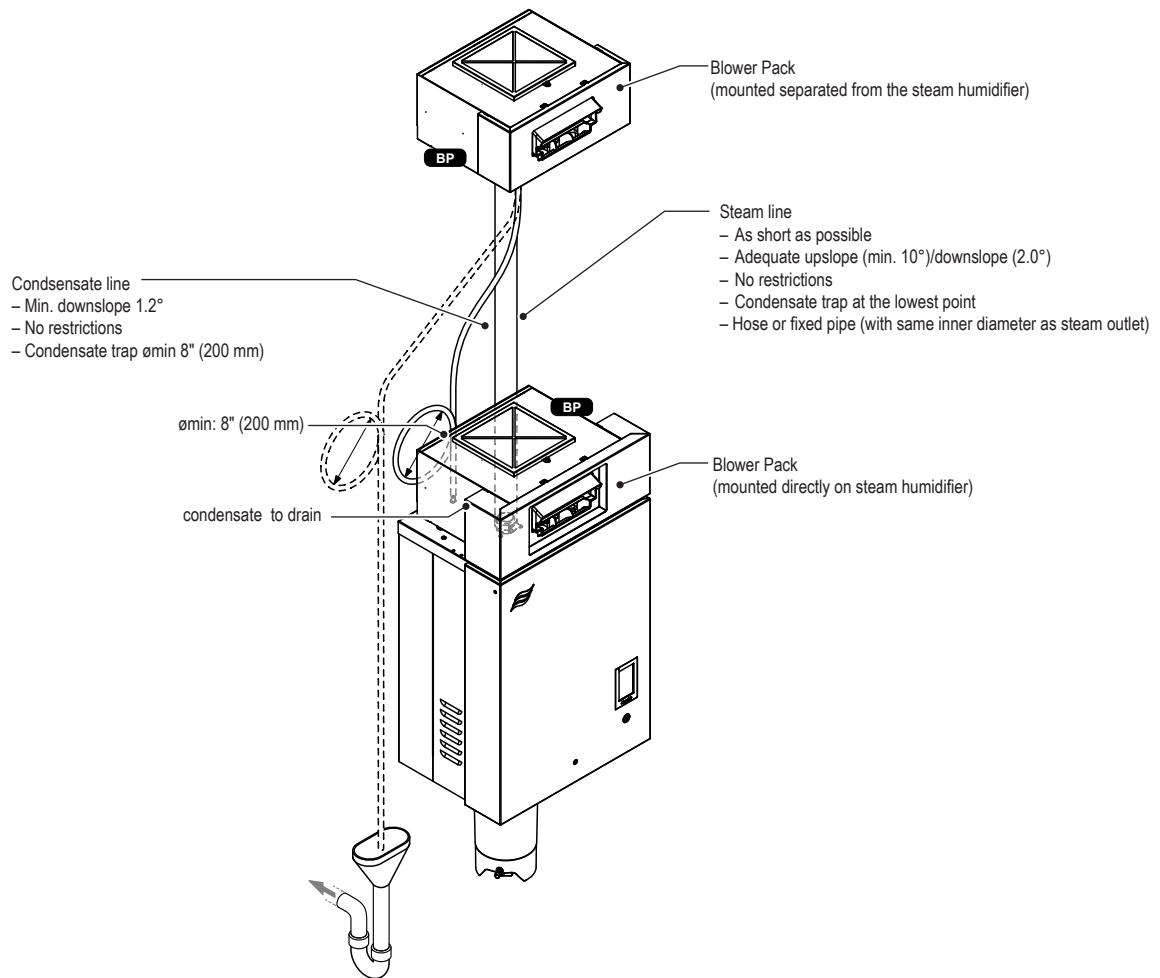


Fig. 13: Overview steam installation for direct room humidification

5.4.4 Positioning and Mounting the Blower Packs

The blower packs can either be mounted directly on the humidifier or separately above the humidifier to the wall. To allow the steam coming from the blower pack to spread out evenly, without condensing on obstacles (ceilings, joists, pillars, etc.), the following minimum dimensions must be observed when selecting the location for the blower pack.

Even small objects that encroach into the steam distribution area may create condensation and reduce efficiency.

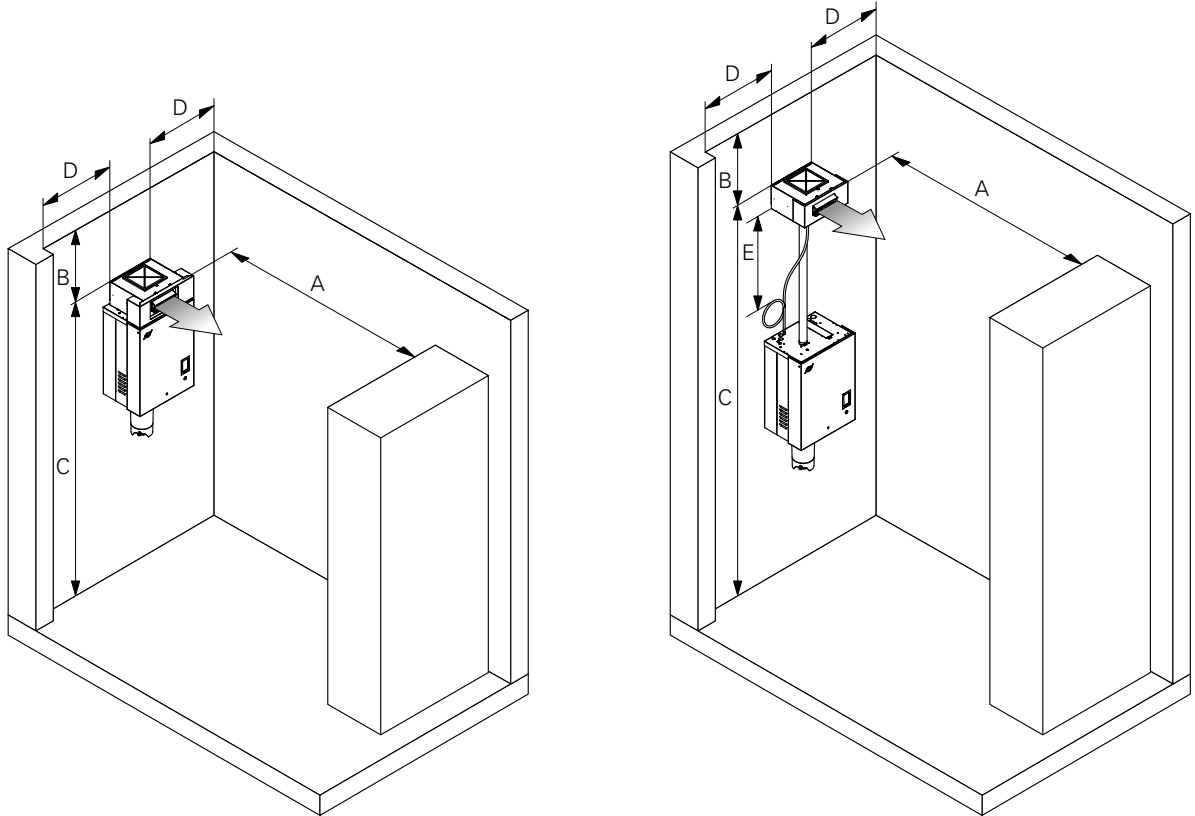

WARNING!
Risk of burn injuries!

The blower pack discharges hot steam and presents a burn hazard. Care must be taken when the humidifier is in operation and when in the vicinity of the blower pack.

| Humidifier Model | Max. Capacity lb/hr (kg/h) | Fan Speed | Min. Clearance Required in inch (cm) | | | |
|------------------|-------------------------------|-----------|--------------------------------------|---------|----------|---------|
| | | | A | B | C | D |
| RS 010 | up to 11.4 (5.2) | Low | 18 (46) | 12 (31) | 96 (244) | 12 (31) |
| | | High | 6 (16) | 12 (31) | 96 (244) | 12 (31) |
| RS 015 | up to 17.6 (8.0) | Low | 75 (191) | 12 (31) | 96 (244) | 12 (31) |
| | | High | 60 (153) | 12 (31) | 96 (244) | 12 (31) |
| RS 020 | up to 22.8 (10.3) | Low | 75 (191) | 12 (31) | 96 (244) | 12 (31) |
| | | High | 60 (153) | 12 (31) | 96 (244) | 12 (31) |
| RS 030 | up to 31.8 (14.4) | Low | 86 (219) | 12 (31) | 96 (244) | 12 (31) |
| | | High | 71 (181) | 12 (31) | 96 (244) | 12 (31) |
| RS 045 | up to 47.9 (21.7) | Low | 174 (442) | 12 (31) | 96 (244) | 12 (31) |
| | | High | 132 (336) | 12 (31) | 96 (244) | 12 (31) |

| Humidifier Model | Max. Capacity lb/hr (kg/h) | Fan Speed | Min. Clearance Required in inch (cm) | | | |
|------------------|-------------------------------|-----------|--------------------------------------|----------|----------|---------|
| | | | A | B | C | D |
| RS 065 | up to 71.9 (32.6) | Low | 189 (481) | 48 (122) | 96 (244) | 30 (77) |
| | | High | 153 (389) | 12 (31) | 96 (244) | 30 (77) |
| RS 090 | up to 95.4 (43.3) | Low | 248 (630) | 84 (214) | 96 (244) | 30 (77) |
| | | High | 218 (554) | 12 (31) | 96 (244) | 30 (77) |

Note: Sound measurement at low speed: 57.4 dB; high speed: 64.1 dB taken 3 ft (1 m) from the blower pack.

Note: The minimum spaces in the table apply for a room atmosphere of 72°F (21°C), and max 40% RH. For lower temperatures and/or higher humidity the clearance values will increase, and should be adjusted accordingly.

Note: In order to achieve a uniform distribution of the humidity within the room, additional factors such as the room size, the room height, etc., must be taken into consideration besides observing the minimum distances for the blower packs. If you have questions concerning the direct room humidification, please contact your Condaire representative.

Further information is provided in the separate installation and operating instructions for the corresponding blower pack.

5.4.5 Installing the Steam and Condensate lines

Installations notes

- Use **original steam and condensate hose** from your Condaire representative or **solid steam pipes from copper (MED-L) or stainless steel (min. AISI 304) exclusively**. Steam and condensate lines of other material may cause undesired operational malfunctions. For installations with reverse osmosis or de-ionized water supply, do not use copper steam lines.
- Initially, lead the steam line **upright upwards min. 12" (300 mm) above the humidifier**. Then lead the steam line with a **minimum upslope of 10°** and/or a **minimum downslope of 2°** to the steam distributor.
- The condensate hose from the steam distributor **is either**:
 - led down to the humidifier with a **minimum downslope of 1.2°**, via a condensate trap (**min. hose bend diameter ø8" (ø200 mm)**) and there it is to be connected to the appropriate connector on top of the unit or
 - led down to an open funnel with trap connected to the building drain with a **minimum downslope of 1.2°**, via a condensate trap (**min. hose bend diameter ø8" (ø200 mm)**).

Important: Ensure that SAM-e/Mini SAM-e condensate lines, along with any traps from the steam line, are always routed to an open funnel with trap connected to the building drain. Under no circumstances should these condensate lines be connected to the condensate connectors on the unit.

Important! Before putting the unit into operation, the condensate trap of the condensate hose must be filled with water.

- The steam line should be kept as short as possible, as per [Table 1 on page 31](#). Ensure the the minimum bend radii are observed: 12" (300 mm) for steam hoses or 5x internal diameter for solid pipes.

Important! Allowance must be made for a **pressure loss** from elbows, according to equivalent length tables.
- **Important!** When deciding on the length and layout of steam hoses, it should be noted that steam hoses may become shorter and/or longer depending on temperature and age.

- The steam hose must be secured to the steam distributor and humidifier steam outlet by means of **hose clamps**. Solid steam pipes should be connected to the steam distributor and steam humidifier with short lengths of steam hose secured with hose clamps.
Caution! Do not overtighten the hose clamp on the steam connector of the steam humidifier.
- Steam lines made of solid pipes (copper or stainless steel) must be insulated over the entire length to minimize condensate formation. Condensate created due to thermal loss in steam lines will reduce the operational efficiency of the humidification system and reduce the moisture supply to the conditioned environment.



DANGER!

Reducing the cross section or the complete closure of the steam line will cause an excessive increase in pressure in the steam cylinder when the unit is operating and could lead to the risk of scalding accidents. All installations must comply with the following instructions.

- When installing, make sure the steam line is open over the entire length and through the whole cross section. Any sealing plugs, adhesive sealing sheets etc. must be removed before connecting the steam pipe. Reductions in cross section by kinking or crushing must be avoided.
- Steam hoses must be prevented from sagging (condensate pockets); if necessary, support steam hose with pipe clamps, trough, or wall brackets, and install a condensate drain at any low points in the steam line.
- It is **not permitted to install a stop valve** (e.g. a manually controlled isolation valve, solenoid valve, etc.) in the steam line, due to an inadmissible increase of pressure in the steam cylinder if the valve is closed during the operation.


Table 1: Recommended Steam Line Material*, Maximum Equivalent Length, Losses

| Humidifier Model | Maximum Equivalent Steam Line Length** | | MED-L Copper Tube | Stainless Steel Tube | Possible Steam Losses (based on 1" insulated copper pipe) | |
|---------------------------|--|------|--|---|--|-------------|
| | ft | m | | | lb/hr per ft | kg/hr per m |
| RS 010 | 24 | 7.3 | (1 line) 1.5" ID MED-L Tubing (1.625" OD) | (1 line) 1.75" OD SS Tubing (0.065" thick) | 0.11 | 0.16 |
| RS 015 | 25 | 7.6 | | | | |
| RS 020 | 27 | 8.2 | | | | |
| RS 030 | 30 | 9.1 | | | | |
| RS 045 | 35 | 10.7 | | | | |
| RS 065 | 45 | 13.7 | | | | |
| RS 090 (M) | 50 | 15.2 | (2 lines) 1.5" ID MED-L Tubing (1.625" OD) | (2 lines) 1.75" OD SS Tubing (0.065" thick) | 0.15 | 0.22 |
| RS 090 (L)*** | 35 | 10.7 | | | | |
| RS 130*** | 45 | 13.7 | | | | |
| RS 180*** | 50 | 15.2 | | | | |
| Condair Steam Hose | | | | | | |
| All Models | 10 | 3 | P/N 1328820 | | 0.15 | 0.22 |

Notes:

- * The use of steam line other than copper, stainless steel tube, or Condair supplied steam line will void the warranty and may adversely affect the operation of the humidifier.
- ** Long steam runs affect accuracy of humidifier and its ability to quickly respond to changes in demand. When tight control is required, ensure steam line run is as short as possible.
- *** Steam line per boiling tank. Do not combine steam lines except at distributor using a Condair adapter designed for that purpose and only if humidifiers operate in parallel.

Installation examples

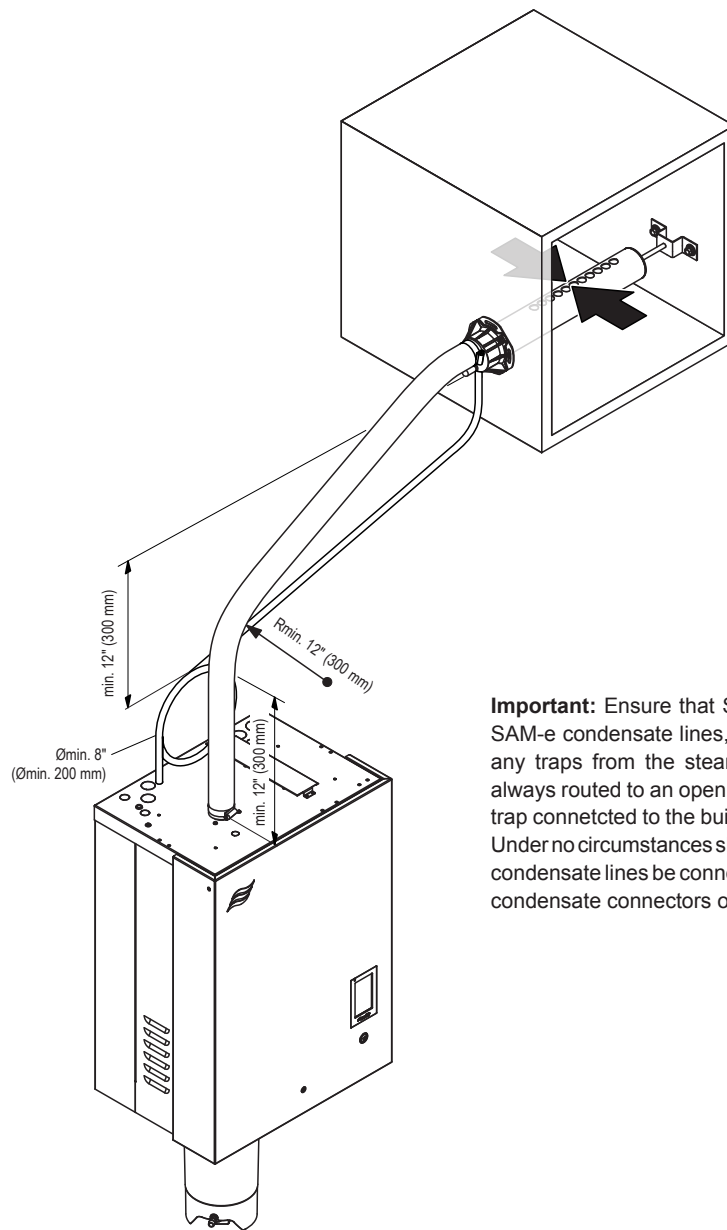

Important: Ensure that SAM-e/Mini SAM-e condensate lines, along with any traps from the steam line, are always routed to an open funnel with trap connected to the building drain. Under no circumstances should these condensate lines be connected to the condensate connectors on the unit..

Fig. 14: Steam distributor mounted more than 20" (500 mm) above the top edge of the humidifier


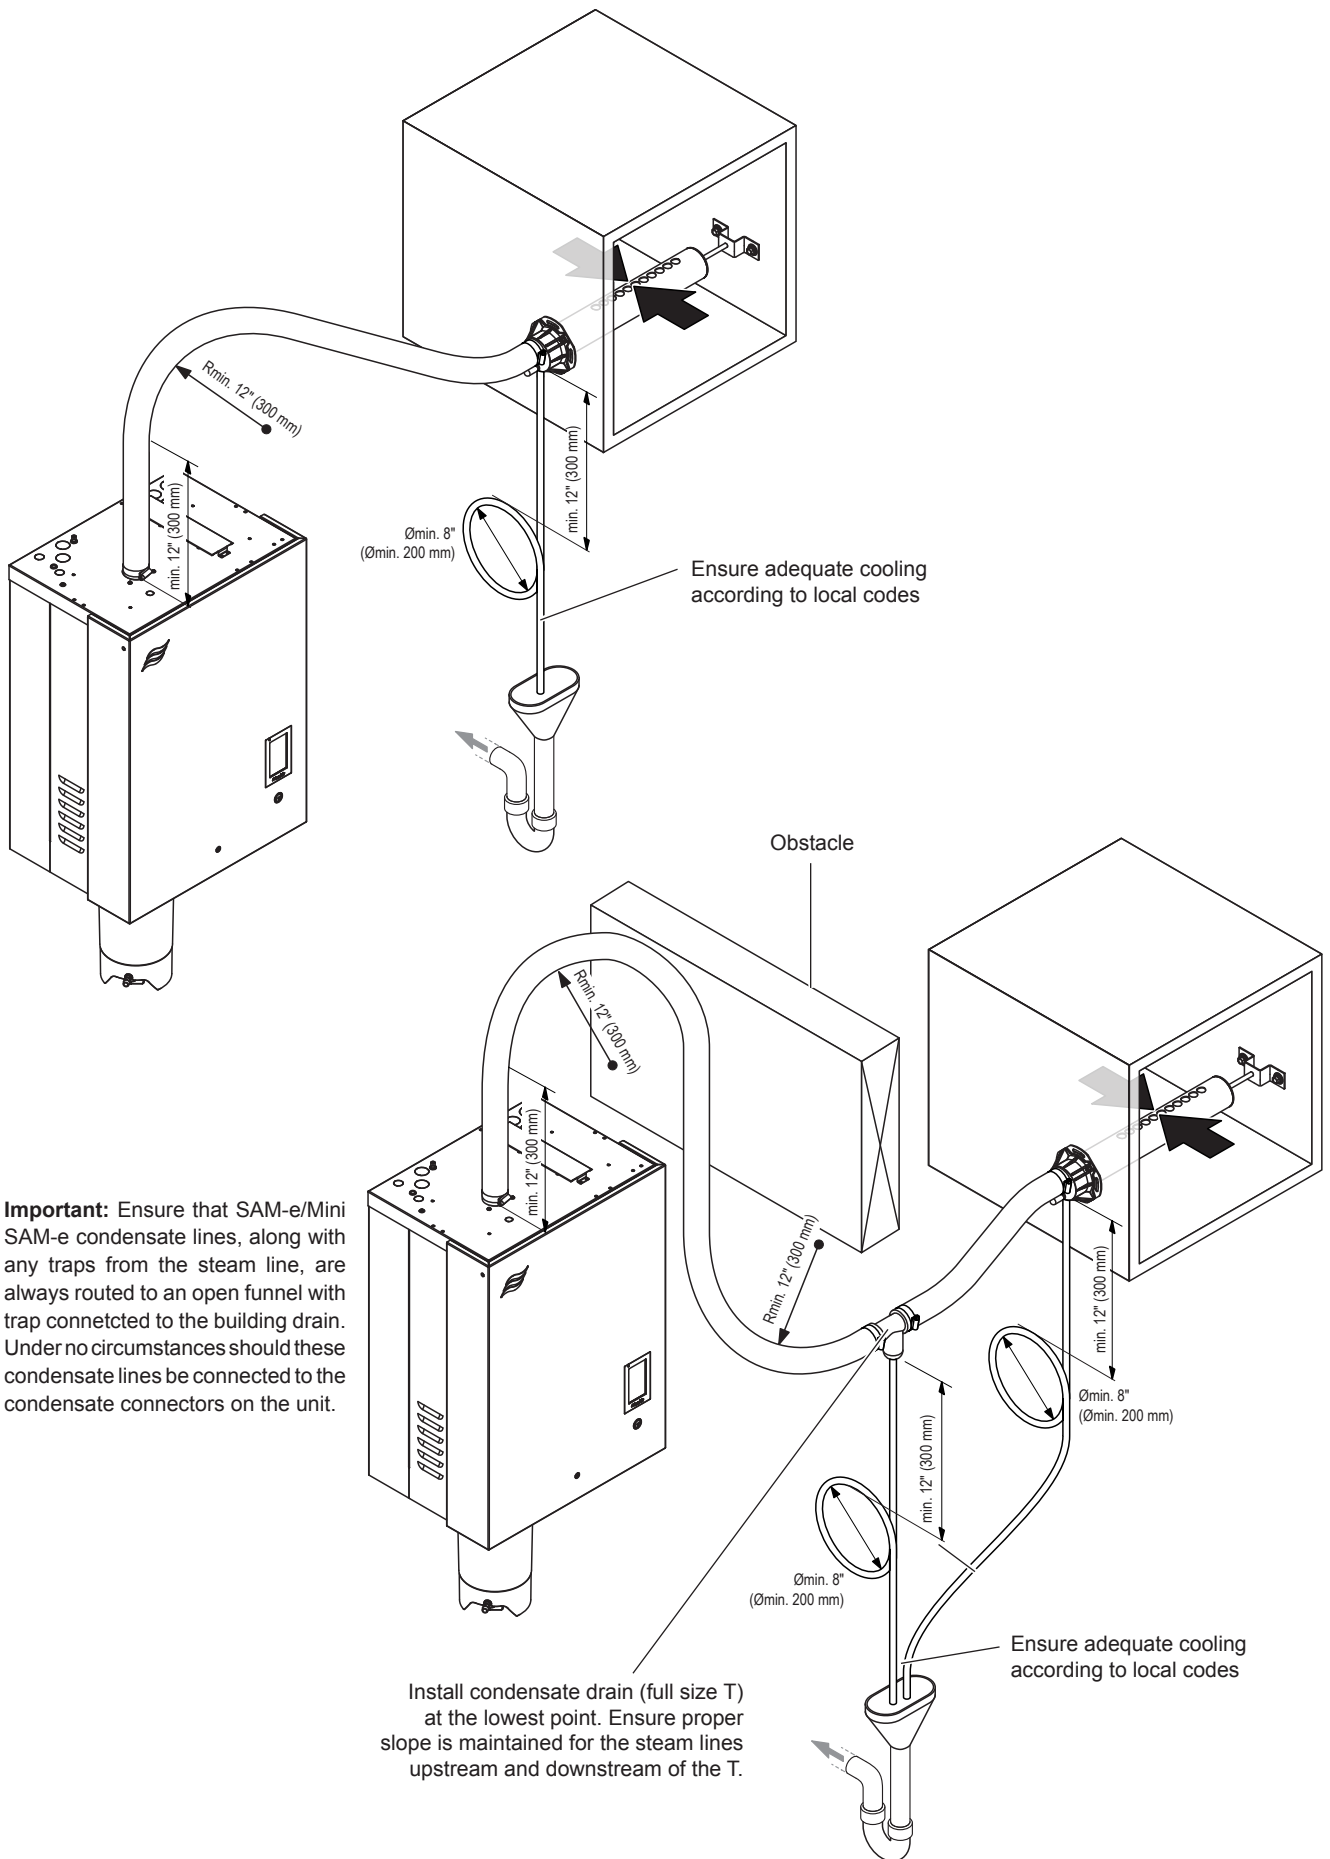



Fig. 15: Steam distributor mounted less than 20" (500 mm) above the top edge of the humidifier

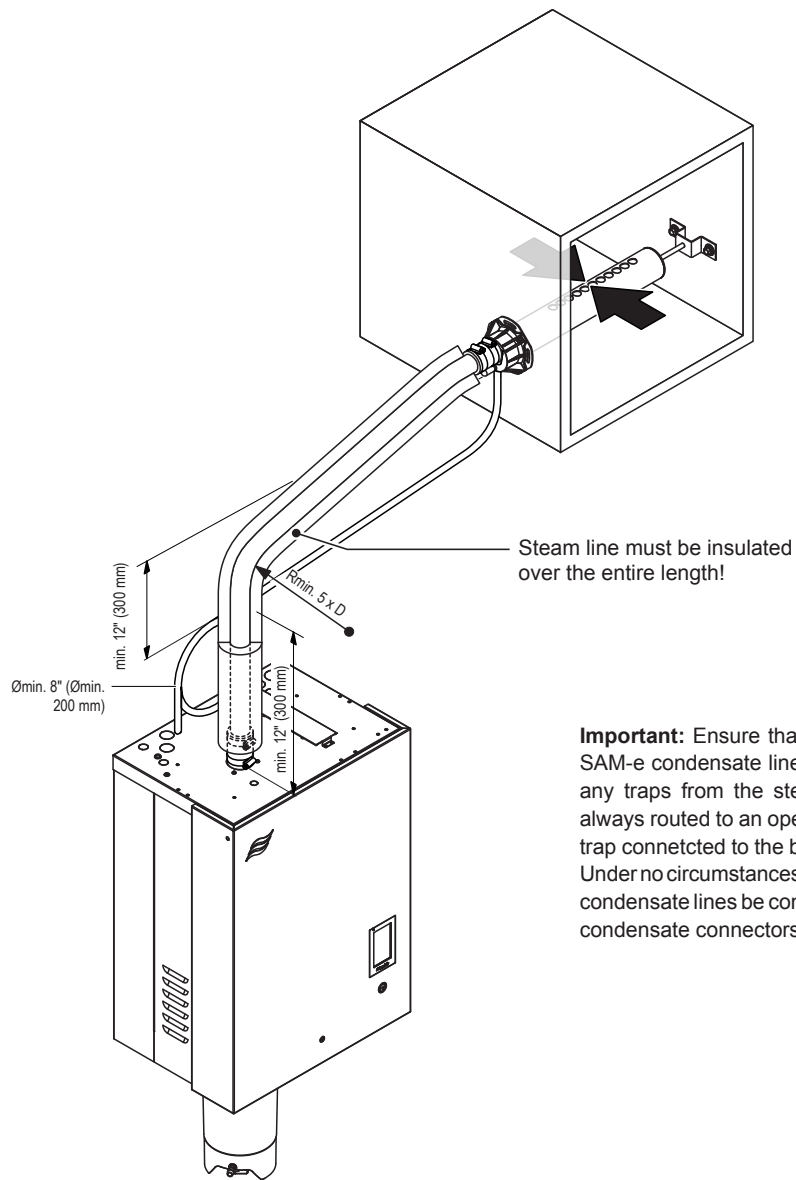

Important: Ensure that SAM-e/Mini SAM-e condensate lines, along with any traps from the steam line, are always routed to an open funnel with trap connected to the building drain. Under no circumstances should these condensate lines be connected to the condensate connectors on the unit.

Fig. 16: Steam line with solid piping and insulation

5.4.6 Common Steam and Condensate Line Errors

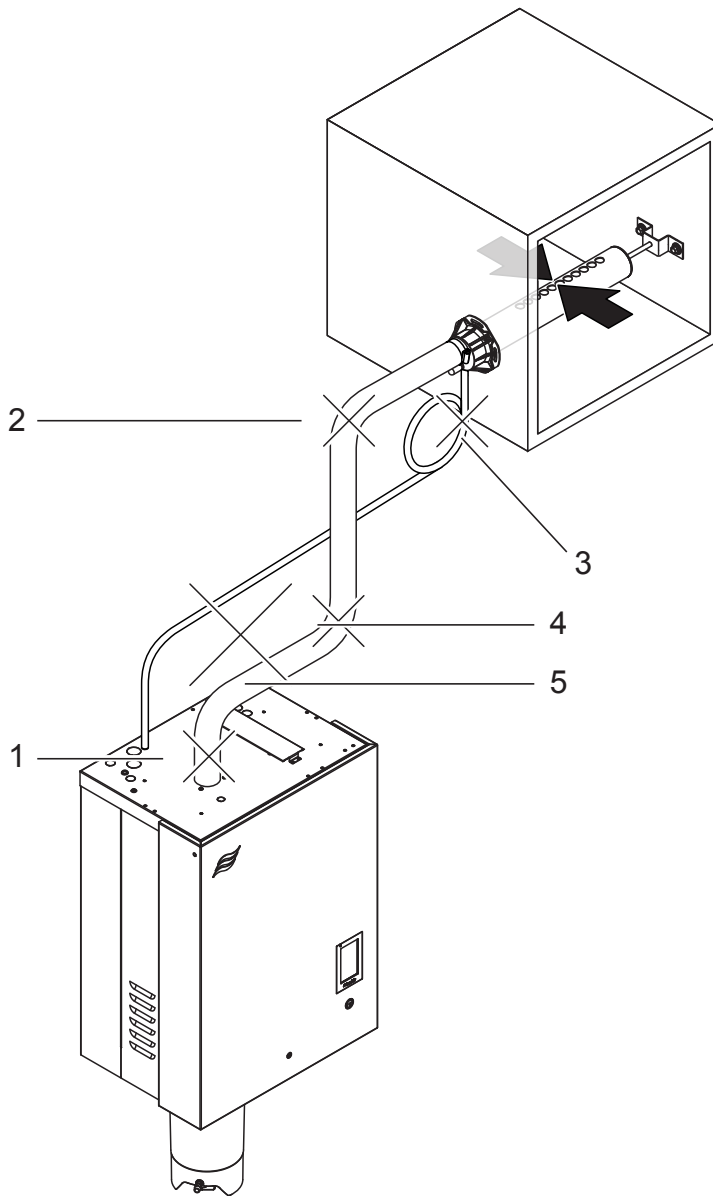

| | Wrong | Correct |
|---|---|--|
| 1 | Steam line not led at least 12" (300 mm) perpendicularly upwards before first bend (forming of condensate). | Lead steam line at least 12" (300 mm) perpendicularly upwards before first bend. |
| 2 | Minimum bend radius of steam hose/solid steam line not maintained (forming of condensate). | The minimum bend radius of 12" (300 mm) for steam hoses or 5 times steam line internal diameter for solid steam lines must be maintained. |
| 3 | Condensate trap not sufficiently high and installed too near at the steam distributor. | The condensate trap must be at least 12" (300 mm) below the connector on the steam distributor and it must have a minimum height of 8" (200 mm) in form of a hose loop $\varnothing 8"$ ($\varnothing 200$ mm). |
| 4 | No condensate trap installed at vertical transition. | Install condensate trap at all low points and before vertical transitions. |
| 5 | Steam line and condensate hose not sloped. | Install steam line always with constant upslope of min. 10° or downslope of min. 2.0° and condensate hose with constant downslope of min. 1.2° . |

Fig. 1: Common steam and condensate line errors

5.5 Inspecting the Steam Installation

Use the following check list to ensure that the steam installation was performed correctly:

- Steam distributor
 - Steam distributors (steam distribution pipe or SAM-e steam distribution system) correctly positioned and secured (screws tightened)?
 - Are the outlet orifices at right angles to the air flow for horizontal installation, or at 45 degree angle for vertical installation?
- Steam hose
 - Steam hose material: copper (potable water only), stainless steel or Condair plastic hose?
 - Maximum length, as per table shown in [Section 5.4.5?](#)
 - Minimum bend radius of 12" (300 mm) (5 x internal diameter with fixed piping)?
 - Have the instructions for hose layout been followed?
 - Steam hose: no sagging (condensate pocket) or condensate drain with trap (hose bend with a minimum diameter of 8" (200 mm)) installed at the lowest point and filled with water?
 - Fixed steam lines: properly insulated? Correct installation material used? Minimum internal diameter maintained?
 - Steam hose or steam hose pieces securely attached with clamps?
 - Heat expansion during operation and shortening of the hose with ageing taken into consideration?
- Condensate hose
 - Downslope of at least 1.2°?
 - Trap min. ø8" (ø200 mm) in place and filled with water?
 - Condensate hose correctly connected and supported and not kinked?

5.6 Water Installation

5.6.1 Overviews Water Installation

Note: with RS-RO Option installed see [Section 5.6.2](#).

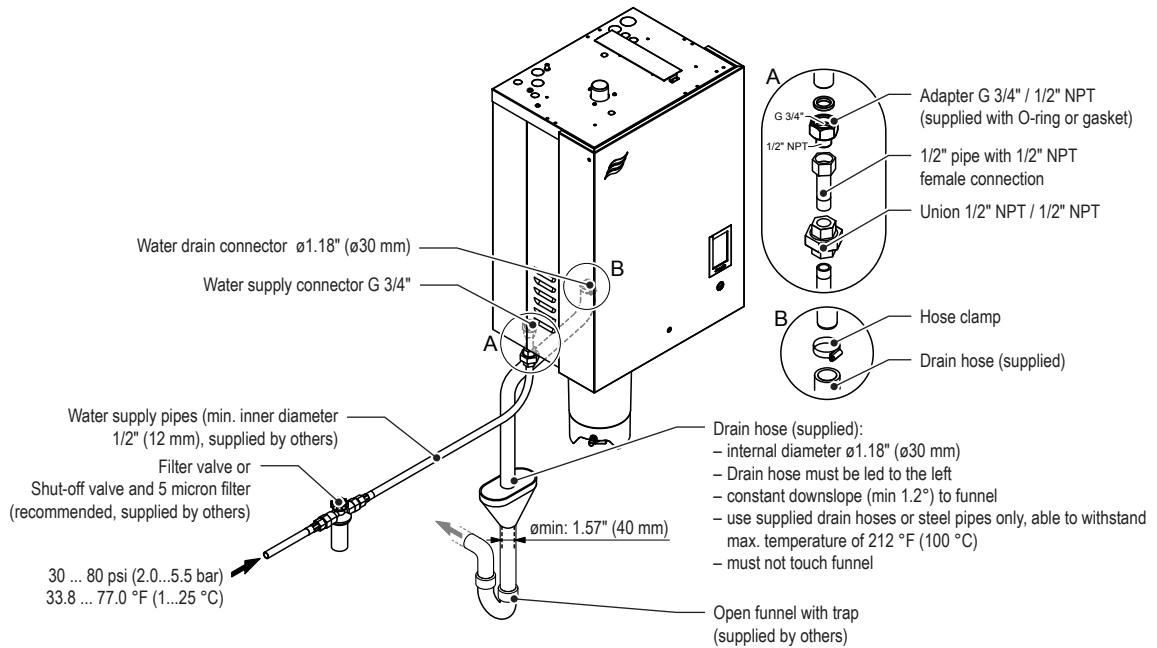


Fig. 17: Overview water installation for single units Small and Medium

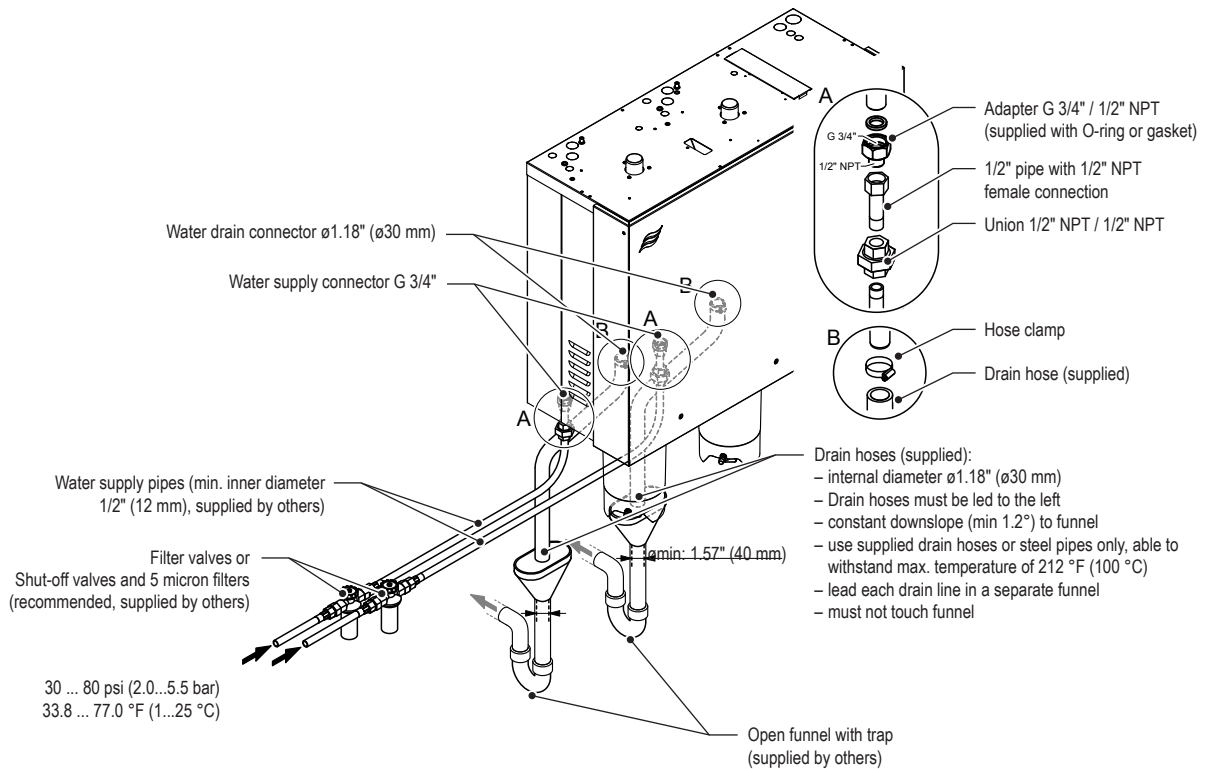


Fig. 18: Overview water installation for single units Large

5.6.2 Overviews Water Installation (with RS-RO option installed)

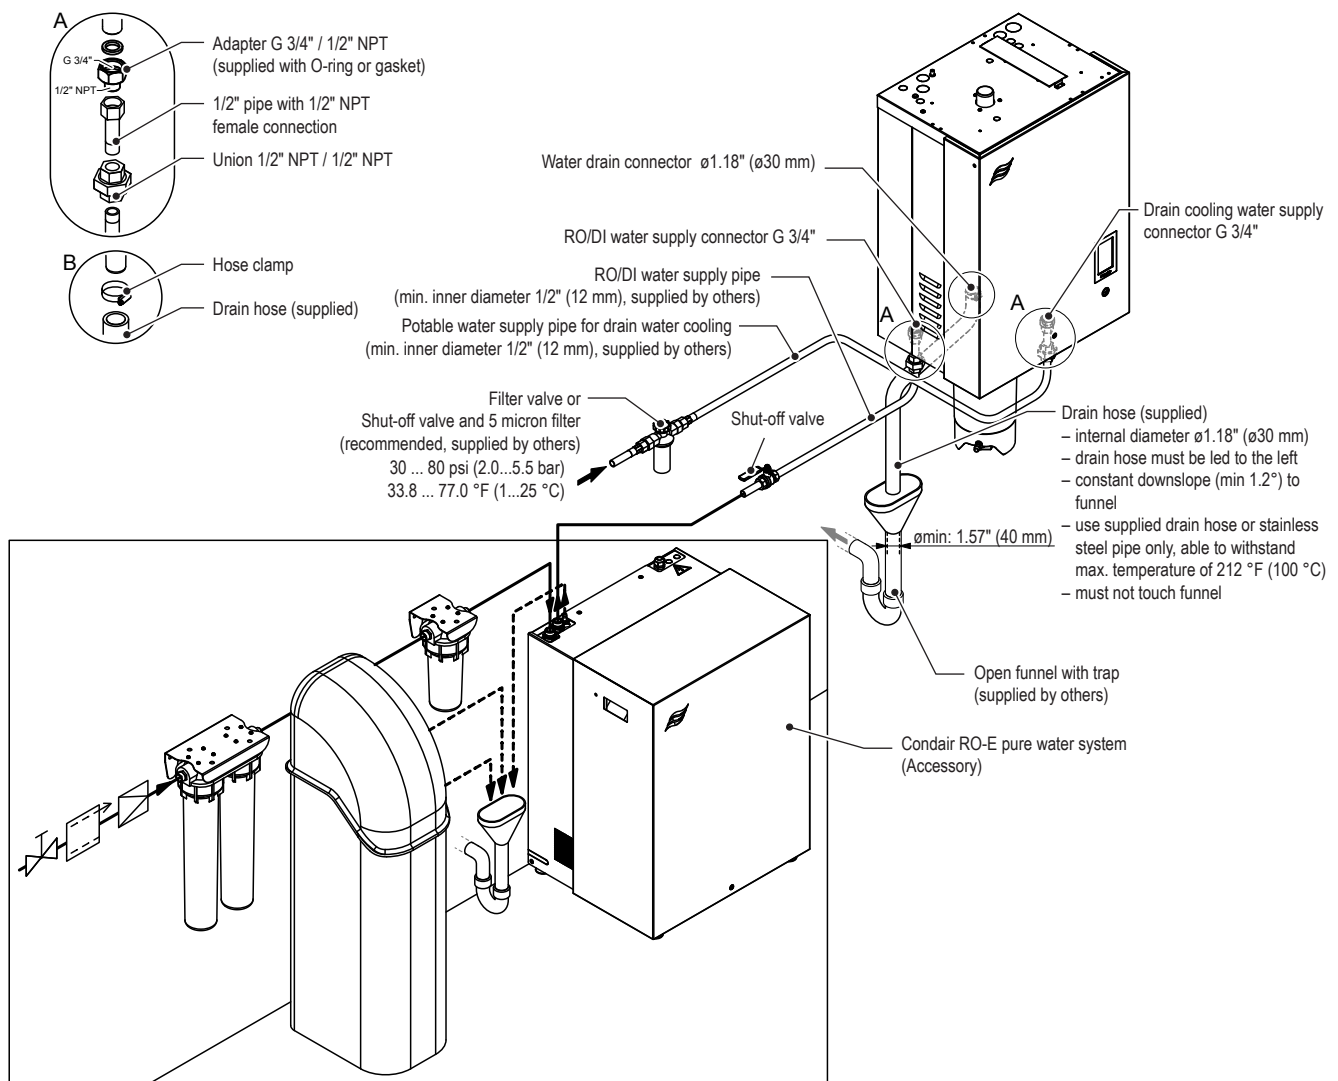


Fig. 19: Overview water installation for single units Small and Medium (with RS-RO option installed)

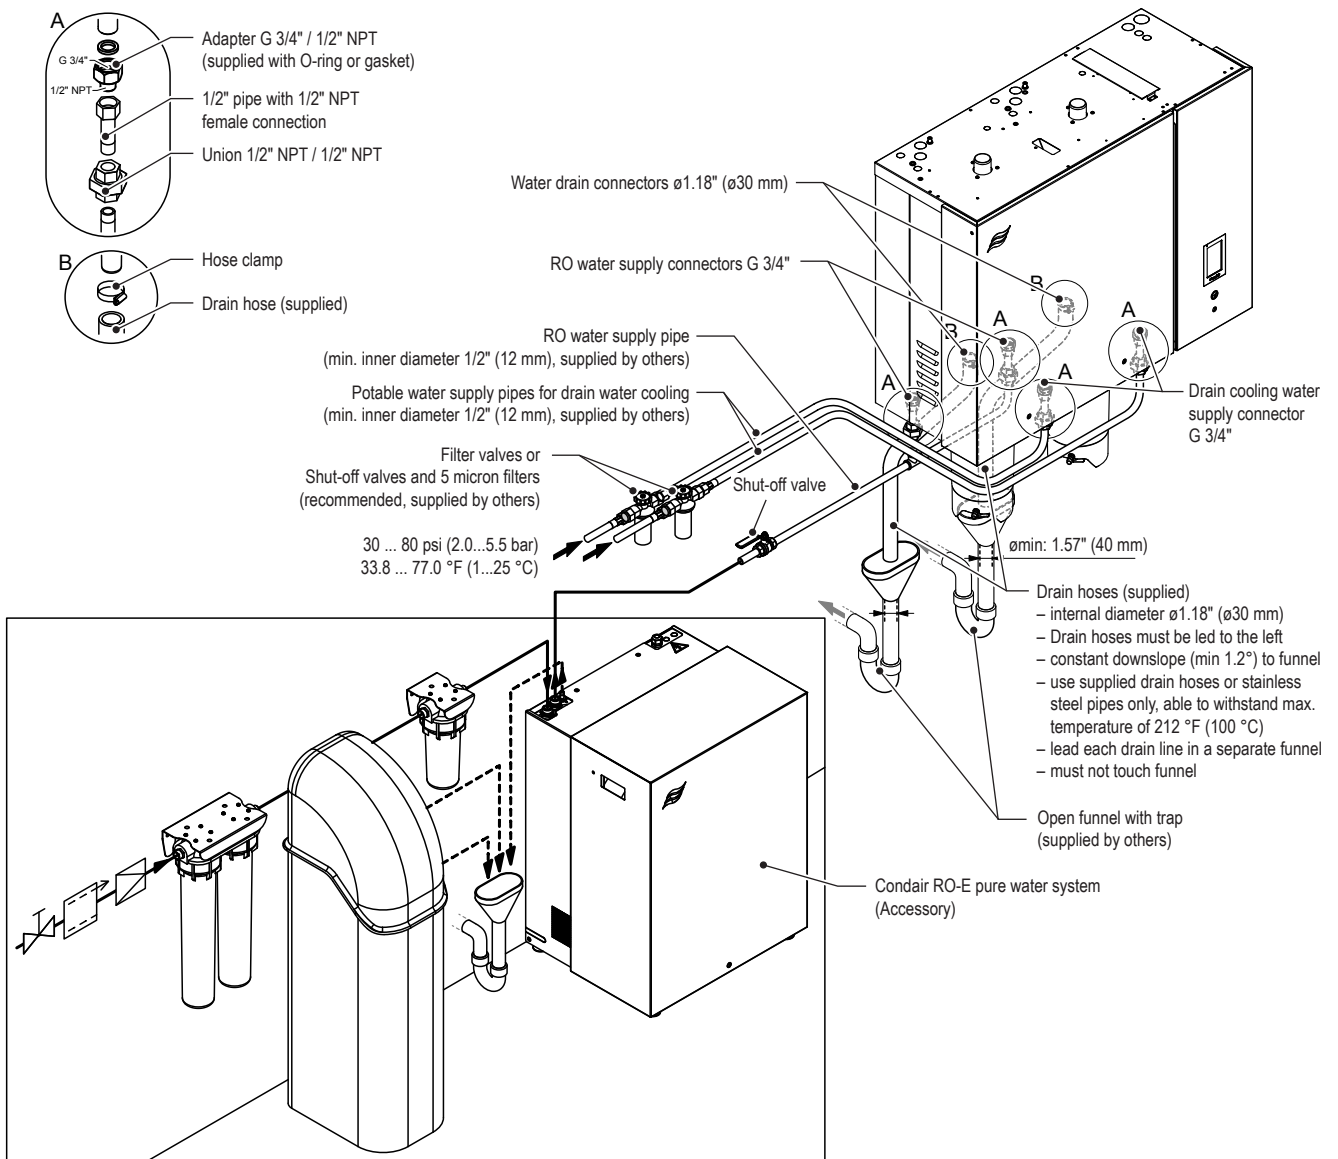


Fig. 20: Overview water installation for single units Large (with RS-RO option installed)

5.6.3 Notes on Water Installation

5.6.3.1 Water Supply (Potable, RO or DI water)

The water supply is to be carried out according to [Fig. 17](#) and [Fig. 18](#) or [Fig. 19](#) and [Fig. 20](#) and the applicable local regulations for water installations. The indicated connection specifications must be observed.

- The installation of a **filter valve** (alternatively a shut-off valve and a 5 micron water filter can be used) should be made as close as possible to the steam humidifier.
- Admissible mains pressure **30 ... 80 psi (2.1...5.5 bar)**
Pressure outside of the recommended range, the extra steps would be required to ensure the pressure is within the admissible range of 30-80 psi (2.1...5.5 bar):
 - For mains pressures > 145.0 psi (>10 bar), the connection must be made via a pressure reducing valve (adjusted to 30.0 psi (2.1 bar)).
 - For mains pressures <30.0 psi (2.1 bar) please contact your Condair supplier.

Note: The water supply system must be free of pressure bumps (**hammer-free**). The installation of a check valve in the water supply line is therefore not permitted, as this can lead to pressure bumps in the water system and damage the inlet valve. If a pipe disconnect is to be installed in the inlet water system, a model with overpressure protection must be installed. If water hammers cannot be avoided in the supply line, a pressure shock absorber must be installed.

- Supply rates:

| RS | Max. fill rates |
|--------|---------------------------------|
| Small | 3.70 gal/min (14 l/min) |
| Medium | 3.70 gal/min (14 l/min) |
| Large | 2 x 3.70 gal/min (2 x 14 l/min) |

- **Notes on water quality:**
 - For the water supply of the Condair RS, use exclusively **potable drinking water in accordance with the applicable local regulations** or water from a RO system or de-ionized water system.
 - The use of **additives** such as corrosion inhibitors, disinfectants, etc. is **not allowed**, since these additives may endanger health and affect proper operation.
 - Conductivity should be between 1 and 1500 µS/cm. Note that conductivity less than 1 µS/cm is very aggressive water (this is equivalent to a resistivity of 1 MΩ or greater). It is recommended to blend such water with other less-treated water to ensure the supply is not overly aggressive.
 - Hardness should be between 0 and 12 grains/gallon.
 - Silica content should be between 0 and 12 ppm.
 - pH should be between 6.5 and 7.5.
 - Chloride content should be between 0 and 50 ppm.
- The connection material must be **pressure-proof** and **certified for use in drinking water systems**. When connected to a RO or DI water source, use only installation materials that are acceptable for the treated water.
- **Important!** Before connecting the water line(s), **the line(s) must be well flushed out.**



CAUTION!

The thread at the humidifier connection is made of plastic. To avoid overtightening, the adapter and the union nut of the water pipe must be **tightened by hand** only.

5.6.3.2 Additional Requirements for RS-RO Option Water Supply

With the RS-RO option installed the water supply and the drain cooling water supply are to be carried out according to [Fig. 19](#) and [Fig. 20](#) and the applicable local regulations for water installations. The indicated connection specifications must be observed.

– **RO water supply:**

- The RO water supply must be connected to the inlet connector(s) according to [Fig. 19](#) and [Fig. 20](#). Use only installation material that is approved for RO or DI water to connect the RO-E pure water system to the Condair RS. All water supply requirements outlined in [Section 5.6.3.1](#) must also be adhered to with the RO or DI water supply.

Note: Detailed information regarding the installation of the RO-E pure water system can be found in the separate installation and operation manual of the Condair RO-E.

– **Drain cooling water supply:**

The separate drain cooling water supply must be connected to the optional drain water cooling inlet valve(s) provided with the RS-RO option according to [Fig. 19](#) and [Fig. 20](#). Please observe the following notes regarding the drain cooling water supply installation.

- Admissible mains pressure **30 ... 80 psi (2.1...5.5 bar)**

For mains pressures > 145.0 psi (>10 bar), the connection must be made via a pressure reducing valve (adjusted to 30.0 psi (2.1 bar)). For mains pressures <30.0 psi (2.1 bar) please contact your Condair supplier.

Note: The water supply system must be free of pressure bumps (**hammer-free**). The installation of a check valve in the water supply line is therefore not permitted, as this can lead to pressure bumps in the water system and damage the inlet valve. If a pipe disconnect is to be installed in the inlet water system, a model with overpressure protection must be installed. If water hammers cannot be avoided in the supply line, a pressure shock absorber must be installed.

- Supply rates:

| RS with RS-RO option | Max. fill rates | |
|-------------------------|---------------------------------|---------------------------------|
| | Inlet RO | Drain water cooling (potable) |
| Small | 0.35 gal/min (1.4 l/min) | 3.70 gal/min (14 l/min) |
| Medium | 0.53 gal/min (2.0 l/min) | 3.70 gal/min (14 l/min) |
| Large | 2 x 0.53 gal/min (2x 2.0 l/min) | 2 x 3.70 gal/min (2 x 14 l/min) |

– **Notes on water quality:**

- For the drain cooling water supply, use exclusively **potable drinking water in accordance with the applicable local regulations**.
- The use of **additives** such as corrosion inhibitors, disinfectants, etc. is **not allowed**.
- The connection material must be **pressure-proof** and **certified for use in drinking water systems**.
- **Important!** Before connecting the water line, **the line must be well flushed out**.



CAUTION!

The thread at the humidifier connection(s) is/are made of plastic. To avoid overtightening, the adapter(s) and the union nut(s) of the water pipe must be **tightened by hand only**.

5.6.3.3 Water Drain

The water drain is to be carried out according to the figures found in [Section 5.6.1](#) and the applicable local regulations for water installations. The indicated connection specifications must be observed.

- Draining rate: approx. 6.7 gal/min (25.4 l/min) per 33.07 lbs/hr (15 kg/h) steam capacity
- Under normal operation drain water is tempered to 140 °F, however in some circumstances, water as hot as 212 °F may be discharged. Plumbing materials must be rated for at least 212 °F (100 °C)!
- When operating the Condair RS with RO water use only installation material that is approved for RO water.
- Make sure that the drain pipes, the funnel(s) and the siphon(s) are correctly fixed and easily accessible for inspections and cleaning purposes.
- Always lead the supplied drain hose from the connector to the left down to the funnel (see [Fig. 17](#)).

On large units with two steam cylinders each drain line must be led into a separate funnel with trap (see [Fig. 18](#)).

- Attach drain line(s) in such a way, that it/they cannot slip out of the funnel(s) and that it/they cannot bottom out in the funnel(s).
- The open end of the drain line(s) must not touch the funnel(s) (min. air gap 1" (2.5 cm)).

5.6.4 Inspecting the Water Installation

Check the following topics:

- Water supply
 - Has filter valve or shut-off valve and 5 µm water filter respectively been installed in supply line to each unit module?
 - Has acceptable water pressure (30 ... 80 psi (2.1...5.5 bar)) and acceptable water temperature 33.8 ... 77.0 °F (1...25 °C)) been connected?
 - Does the water supply capacity match the humidifier and is the minimum inside diameter of the supply pipe maintained throughout the entire length (min. internal diameter of 1/2" (12 mm) for systems with optional drain water cooling recommended)?
 - Are all components and pipes properly secured and are all threaded connections securely tightened?
 - Is the water system properly sealed?
 - Does the water supply installation meet the requirements of the local regulations for water installations?
 - For RO or DI water supply: Has installation material been approved for use with treated water?
- Water Supply (with RS-RO option installed)
 - RO water supply:
 - Has RO-E pure water system been installed according to the notes in the separate Condair RO-E installation and operation manual.
 - Has RO water supply been connected to the water inlet connector according to [Fig. 19](#) and [Fig. 20](#) and has installation material been used approved for use with RO water?

- Drain cooling water supply (potable drinking water):
 - Has filter valve or shut-off valve and 5 µm water filter respectively been installed in supply line to each unit module?
 - Has acceptable water pressure (30 ... 80 psi (2.1...5.5 bar)) and acceptable water temperature 33.8 ... 77.0 °F (1...25 °C) been connected?
 - Does the drain cooling water supply capacity match the humidifier and is the minimum inside diameter of the supply pipe maintained throughout the entire length (min. internal diameter of 12 mm for systems with optional drain water cooling recommended)?
 - Are all components and pipes properly secured and are all threaded connections securely tightened?
 - Is the drain cooling water system properly sealed?
 - Does the drain cooling water supply installation meet the requirements of the local regulations for water installations?
- Water Drain
 - Is the minimum inside diameter of the drain pipe(s) of ø1.18" (30 mm) maintained throughout the entire length?
 - Has/have drain pipe(s) been installed with a downslope of at least 1.2°?
 - Has the heat resistance of the material used been verified to be at least 212 °F (100 °C)?
 - If the Condair RS is operated with RO or DI water: Has installation material been used approved for the treated water?
 - Is/are the drain hose(s) properly secured (hose clamps at unit connection tightened)?
 - Is there an air gap (min. 1" (2.5 cm)) between the open end of the drain line and the funnel?
 - Does the water drain installation meet the requirements of the local regulations for water installations?

5.7 Notes on Humidity Control Systems/Humidity Control

5.7.1 Control Device Locations

The following schematic describes a potential system setup with respect to control devices.

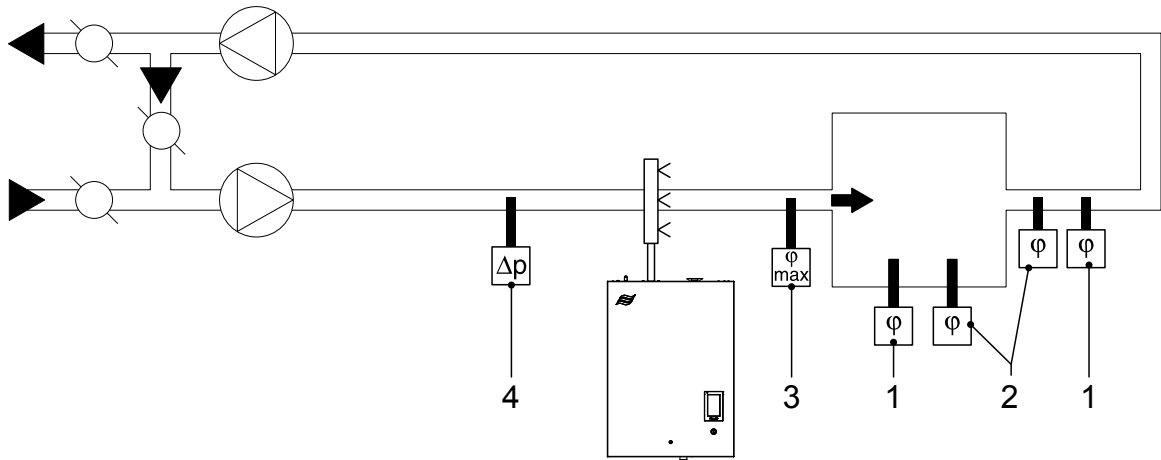


Fig. 21: System Setup Schematic

- 1 Humidistat
- 2 Humidity sensor
- 3 High limit humidistat
- 4 Air proving switch

Notes:

- Locate the air proving switch in the same duct as the humidifier’s distributor so that it can sense air flow (or lack thereof).
- Locate the high limit humidistat downstream of the humidifier’s distributor so that it can sense a duct that is over-humidified. Recommended setting is 85% RH. Locate it downstream of the distributor at least 5x the absorption distance. If the absorption distance is not known, locate at least 10 feet (3m) downstream of the distributor. Can be a humidistat (modulating or On/Off), or a humidity sensor.
- Humidity sensors and humidistats can be modulating or On/Off. Preferred location is in the return duct, as the supply air is well mixed with the room air at this location. Avoid placing near discharge diffuser, near doorways, in sunlight, or in airflow “dead-zones”.

5.7.2 Admissible Control Signals

| Control with external controller Control signals | Control with internal PI controller Humidity sensor signals |
|---|--|
| 0...5 VDC | 0...5 VDC |
| 1...5 VDC | 1...5 VDC |
| 0...10 VDC (Potentiometer 140 Ω ... 10 kΩ) | 0...10 VDC (Potentiometer 140 Ω ... 10 kΩ) |
| 2...10 VDC | 2...10 VDC |
| 0...20 VDC | 0...20 VDC |
| 0...16 VDC | 0...16 VDC |
| 3.2...16 VDC | 3.2...16 VDC |
| 0 ... 20 mA | 0 ... 20 mA |
| 4 ... 20 mA | 4 ... 20 mA |
| Digital signals (building automation) | Digital signals (building automation) |
| Humidistat (24 V On/Off) | |

5.8 Electrical Installation

5.8.1 Notes on Electrical Installation



DANGER!
Danger of electric shock

The Condair RS is mains powered. Live parts may be exposed when the unit is open. Touching live parts may cause severe injury or danger to life.

Prevention: The Condair RS unit must be connected to the mains only after all mounting and installation work has been completed, all installations have been checked for correct workmanship and the unit is closed and properly locked.



CAUTION!

The electronic components inside the unit are very sensitive to electrostatic discharge. Before carrying out installations work inside the unit, appropriate measures must be taken to protect the electronic components against damage caused by electrostatic discharge (ESD protection).

- All work concerning the electrical installation must be performed only by **skilled and qualified technical personnel (e.g. electrician with appropriate training) authorized by the owner**. It is the owner's responsibility to verify proper qualification of the personnel.
- The electrical installation must be carried out according to the corresponding wiring diagram (see [Sections 5.8.2 and 5.8.3](#)), the notes on electrical installation as well as the applicable local regulations. All information given in the wiring diagrams and notes must be followed and observed.
- All cables must be lead into the unit, via appropriate cable strain relief or grommets. The cable for the heating voltage supply must be lead into the unit from the bottom via the cable opening equipped with the clamp. Fix the cable with the clamp strap.
- Make sure the cables are adequately clamped, do not rub on any components or become a tripping hazard.
- Observe and maintain maximum cable length and required cross section per wire according to local regulations.
- The mains supply voltages (heating and control voltage supply) must match the respective voltage stated on the specification label.

5.8.2 Wiring Diagram Condair RS - Small and Medium Units

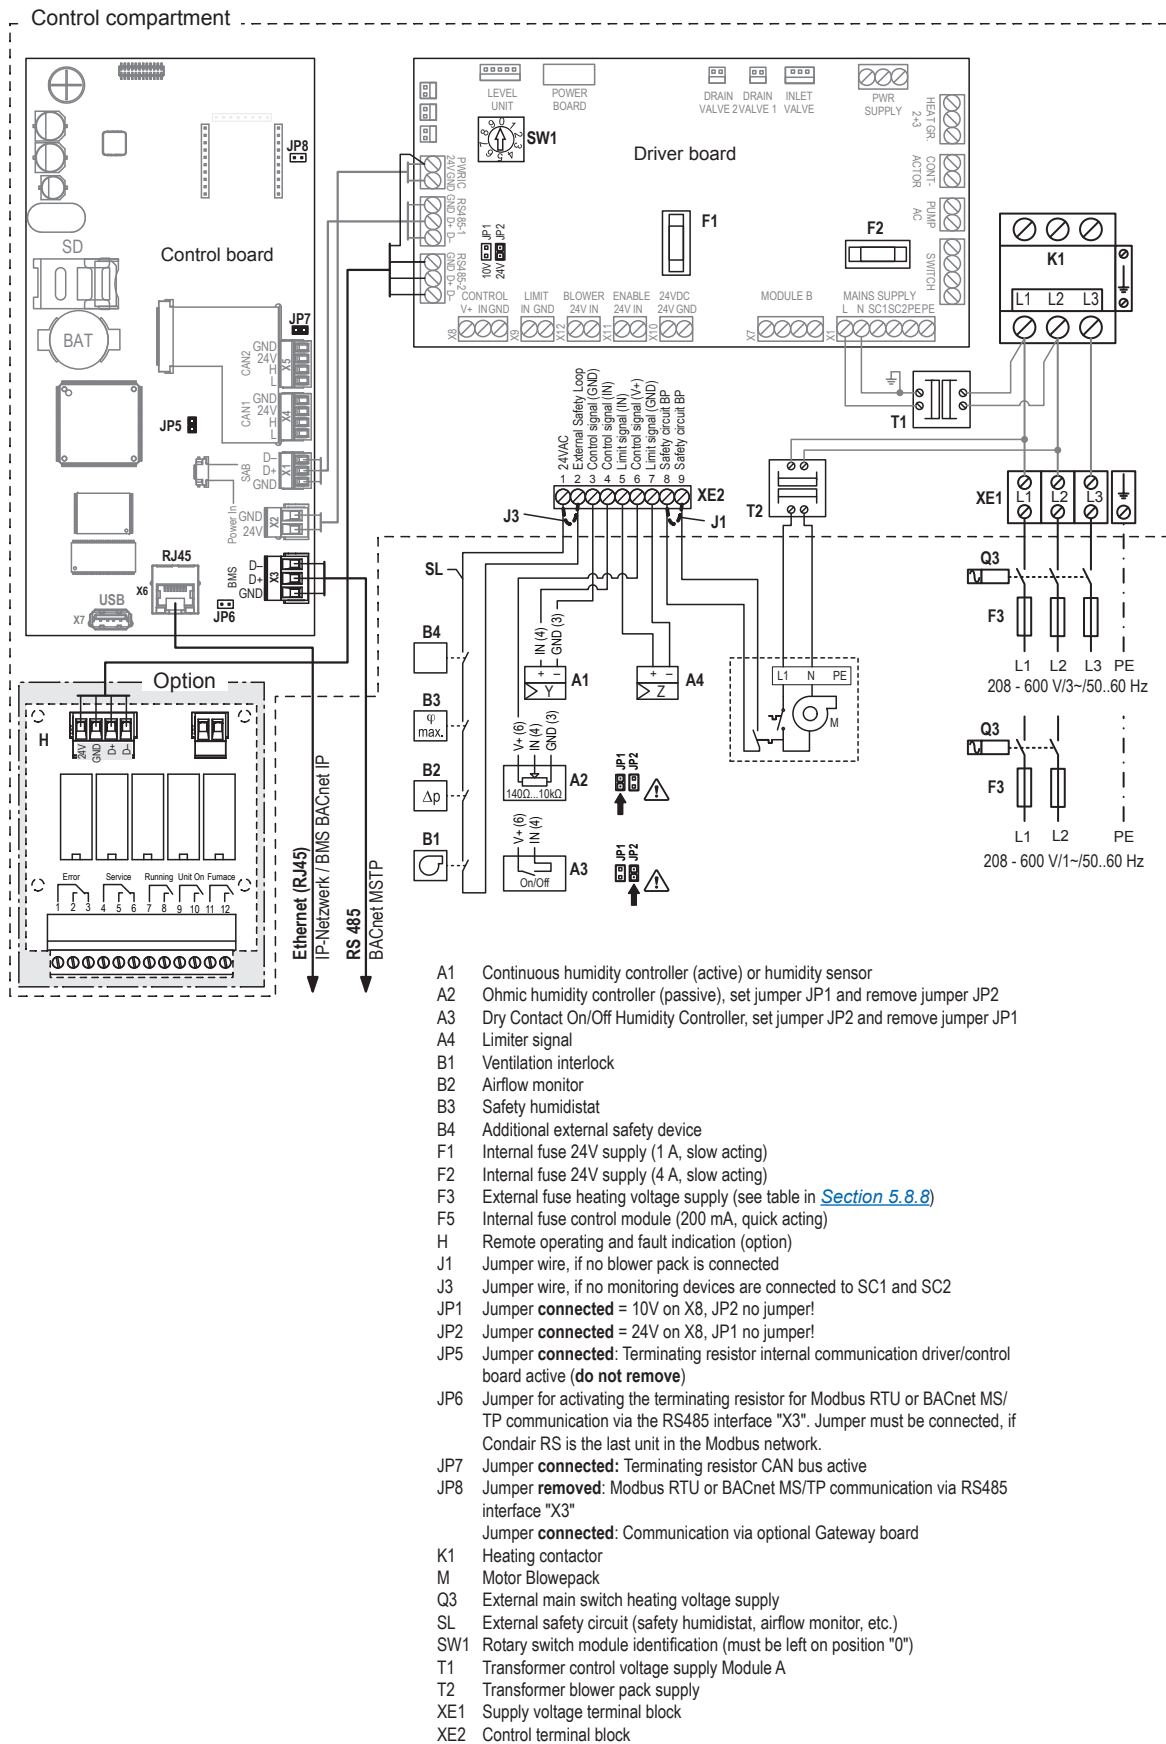


Fig. 22: Wiring Diagram Condair RS - Single Units Small and Medium

5.8.3 Wiring Diagram Condair RS - Large Units

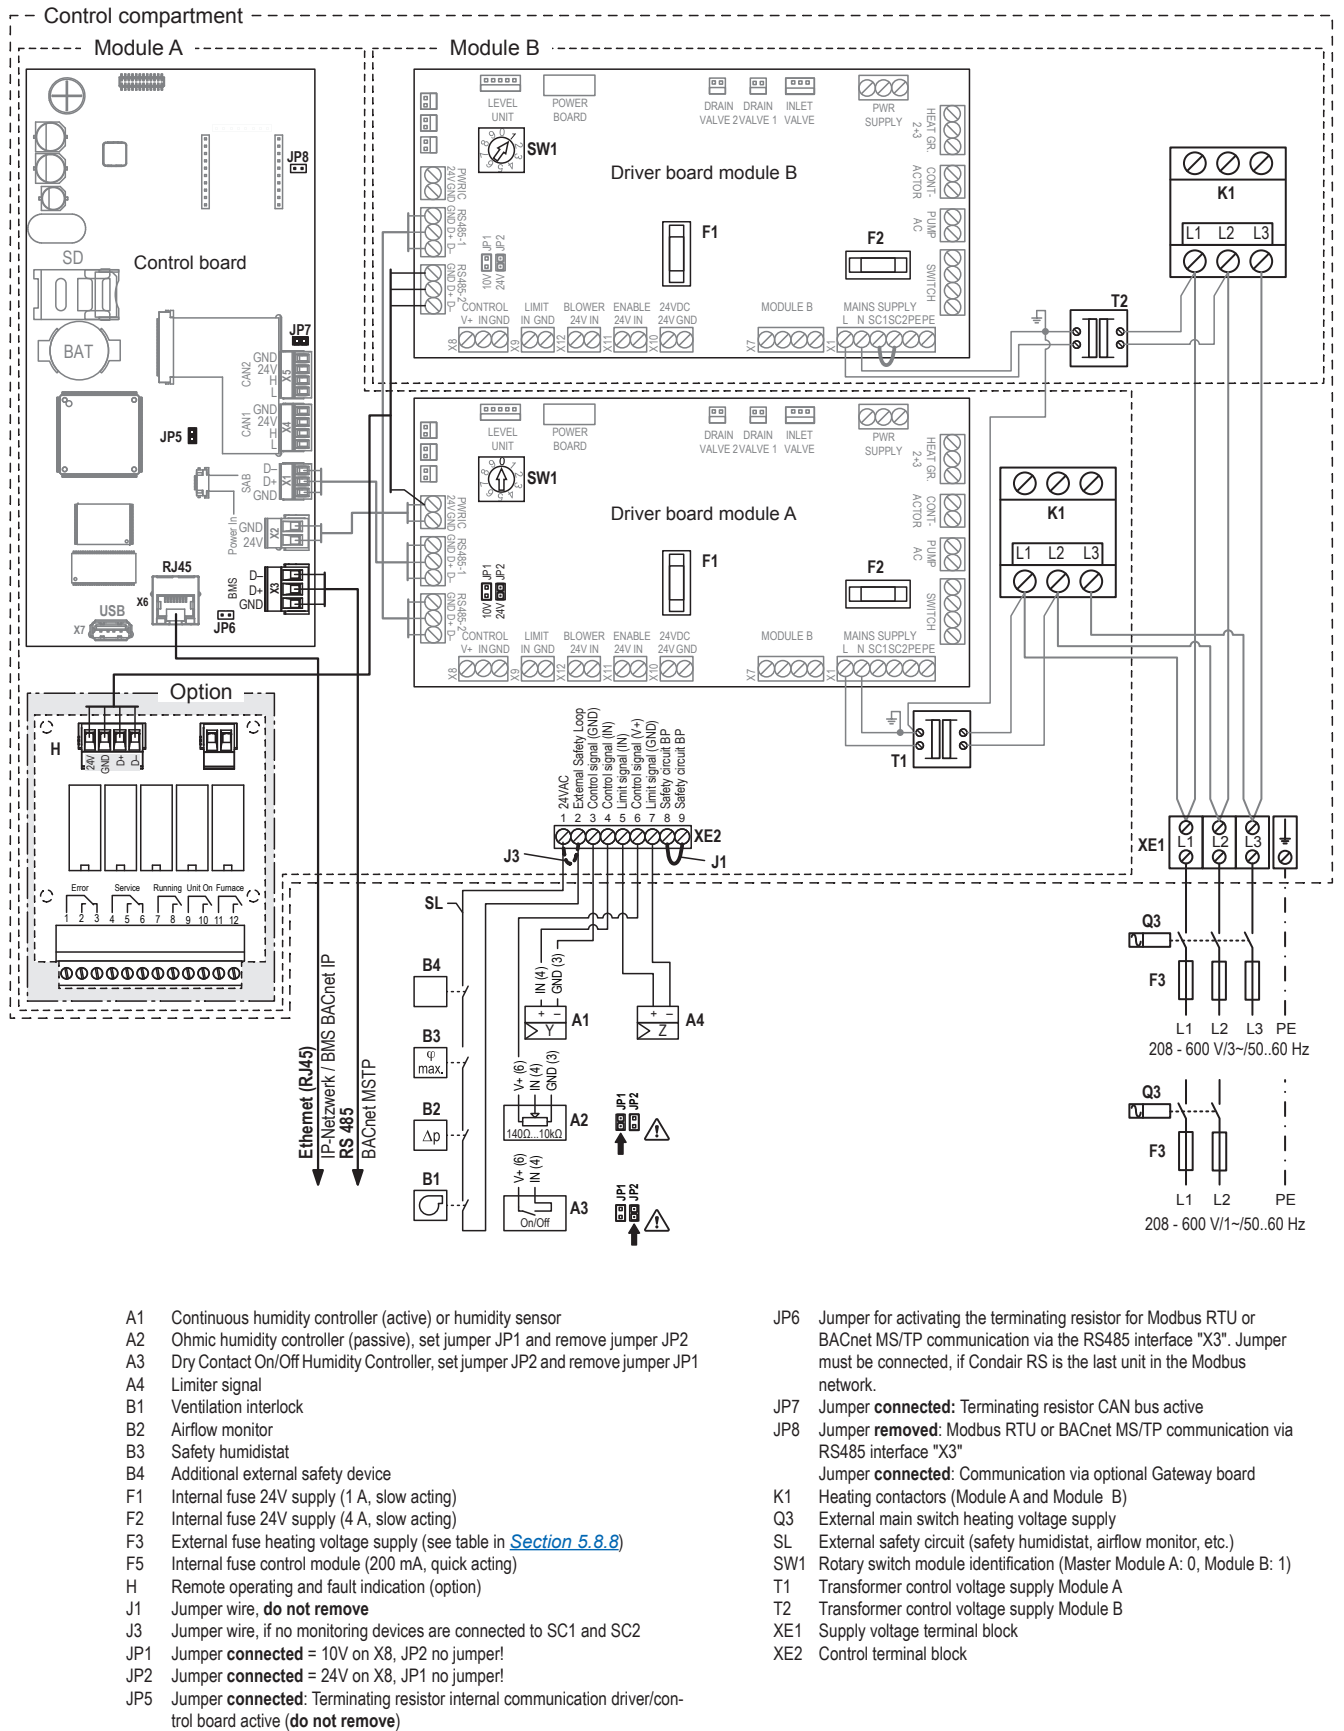


Fig. 23: Wiring Diagram Condair RS - Large Units

5.8.4 Principle Wiring Diagram Device Interconnected Systems

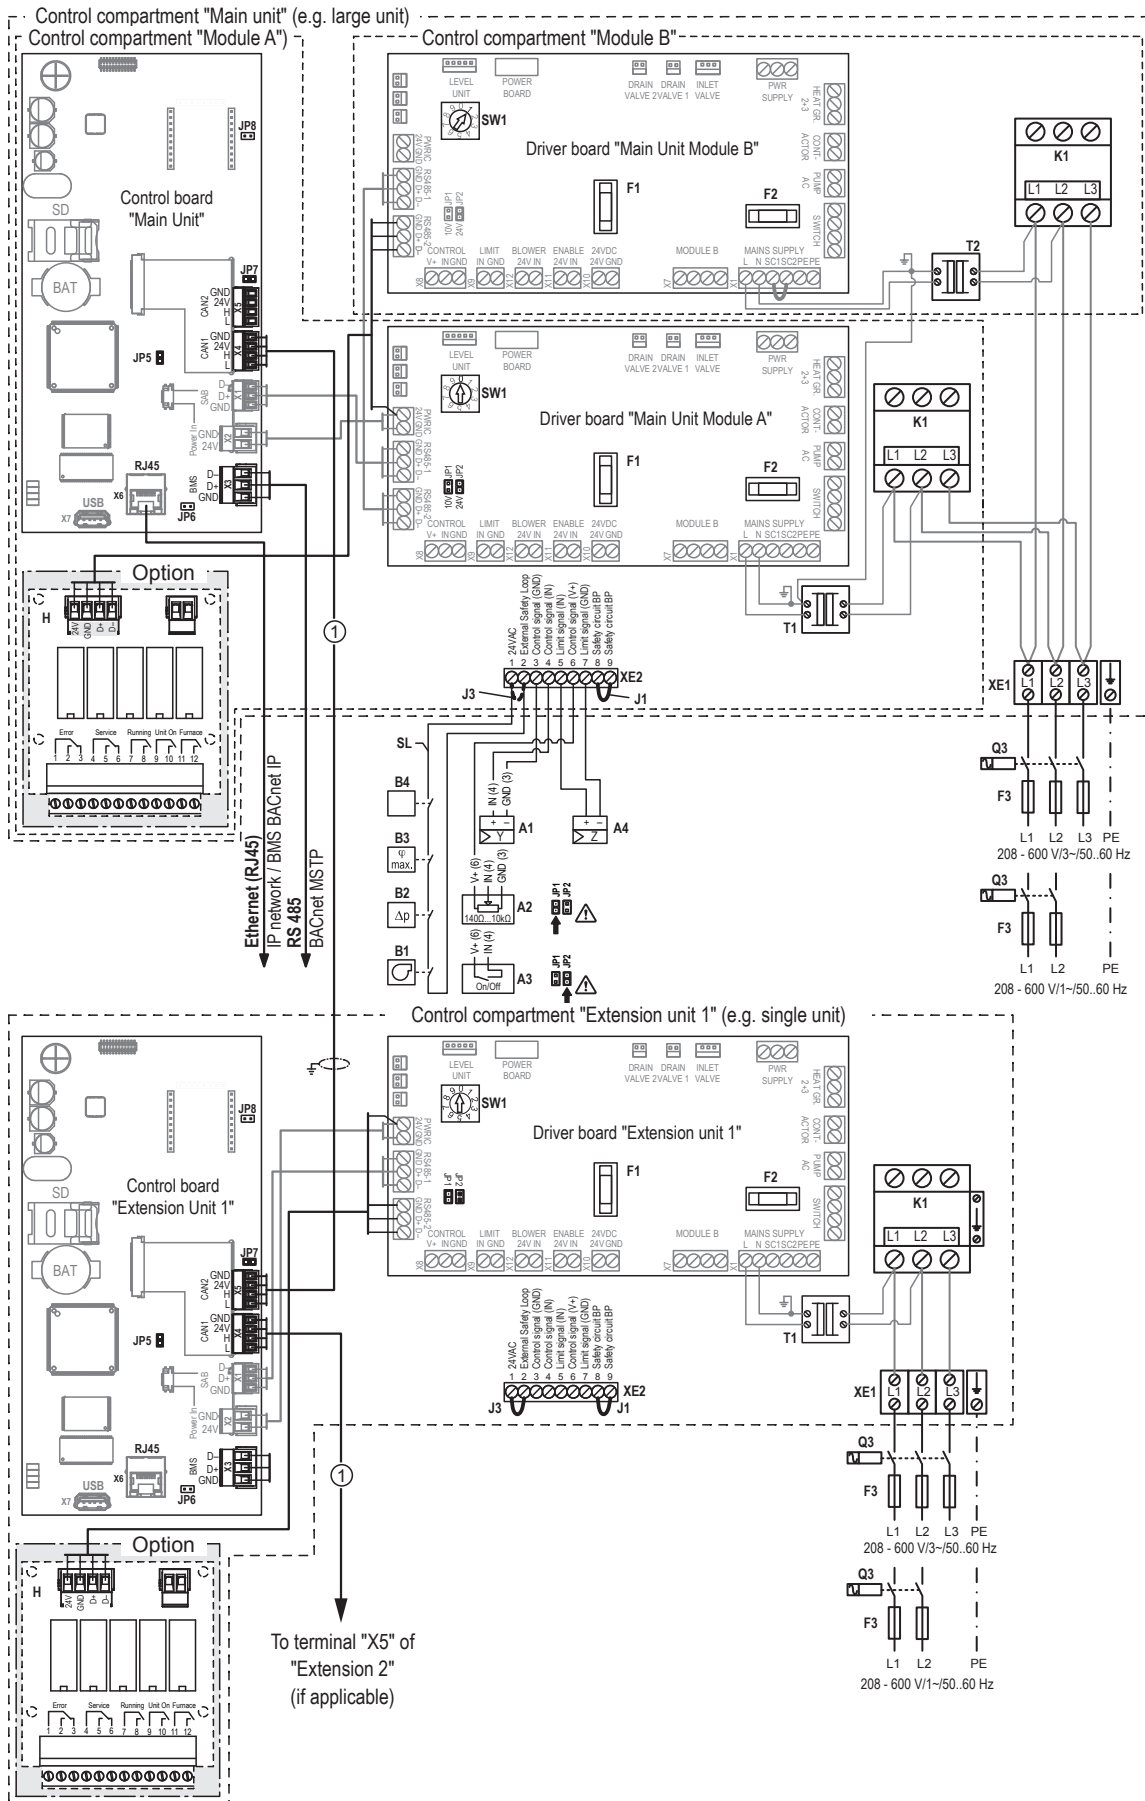


Fig. 24: Principle wiring diagram device interconnected systems

Legend


- A1 Continuous humidity controller (active) or humidity sensor
 - A2 Ohmic humidity controller (passive), set jumper JP1 and remove jumper JP2
 - A3 Dry Contact On/Off Humidity Controller, set jumper JP2 and remove jumper JP1
 - A4 Limiter signal
 - B1 Ventilation interlock
 - B2 Airflow monitor
 - B3 Safety humidistat
 - B4 Additional external safety device
 - F1 Internal fuse 24V supply (1 A, slow acting)
 - F2 Internal fuse 24V supply (4 A, slow acting)
 - F3 External fuse heating voltage supply (see table in [Section 5.8.8](#))
 - F5 Internal fuse control module (200 mA, quick acting)
 - H Remote operating and fault indication (option)
 - J1 Jumper wire, **do not remove**
 - J3 Jumper wire, if no monitoring devices are connected to SC1 and SC2
 - JP1 Jumper **connected** = 10V on X8, JP2 no jumper!
 - JP2 Jumper **connected** = 24V on X8, JP1 no jumper!
 - JP5 Jumper **connected**: Terminating resistor internal communication driver/control board active (**do not remove**)
 - JP6 Jumper for activating the terminating resistor for Modbus RTU or BACnet MS/TP communication via the RS485 interface "X3". Jumper must be connected, if Condair RS is the last unit in the Modbus network.
 - JP7 Jumper **connected**: Terminating resistor CAN bus active
Make sure that the jumper "JP7" on the control board of the two devices with the longest physical connection (cable length) is connected.
 - JP8 Jumper **removed**: Modbus RTU or BACnet MS/TP communication via RS485 interface "X3"
Jumper **connected**: Communication via optional Gateway board
 - K1 Heating contactors (Main unit module A / Main unit module B and Extension unit 1 module A)
 - Q3 External main switch heating voltage supply
 - SL External safety circuit (safety humidistat, airflow monitor, etc.)
 - SW1 Rotary switch module identification (Master Module A: 0, Module B: 1)
 - T1 Transformer control voltage supply Module A
 - T2 Transformer control voltage supply Module B
 - XE1 Supply voltage terminal block
 - XE2 Control terminal block
- 1 Device Interconnection Cable - 2.5 m (not supplied with the unit)
2614036 - Device Interconnection Cable 2.5 m
2614037 - Device Interconnection Cable 6 m

5.8.5 Installation Work External Connections

| Connecting the external safety loop | |
|-------------------------------------|---|
| | <p>The potential-free contacts of external monitoring devices (e.g. ventilation interlock (B1), airflow monitor (B2), safety high limit humidistat (B3), additional external safety device (B4), etc.) are connected in series (safety loop "SL") to the terminals "1" and "2" of the control terminal block "XE2" inside the control compartment in accordance with the wiring diagram.</p> <p>Detailed information on connecting the monitoring devices can be found in the separate instructions for these devices.</p> <p>The connecting cables must be led through cable glands into the control compartment.</p> <p>Caution! A high limit humidistat is highly recommended to prevent risk of over-humidification and potential damage to property.</p> <p>Note: If, for whatever reason, no external monitoring devices are connected, a jumper wire "J3" must be installed on the contacts "1" and "2" of the control terminal block.</p> <p>CAUTION! Do not apply any extraneous voltage to contacts "1" and "2" via the contacts of the external monitoring devices.</p> |

| Connecting the demand or humidity signal | |
|--|--|
| | <p>The signal cable of an external controller or of a humidity sensor (if the internal P/Pi controller is used) are to be connected according to the wiring diagram to the terminals "3" (GND) and "4" (IN) of the control terminal block "XE2" inside the control compartment. The admissible signal values can be found in the technical data table in the operation manual. The connecting cable must be led through a cable gland into the control compartment.</p> <p>Note: The admissible humidity control signal values can be found in the technical data table in the operation manual.</p> <p>If a shielded signal cable is used, connect the shielding to terminal "3" (GND).</p> <p>Caution! If the shielding of the control signal is already connected to a potential or a grounded conductor, do not connect it to terminal "3" (GND).</p> <p>Ensure that JP1 is connected.</p> |

Ohmic humidity controller (passive)

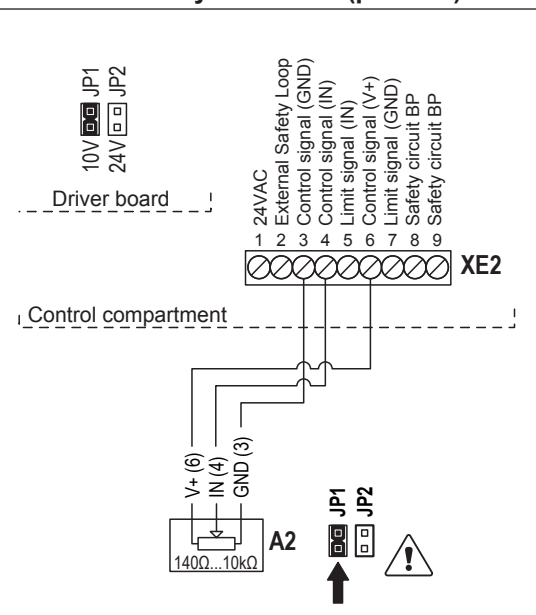


The signal cable of an ohmic humidity controller (140Ω...10kΩ) is to be connected according to the wiring diagram to the terminals "3" (GND), "4" (IN) and "6" (V+) of the control terminal block "XE2" inside the control compartment.

The connecting cable must be led through a cable gland into the control compartment.

Note: When connecting an ohmic humidity controller Jumper "JP2" must be removed and Jumper "JP1" must be connected on the driver board and the control signal type must be set to 0-10V in the control settings of the control software.

Dry Contact On/Off Humidity Controller

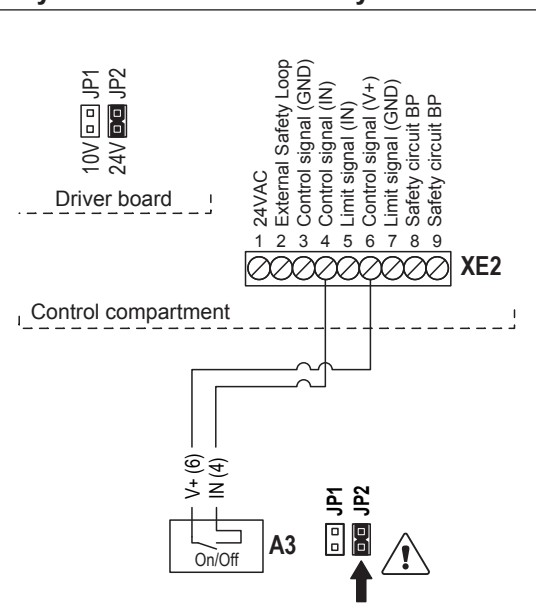


The signal cable of Dry Contact On/Off Humidity Controller is to be connected according to the wiring diagram to the terminals "4" (IN) and "6" (V+) of the control terminal block "XE2" inside the control compartment.

The connecting cable must be led through a cable gland into the control compartment.

Note: When connecting a Dry Contact On/Off Humidity Controller Jumper, "JP1" must be connected on the driver board and the control signal type must be set to 0-10V in the control setting of software.

Limiter signal

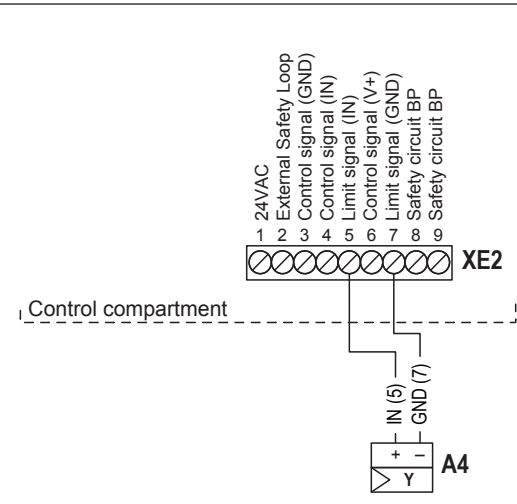


The signal cable of an external limiter (P/PI continuous controller) is to be connected according to the wiring diagram to the terminals "5" (Limit signal IN) and "7" (Limit signal GND) of the control terminal block "XE2" inside the control compartment .

The connecting cable must be led through a cable gland into the control compartment.

Note: The limiter must be activated and configured via the control software. The admissible limiter signal values can be found in the technical data table in the operation manual.

Connecting the remote operating and fault indication (Option)

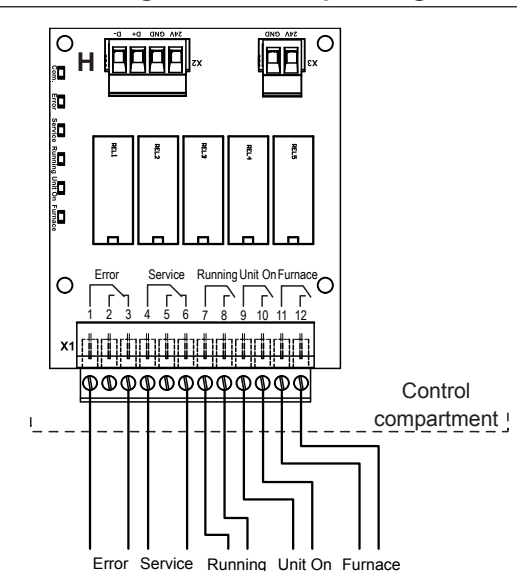

The optional remote operating and fault indication board contains five potential-free relay contacts for the connection of the following operating and fault indications:


- "Error" (Terminal 1 and 3):
This relay is activated if an error is present.
- "Service" (Terminals 4 and 6):
This relay is activated when the set maintenance interval has elapsed.
Note: this relay can be configured in the control software to close either when maintenance is required or when maintenance is required and when a warning is indicated.
- "Running" (Terminals 7 and 8):
This relay closes as soon as the Condair RS humidifies.
- "Unit on" (Terminals 9 and 10):
This relay closes as soon as the voltage supply to the Control compartment of the Condair RS is switched on.
- "Furnace" (Terminals 11 and 12):
This relay is activated when the "Furnace Fan" Option is activated and configured in the control software.

The connecting cable must be led through a cable gland or grommet into the control compartment.

The **maximum contact loading** is **250V/8A**.

Appropriate suppressor modules are to be used for the switching of relays and miniature contactors.

Connecting the voltage supply

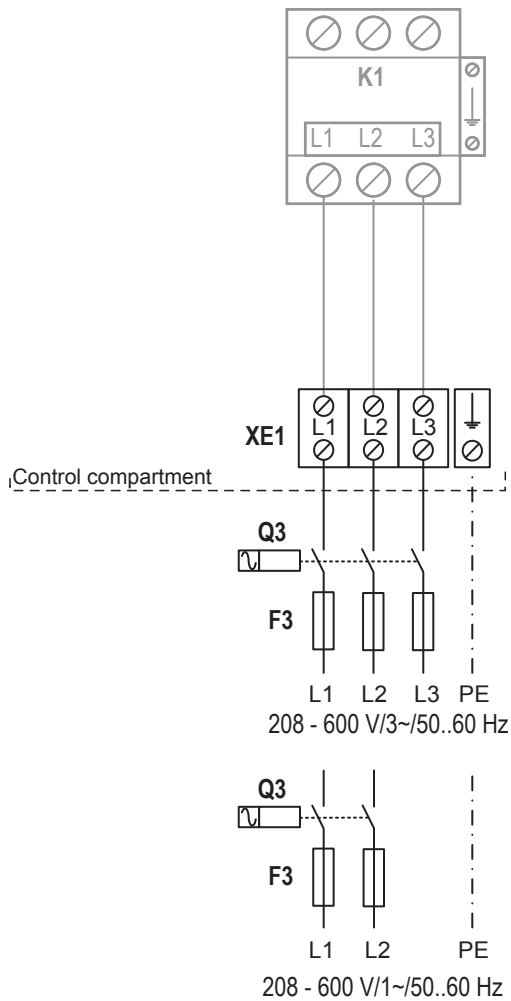

The **voltage supply** (L1, L2, L3 and PE or L1, L2 and PE) is to be connected in accordance with the wiring diagram to the corresponding terminals of the heating contactor in the control compartment. The earth conductor is to be connected to the earth terminal right beside the phase terminals. The supply wiring is to be fed into the unit via the clamp strap on the bottom of the unit.

The installation of the **fuses F3** and the **electrical isolator "Q3"** (all pole disconnecting device with a minimum contact clearance of 3 mm) in the mains supply line are mandatory.

Note: a table with the values for the fuses "F3" is to be found in [Section 5.8.8](#).

For safety reasons the additional installation of a residual current circuit breaker in the mains supply line (supplied by others) is recommended. However, the local electrical installation regulations must be observed and adhered to.

The electrical isolator must be mounted in direct proximity of the control compartment (max. distance 40" (1 m)) and must be easily accessible in a height between 24" (0.6 m) and 75" (1.9 m) (recommended: 67" (1.7 m)).

CAUTION! Make sure the voltage indicated on the specification label meets the local mains voltage. Otherwise, do not connect the unit.

The cross-section of the mains cable must comply with the applicable local regulations.

Connecting the Blower Pack BP

See separate documentation for blower pack BP.

5.8.6 Connecting multiple units (device interconnected system)

Up to 4 units (single or double units) can be interconnected to a so called "device interconnected system" via the CAN Bus connectors of the integrated controller (refer to [Fig. 24](#)).

Note: All the humidifiers within the device interconnected system must share the same environment and are controlled via the control signals connected to the main unit.

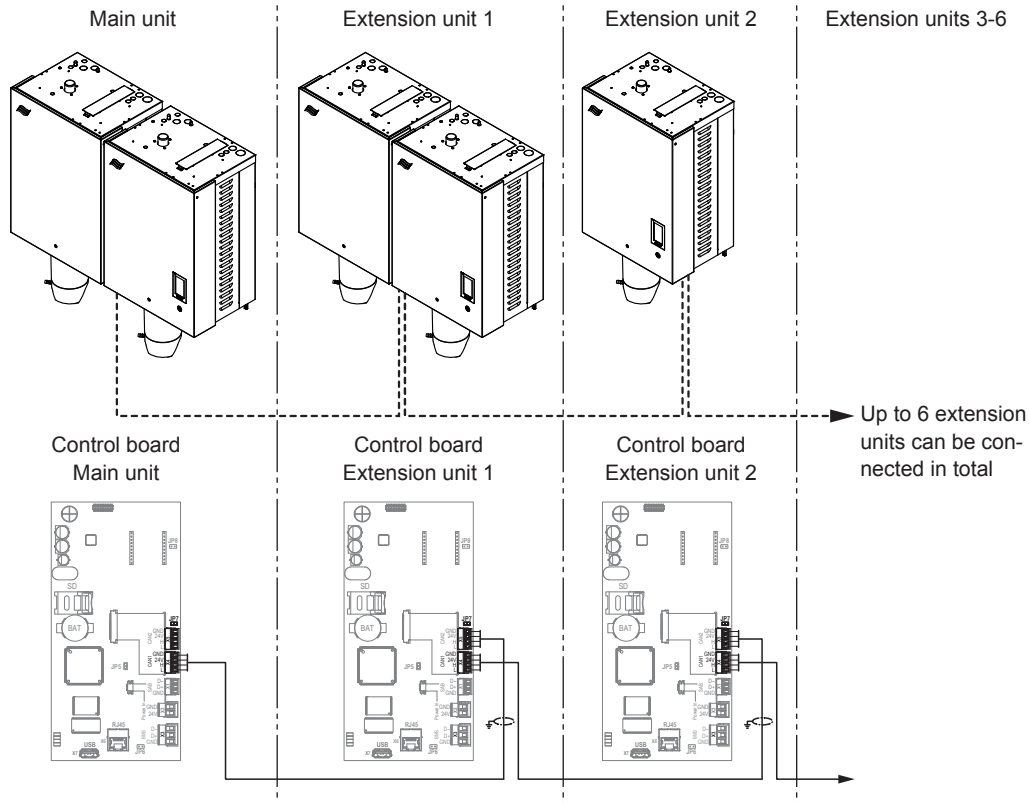


Fig. 25: Connecting multiple units (device interconnected system)

Connect multiple units as follows (see [Fig. 25](#)):

1. Connect all **control signals** for the entire "device interconnected system" to the corresponding terminals of the driver board in the **main unit** (see [Fig. 24](#)).
2. Connect all devices in the "device interconnected system" using the pre-assembled CAN Bus cables (not supplied with the unit) according to the diagram shown in [Fig. 25](#) and [Fig. 26](#).

Device Interconnection Cable Part Numbers:

2614036 - Device Interconnection Cable 2.5 m

2614037 - Device Interconnection Cable 6 m

- Lead the pre-assembled CAN Bus cable(s) from below via a cable gland into the control compartment of the Condair RS or the remote control unit (if applicable).
- Pinch the freed shielding of the pre-assembled CAN Bus cable coming from the previous device into the clamp holder inside the control compartment of the humidifier as shown in [Fig. 26](#).
- Connect CAN Bus cables to the corresponding terminal block (incoming cables to "X5" and outgoing cables to "X4") as shown in [Fig. 26](#) on the control board of each device.

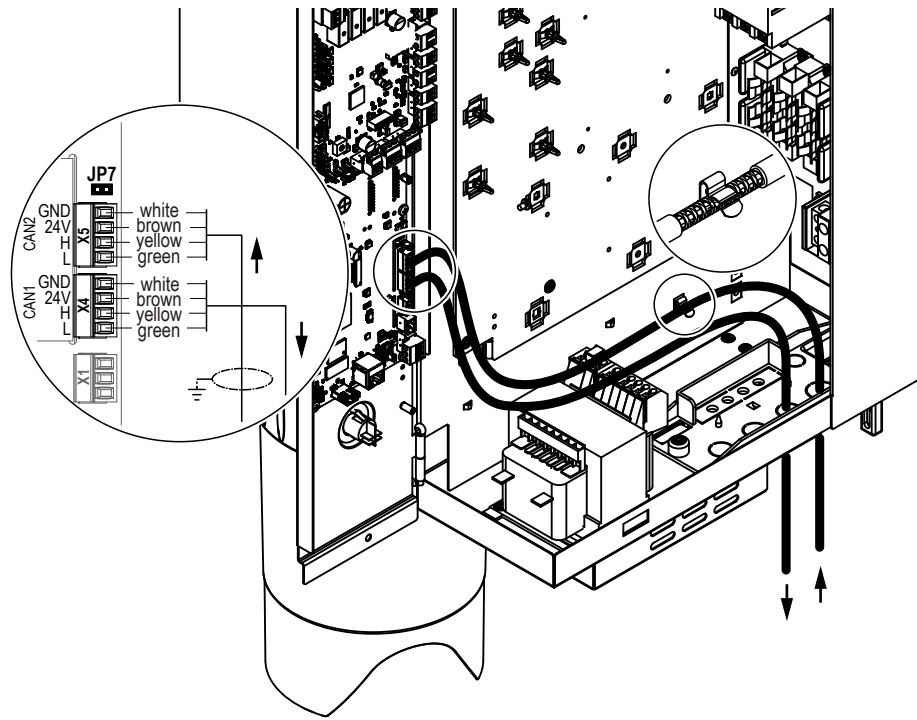


Fig. 26: CAN Bus cable connection / Shielding

3. Make sure that the jumper "JP7" on the control board of the two devices with the longest physical connection (cable length) is connected.
4. Finally, refer to the Condair RS operation manual to set up the configuration for device interconnected system in the control software.

5.8.7 Checking screws on high-voltage components

During installation and prior to commissioning, the screws on all high-voltage components (terminal blocks, contactors and SSRs) must be retightened according to the torque specifications listed below.

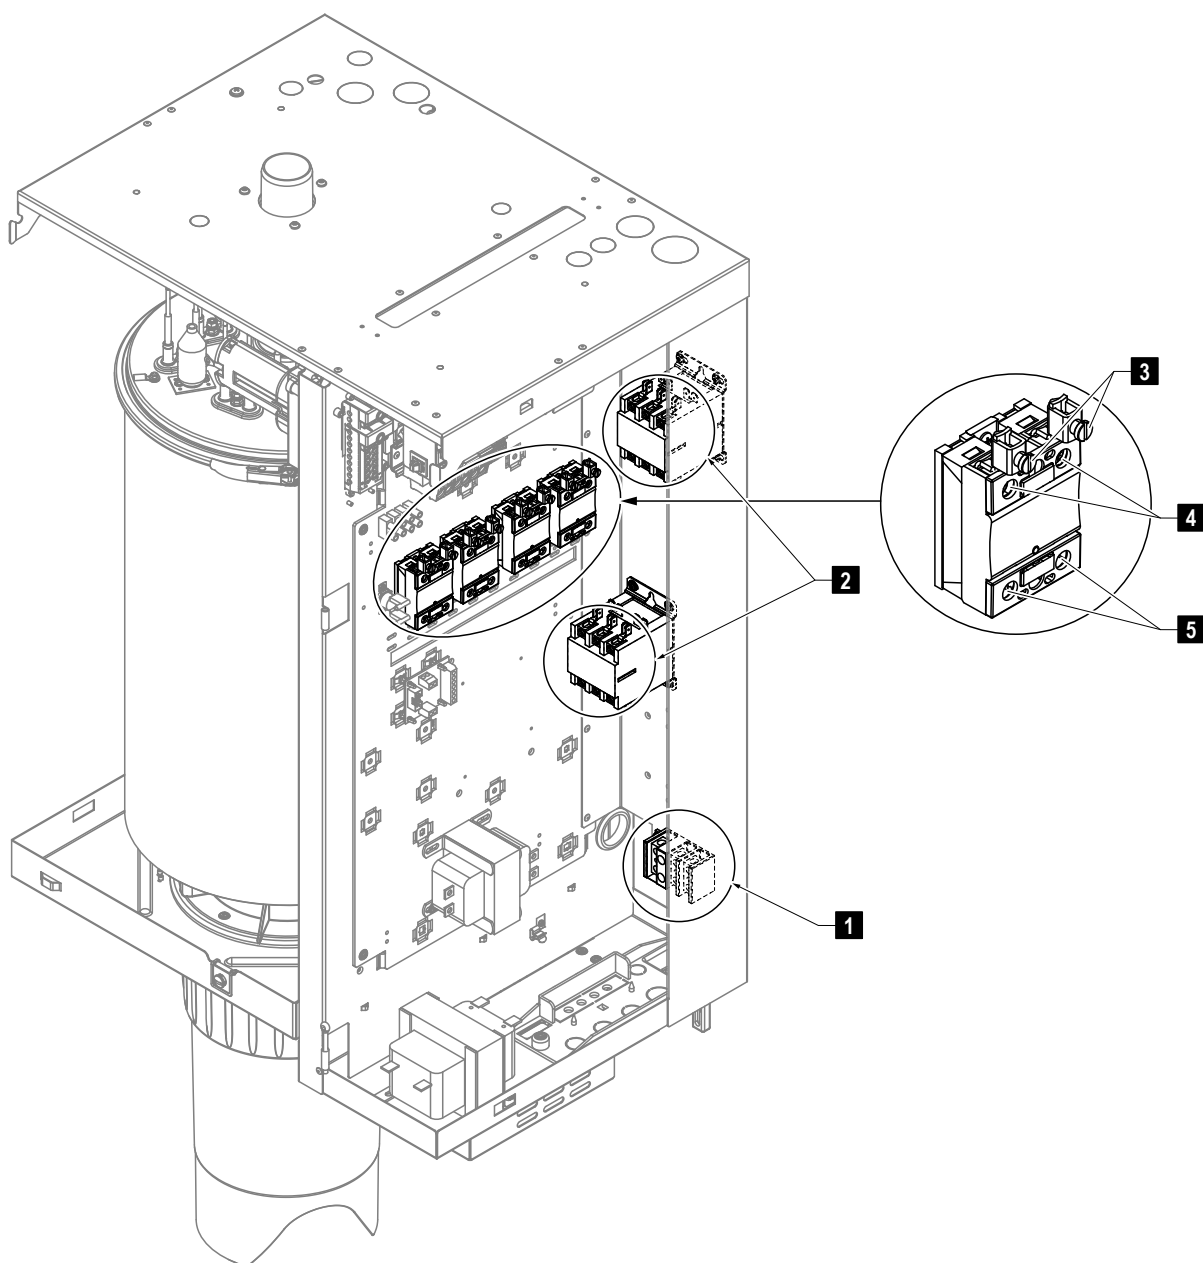


Fig. 27: Position of the screws on high-voltage components

| Type | Position | Torque (lb/in) |
|------------------|----------|----------------|
| Terminal block | 1 | 40 |
| Contactors | 2 | 40 |
| Lug | 3 | 20 |
| SSR primary side | 4 | 25 |
| SSR control side | 5 | 4.4 |

5.8.8 Performance data / Fuses "F3" Voltage Supply

| Condair RS | 208 V/1~/50...60 Hz | | | | 240 V/1~/50...60 Hz | | | | 480 V/1~/50...60 Hz | | | | 600 V/1~/50...60 Hz | | | | |
|---------------|-------------------------------------|------------------|------------------|---------------------------|-------------------------------------|------------------|----------------|---------------------------|-------------------------------------|------------------|----------------|---------------------------|-------------------------------------|------------------|------------------|---------------------------|----|
| | Max. steam capacity (lbs/hr (kg/h)) | Max. output (kW) | Max. Current (A) | Max. external fuse F3 (A) | Max. steam capacity (lbs/hr (kg/h)) | Max. output (kW) | AL min. in mm2 | Max. external fuse F3 (A) | Max. steam capacity (lbs/hr (kg/h)) | Max. output (kW) | AL min. in mm2 | Max. external fuse F3 (A) | Max. steam capacity (lbs/hr (kg/h)) | Max. output (kW) | Max. Current (A) | Max. external fuse F3 (A) | |
| S | 10 | 10.9 (4.9) | 3.7 | 17.8 | 25 | 10.9 (4.9) | 3.7 | 2.5 | 20 | 9.7 (4.4) | 3.3 | 2.5 | 15 | 11.4 (5.2) | 3.9 | 6.5 | 15 |
| | 15 | 15.9 (7.2) | 5.4 | 26 | 35 | 14.5 (6.6) | 4.9 | 4 | 30 | 14.1 (6.4) | 4.8 | 2.5 | 15 | 14.7 (6.7) | 5 | 8.3 | 15 |
| | 20 | 21.2 (9.6) | 7.2 | 34.7 | 45 | 21.2 (9.6) | 7.2 | 10 | 40 | 18.8 (8.5) | 6.4 | 2.5 | 20 | 19.6 (8.9) | 6.7 | 11.1 | 15 |
| M | 30 | 31.8 (14.4) | 10.8 | 52 | 70 | 31.8 (14.4) | 10.8 | 16 | 60 | 31.5 (14.3) | 10.7 | 4 | 30 | 31.4 (14.2) | 10.7 | 17.8 | 25 |
| | 45 | — | — | — | — | — | — | — | — | — | — | — | — | — | — | — | — |
| | 65 | — | — | — | — | — | — | — | — | — | — | — | — | — | — | — | — |
| | 90 | — | — | — | — | — | — | — | — | — | — | — | — | — | — | — | — |
| L | 90 | — | — | — | — | — | — | — | — | — | — | — | — | — | — | — | — |
| | 130 | — | — | — | — | — | — | — | — | — | — | — | — | — | — | — | — |
| | 180 | — | — | — | — | — | — | — | — | — | — | — | — | — | — | — | — |

| Condair RS | 208 V/3~/50...60 Hz | | | | 240 V/3~/50...60 Hz | | | | 480 V/3~/50...60 Hz | | | | 600 V/3~/50...60 Hz | | | | |
|---------------|-------------------------------------|------------------|------------------|---------------------------|-------------------------------------|------------------|------------------|---------------------------|-------------------------------------|------------------|------------------|---------------------------|-------------------------------------|------------------|------------------|---------------------------|-----|
| | Max. steam capacity (lbs/hr (kg/h)) | Max. output (kW) | Max. Current (A) | Max. external fuse F3 (A) | Max. steam capacity (lbs/hr (kg/h)) | Max. output (kW) | Max. Current (A) | Max. external fuse F3 (A) | Max. steam capacity (lbs/hr (kg/h)) | Max. output (kW) | Max. Current (A) | Max. external fuse F3 (A) | Max. steam capacity (lbs/hr (kg/h)) | Max. output (kW) | Max. Current (A) | Max. external fuse F3 (A) | |
| S | 10 | 10.9 (4.9) | 3.7 | 10.3 | 15 | 10.9 (4.9) | 3.7 | 8.9 | 15 | 11.3 (5.1) | 3.8 | 4.6 | 15 | 4.6 | 3.8 | 3.6 | 15 |
| | 15 | 15.9 (7.2) | 5.4 | 15 | 20 | 14.5 (6.6) | 4.9 | 11.9 | 15 | 14.6 (6.6) | 5 | 6 | 15 | 6.0 | 6 | 5.8 | 15 |
| | 20 | 21.2 (9.6) | 7.2 | 20 | 25 | 21.2 (9.6) | 7.2 | 17.3 | 25 | 19.4 (8.8) | 6.6 | 7.9 | 15 | 7.9 | 7.7 | 7.4 | 15 |
| M | 30 | 28.8 (13.1) | 9.8 | 27.2 | 35 | 31.8 (14.4) | 10.8 | 26 | 35 | 31.5 (14.3) | 10.7 | 12.9 | 20 | 12.9 | 10.7 | 10.3 | 15 |
| | 45 | 47.7 (21.6) | 16.2 | 45 | 60 | 47.9 (21.7) | 16.1 | 38.7 | 50 | 45.2 (20.5) | 15.4 | 18.5 | 25 | 18.5 | 16 | 15.4 | 20 |
| | 65 | 71.6 (32.5) | 24.3 | 67.5 | 90 | 71.9 (32.6) | 24.1 | 58 | 80 | 63.0 (28.6) | 21.4 | 25.8 | 35 | 25.8 | 24 | 23.1 | 30 |
| | 90 | — | — | — | — | — | — | — | — | 94.6 (42.9) | 32.1 | 38.7 | 125 | 38.7 | 32 | 30.8 | 100 |
| L | 90 | 95.4 (43.3) | 32.4 | 90 | 50 | 94.6 (42.9) | 32.2 | 77.4 | 40 | — | — | — | — | — | — | — | — |
| | 130 | 143.2 (65.0) | 48.6 | 135 | 175 | 141.8 (64.3) | 48.2 | 116 | 150 | 126.0 (57.2) | 42.8 | 51.6 | 70 | 141.2 (64.1) | 48 | 46.2 | 60 |
| | 180 | — | — | — | — | — | — | — | — | 189.2 (85.8) | 64.2 | 77.3 | 100 | 188.6 (85.5) | 64 | 61.7 | 80 |

5.8.9 Inspecting the Electrical Installation

Check the following points:

- Does the supply voltage comply with the voltage stated on the specification label?
- Is the voltage supply correctly fused?
- Are all components correctly connected according to the wiring diagram?
- Are all connecting cables fastened?
- Are the connecting cables free of tension (passed through cable glands?)
- Does the electric installation meet the applicable local regulations for electric installations?
- Have the screws on all high-voltage components been checked for correct tightening according [Section 5.8.7](#)?
- Is the unit reassembled correctly and the front panel fixed with the screw?

6 Appendix

6.1 Unit Dimensions

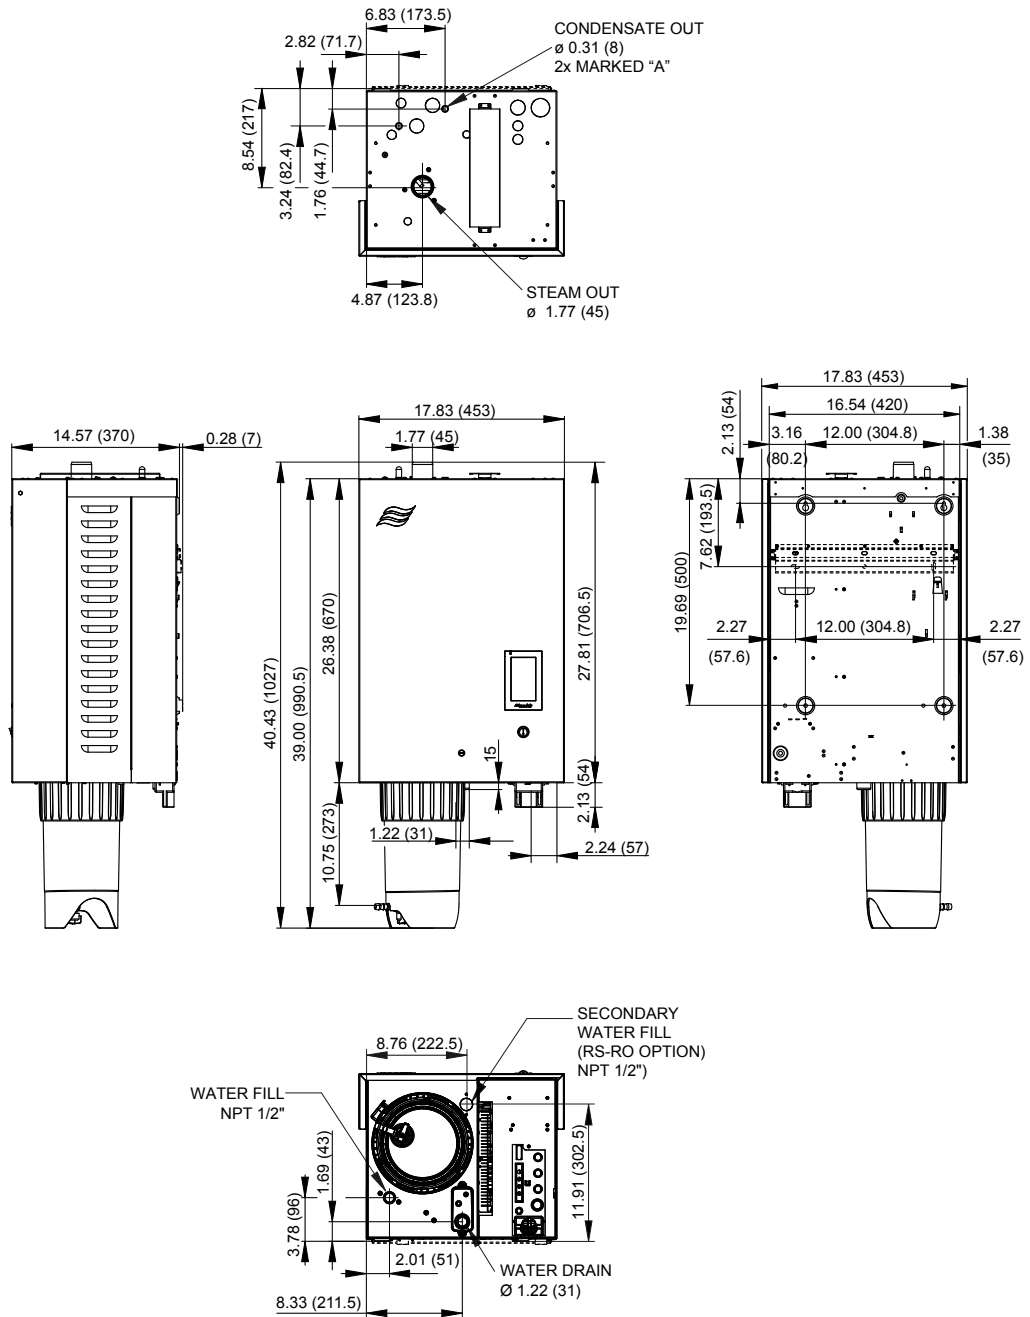


Fig. 28: Unit dimensions unit "Small" - dimensions in Inch (mm)

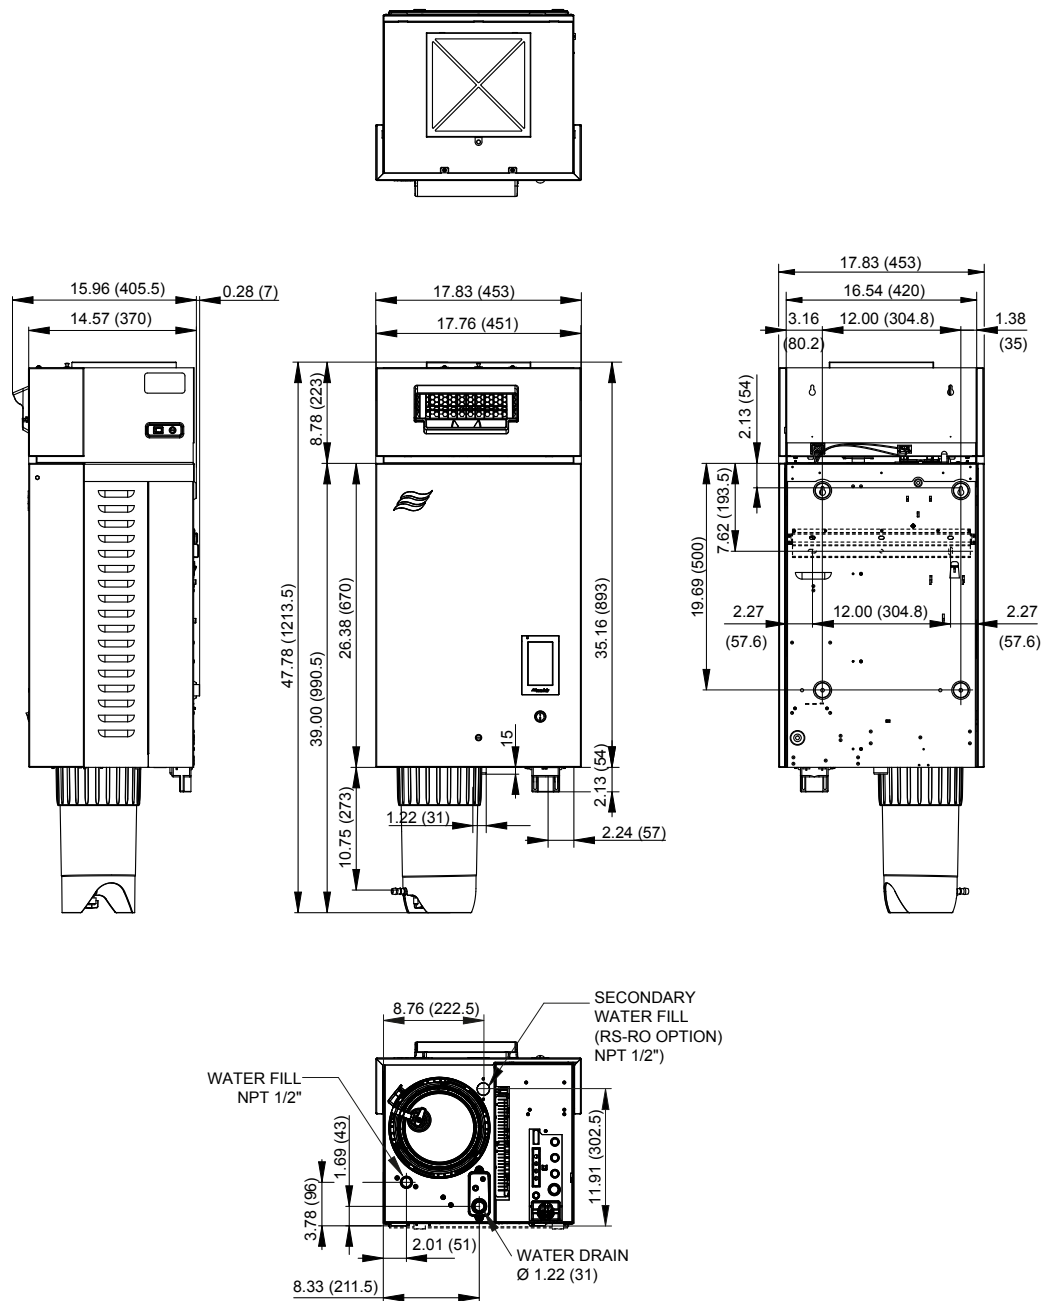


Fig. 29: Unit dimensions unit "Small" with blower pack - dimensions in Inch (mm)

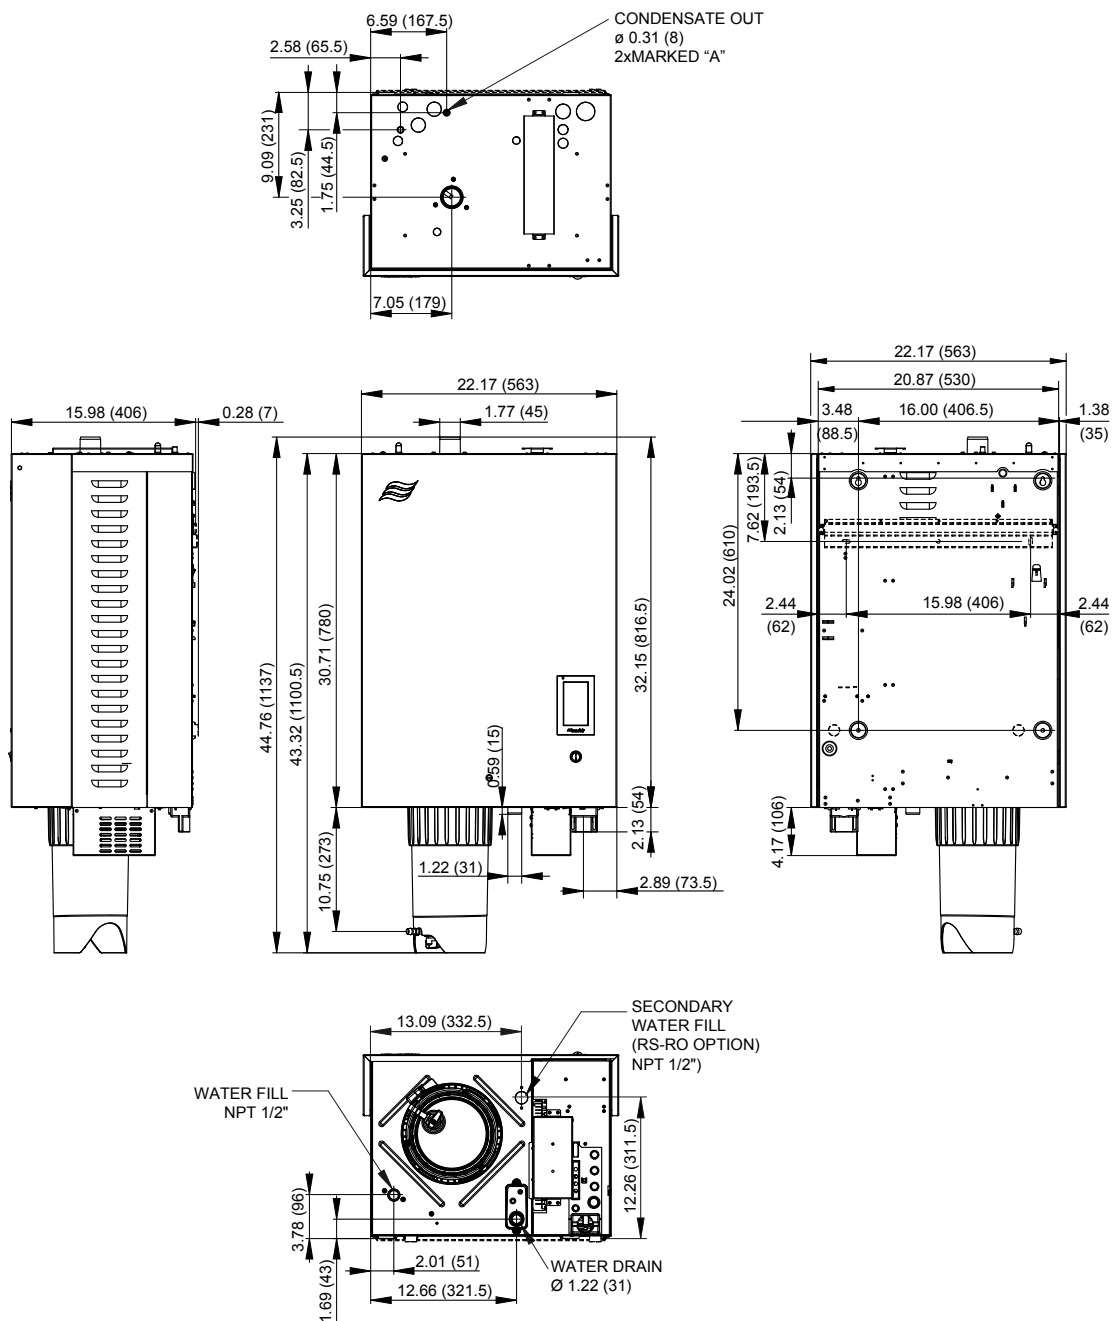


Fig. 30: Unit dimensions unit "Medium" - dimensions in Inch (mm)

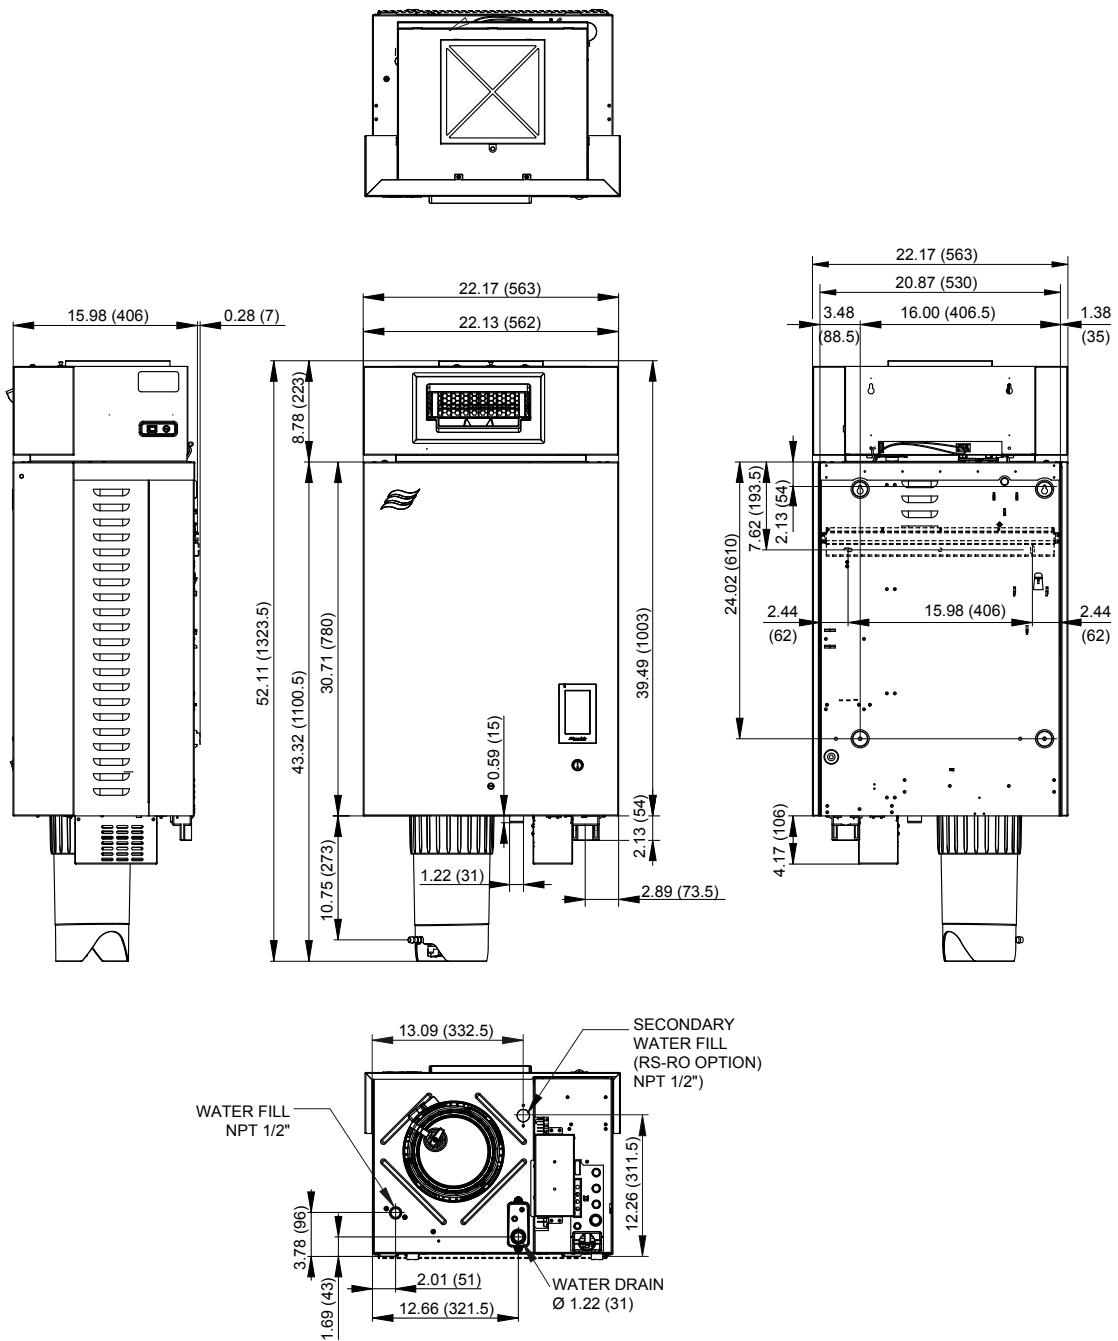


Fig. 31: Unit dimensions unit "Medium" with blower pack - dimensions in Inch (mm)


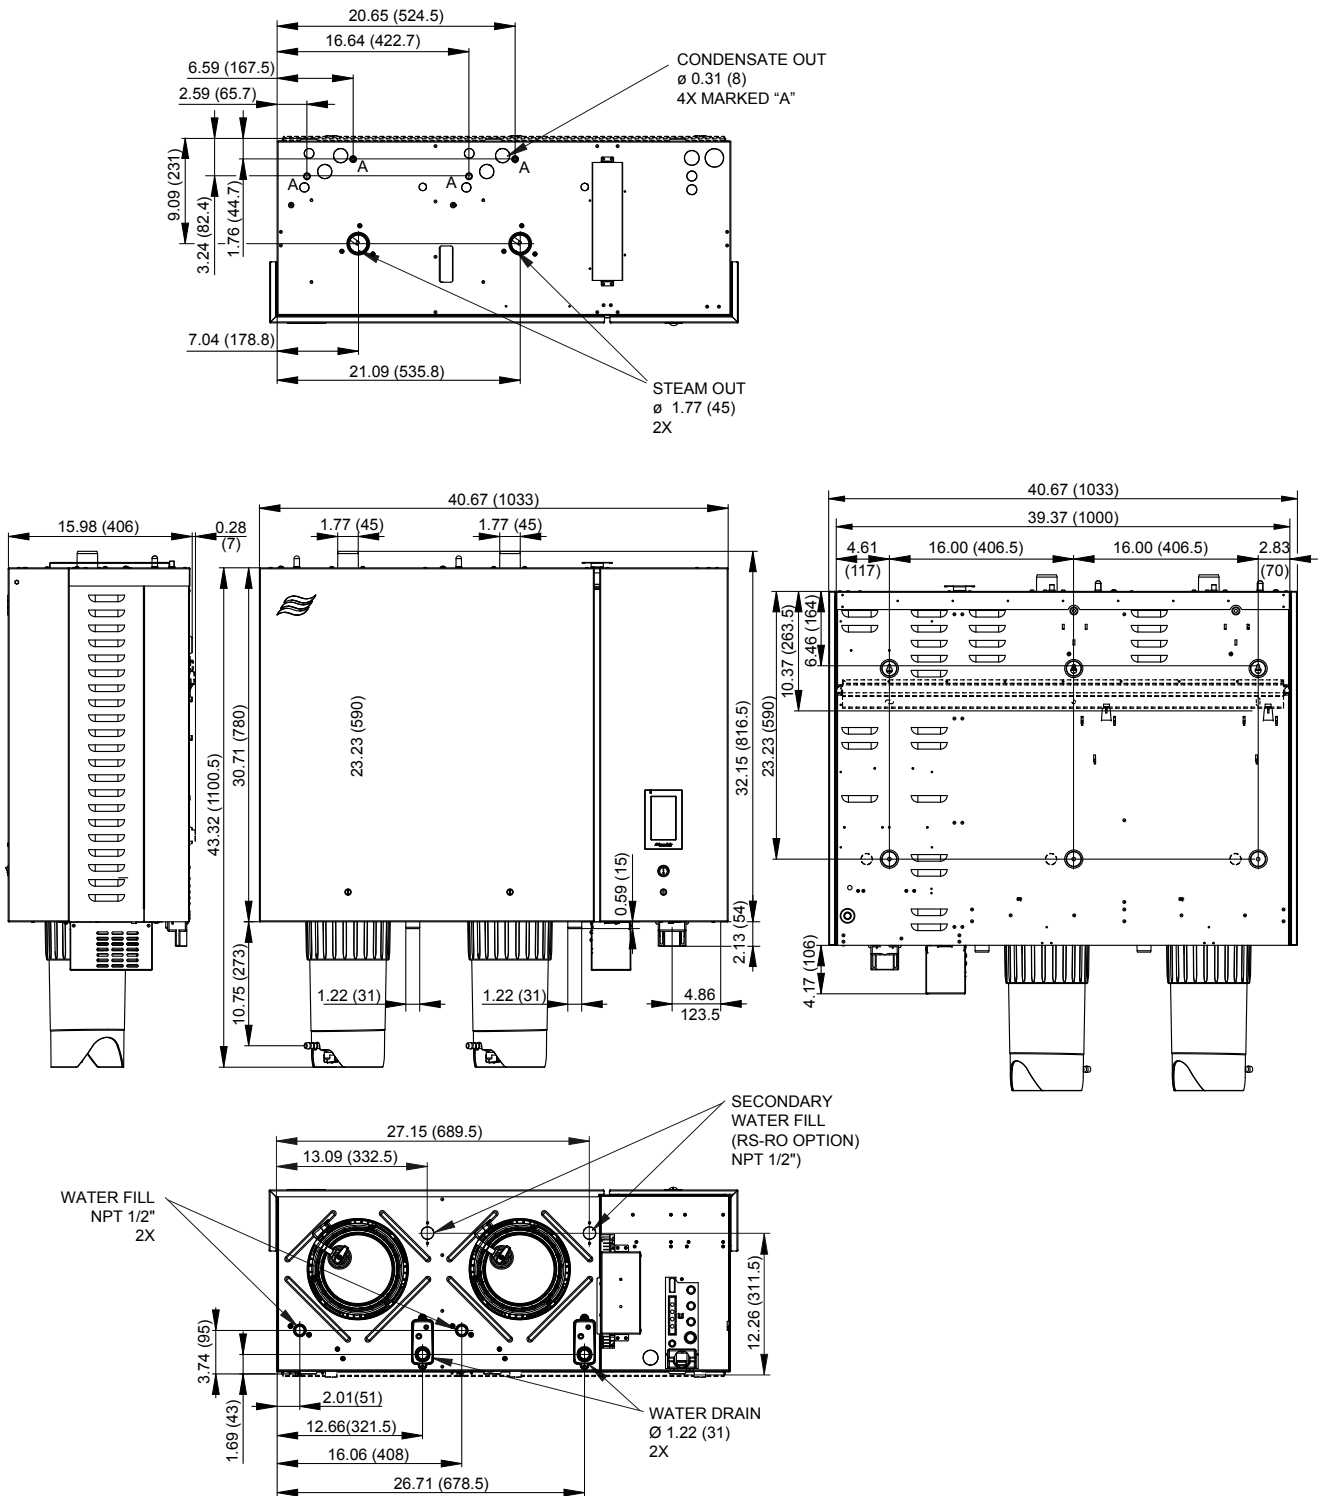


Fig. 32: Unit dimensions unit "Large" - dimensions in Inch (mm)


Notes



Notes

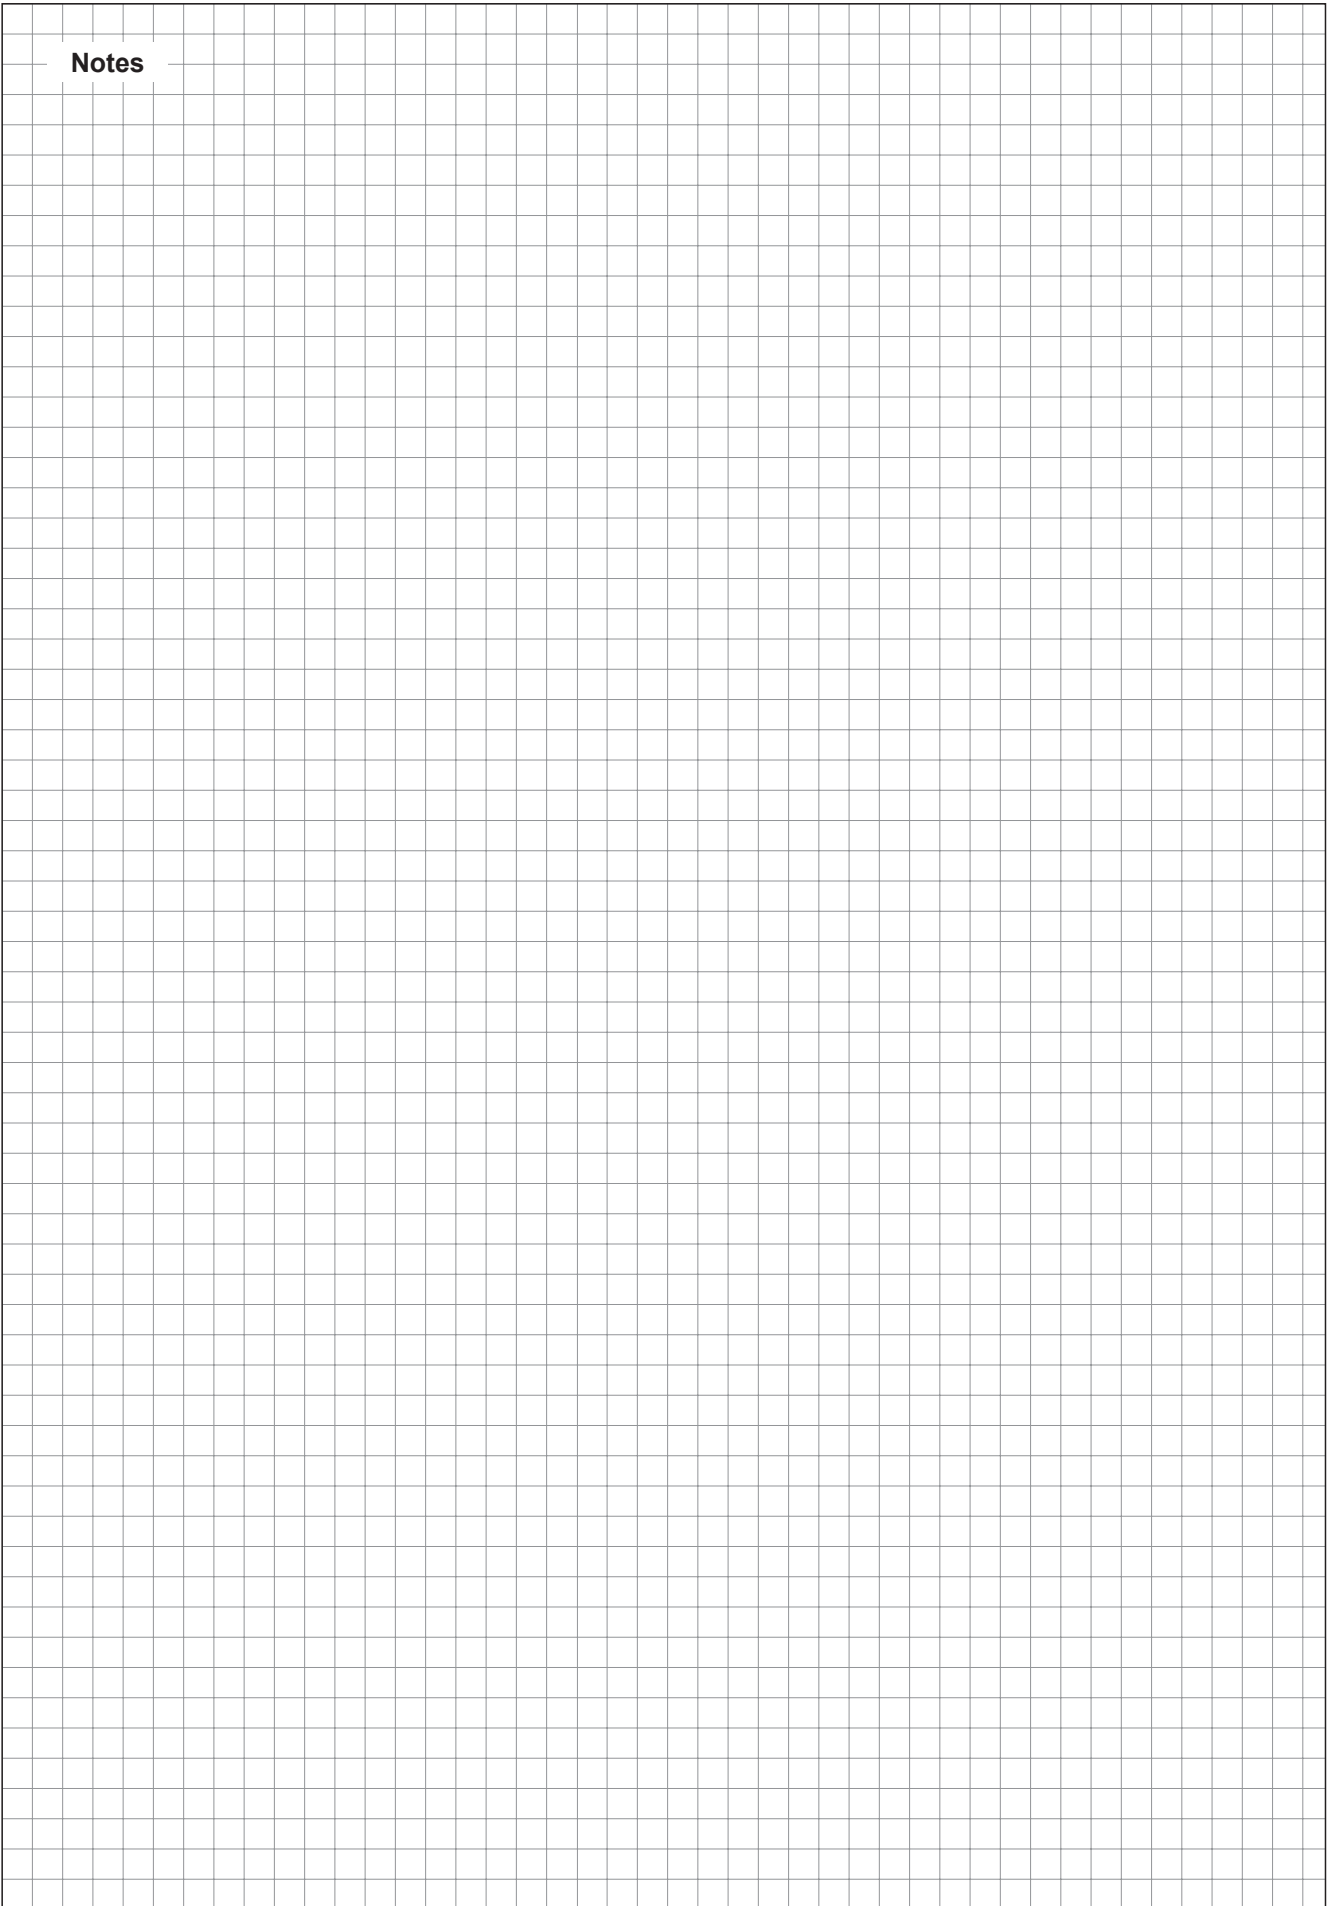

Notes

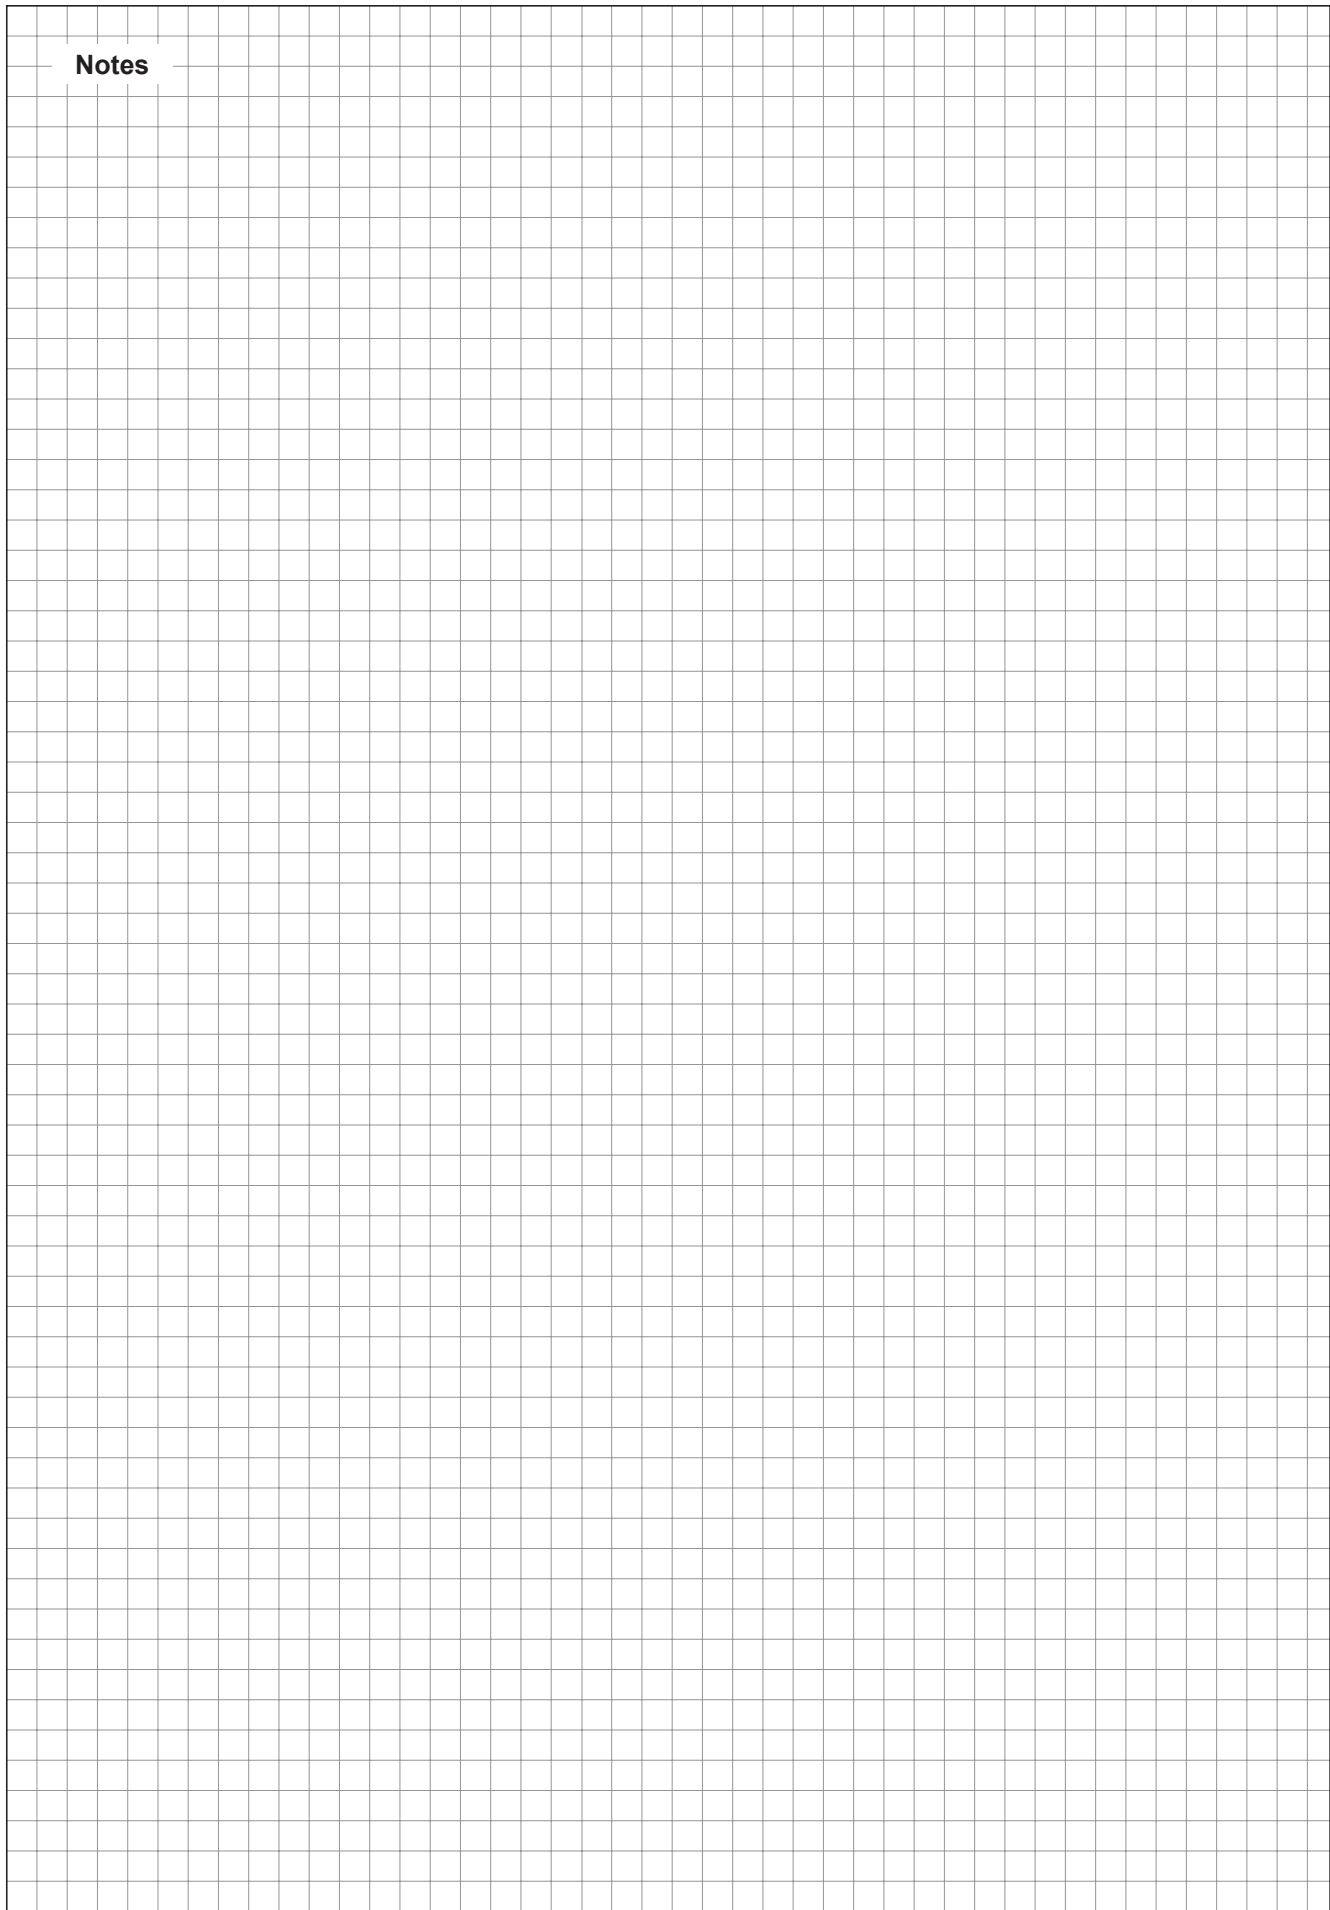

Warranty

Condair Inc. or Condair Ltd. (depending on the entity that supplied the product, and hereinafter collectively referred to as CONDAIR) warrant for a period of two years after installation or 30 months from the manufacturer's ship date, whichever date is earlier, that CONDAIR's manufactured and assembled products, not otherwise expressly warranted, are free from defects in materials and workmanship. Notwithstanding the foregoing, the products listed below have an alternate warranty period:

- GS/GSTC Series heat exchanger(s) are warranted to be free from defects in materials and workmanship for a period of 3 years from installation or 40 months from the manufacturer's ship date, whichever is earlier.
- SAM-e Short Absorption Manifolds, except for the coupling seals, are warranted to be free from defects in materials and workmanship for a total period of 10 years from the manufacturer's ship date.
- Condair RH Connect and Condair RH Classic humidifiers are warranted to be free from defects in materials and workmanship for a period of 5 years from the manufacturer's ship date.
- Spare Parts used for repairs are warranted for the balance of the term of the warranty on the original humidifier or 90 days, whichever is longer.
- No warranty is made against corrosion, deterioration, or suitability of substituted materials used as a result of compliance with government regulations.

CONDAIR's obligations and liabilities under this warranty are limited to furnishing replacement parts to the customer, F.O.B. CONDAIR's factory. The replacement parts are warranted for the balance of the term of the warranty on the original humidifier or 90 days, whichever is longer. Procedure:

1. Customer Requests Warranty as per instructions on the CONDAIR Warranty Form.
2. CONDAIR reviews the warranty claim and will respond in one of two ways:
 - a. Warranty Accepted – Replacement Part or credit granted.
 - b. Warranty Declined – Response with justification will be provided to the customer.
3. In some cases, CONDAIR may request the part to be returned, freight prepaid by the customer, as part of the warranty acceptance or warranty determination process. Some reasons include:
 - a. Part must be analyzed to determine the root cause of failure.
 - b. Part must be returned to the supplier for claim/investigation.

When parts are requested to be returned, replacement parts will be sent by CONDAIR to the customer against an invoice from CONDAIR paid by the customer. The cost of the replacement parts will be reimbursed to the customer with a credit note after the parts are received and analyzed by CONDAIR, if the warranty is accepted.

The warranties set forth herein are in lieu of all other warranties expressed or implied by law. No liability whatsoever shall be attached to CONDAIR until said products have been paid for in full and then said liability shall be limited to the original purchase price for the product. Any further warranty, with the exception of a purchased extended warranty described below, must be in writing, and signed by an officer of CONDAIR.

CONDAIR makes no warranty and assumes no liability unless the equipment is installed in strict accordance with the installation manual in effect at the date of purchase, and by properly qualified and licensed professionals capable of installing such equipment.

CONDAIR makes no warranty and assumes no liability whatsoever for consequential damage or damage resulting directly from misapplication, incorrect sizing, or lack of proper maintenance of the equipment.

CONDAIR makes no warranty and assumes no liability whatsoever for damage to the products, humidifier, supply lines, drain lines, steam distribution systems, or the building as a whole caused by freezing.

CONDAIR reserves the right to change the design, specifications, and performance criteria of its products without notice or obligation.

Extended Warranty

Extended warranties are available to purchase under the conditions listed above. Extended warranties must be purchased at the time of the original equipment order.



www.condairparts.com

Buy authentic Condair
parts factory direct.

Would you recommend Condair?
Take our two question survey.



U.S.A.
1021 6th Street
Racine, WI 53403

CANADA
2740 Fenton Road
Ottawa, Ontario K1T 3T7

TEL: 1.866.667.8321
EMAIL: na.info@condair.com
WEBSITE: www.condair.com

