


Sicherheitshinweis

- Die Montagearbeiten dürfen nur durch eine ausgewiesene Fachperson ausgeführt werden, die mit dem Condair RO-E(+) Reinwassersystem vertraut ist. Die Überwachung der Qualifikation ist Sache des Kunden.
- Beachten Sie unbedingt die Sicherheitshinweise und Informationen in der Montageanleitung und der Betriebsanleitung zum Condair RO-E(+) Reinwassersystem.
- Steckkupplungen, Schläuche und Rohre, die aus Steckkupplungen rausgenommen wurden, müssen auf Beschädigungen und Abnutzung geprüft und ggf. ersetzt werden, um Leckagen zu vermeiden. Ziehen Sie beim Lösen der Verbindung, mithilfe des Lösewerkzeugs, den Lösering der Steckkupplung immer bis ganz nach hinten, um Beschädigungen an den Steckkupplungen und Schläuchen zu vermeiden.

Installation

1. Schalten Sie das Condair RO-E(+) Reinwassersystem aus und trennen Sie es vom Stromnetz.
2. Schliessen Sie das Absperrventil in der Speisewasserzuleitung.
3. Lösen Sie den Schlauch [1] von der Steckkupplung [2].
4. Demontieren Sie die Steckkupplungen [2] und [3].
5. Schrauben Sie das Teil [4] des dreiteiligen Doppelnippels mit einem Imbusschlüssel in die Reduzierung [5].
6. Montieren Sie das Manometer auf das Teil [4] und richten Sie es gemäss der folgenden Abbildung aus.

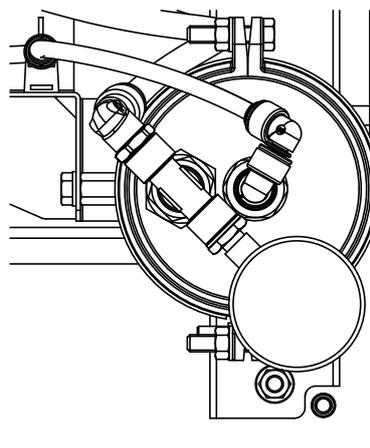

7. Schliessen Sie den Schlauch [1] wieder an der Steckkupplung [7] an. Prüfen Sie den Schlauch auf Beschädigungen und Abnutzung und ersetzen Sie ihn wenn nötig.
8. Öffnen Sie das Absperrventil in der Speisewasserzuleitung.
9. Nehmen Sie das Condair RO-E(+) Reinwassersystem wieder in Betrieb.
10. Prüfen Sie das gesamte System auf Leckagen.
11. Prüfen Sie, ob das Manometer korrekt funktioniert, indem Sie den Wert des Manometers mit dem Wert auf der Steuersoftware vergleichen.

Security note

- The installation must be carried out by qualified personnel who are familiar with the Condair RO-E(+) pure water system. It is the owner's responsibility to verify proper qualification of the personnel.
- Observe the safety notes and the information given in the Condair RO-E(+) pure water system installation manual and operation manual.
- Plug-in couplings, hoses and pipes that have been removed from plug-in couplings must be checked for damage and wear and replaced if necessary to prevent leaks. When releasing the connection using the release tool, always pull the release ring of the plug-in coupling all the way back to prevent damage to the plug-in couplings and hoses.

Installation

1. Switch off the Condair RO-E(+) pure water system and disconnect it from the mains.
2. Close the shut-off valve in the feed water supply line.
3. Detach the hose [1] from the plug-in coupling [2].
4. Remove the plug-in couplings [2] and [3].
5. Screw the part [4] of the three-part double nipple into the reduction [5] using an Allen key.
6. Mount the pressure gauge on the part [4] and align it as shown in the following illustration.

7. Reconnect the hose [1] to the plug-in coupling [7]. Check the hose for damage and wear and replace it if necessary.
8. Open the shut-off valve in the feed water supply line.
9. Put the Condair RO-E(+) pure water system back into operation.
10. Check the entire system for leaks.
11. Check whether the pressure gauge is working correctly by comparing the value on the pressure gauge with the value on the control software.

